

## Compact Power Line Shelves

### Dual I<sup>2</sup>C Shelves for the GP100 rectifier

Model: J2014001L601



## Features

- Mounts into standard 19" EIA-310-D racks
- Isolated output feed may be grounded at either polarity
- +5V standby power isolated from the main output
- Adjustable mounting ears for flush or set back positions.
- Supports hot-swapping of modules
- Accommodates mechanical latching into the slot
- Communicates via PMBus™ compliant dual, redundant I<sup>2</sup>C
- Designed to pass Zone 4 earthquake requirements when integrated into a seismic rated system or rack
- CUR\*\*† recognized
- CB report
- CE Mark§
- Shock & Vibration: Meets IPC 9562 Class II standards

## Purpose

The J2014001L601 shelf provides the supporting enclosure for the GP100H3 family of 6000W 'Global Platform' rectifiers supporting dual-redundant I<sup>2</sup>C communications. Designed to be mounted into standard 19" enclosures, the shelf comes with adjustable mounting ears that provide either flush-front or further-forward positioned arrangements. The rugged enclosure passes Zone 4 earthquake rating.

\* UL is a registered trademark of Underwriters Laboratories, Inc.

† CSA is a registered trademark of Canadian Standards Association.

§ This product is intended for integration into end-user equipment. All CE marking procedures of end-user equipment should be followed. (The CE mark is placed on selected products.)

\*\* ISO is a registered trademark of the International Organization of Standards



Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

## Absolute Maximum Ratings

Stresses in excess of the absolute maximum ratings can cause permanent damage to the device. These are absolute stress ratings only; functional operation of the device is not implied at these or any other conditions in excess of those given in the operations sections of the data sheet. Exposure to absolute maximum ratings for extended periods can adversely affect the device reliability.

| Parameter   | Symbol           | Min | Max             | Unit            |
|---|------------------|-----|-----------------|-----------------|
| Input Voltage: Continuous                                   | V <sub>IN</sub>  | 0   | 600             | V <sub>AC</sub> |
| Operating Ambient Temperature                               | T <sub>A</sub>   | -10 | 75 <sup>1</sup> | °C              |
| Storage Temperature   | T <sub>stg</sub> | -40 | 85              | °C              |
| I/O Isolation voltage to Frame (100% factory Hi-Pot tested) |                  |     | 2087            | V <sub>AC</sub> |

## Electrical Specifications

Unless otherwise indicated, specifications apply over all operating input voltage, load, and temperature conditions.

| INPUT   |                       |      |          |     |  |
|---|-----------------------|------|----------|-----|--|
| Parameter                                       | Symbol                | Min  | Typ      | Max | Unit   |
| Operational Range                               | V <sub>IN</sub>       | 320  | 380/480  | 530 | V <sub>AC</sub>                              |
| Frequency Range                                 | F <sub>IN</sub>       | 47   | 50/60    | 63  | Hz   |
| AC Input Current, (3Φ - all phases operational) | I <sub>IN</sub>       |      |          | 15  | A <sub>AC</sub>                              |
| Recommended AC Breaker Size                     |                       |      | 10<br>15 |     | A <sub>AC</sub>                              |
|   |                       |      |          |     | @ 480V <sub>AC</sub><br>@ 380V <sub>AC</sub> |
| Leakage Current (per Φ, 530VAC, 60Hz)           | I <sub>IN</sub>       |      | 2.5      | 3.5 | mA   |
| Isolation (per EN60950)                         |                       |      |          |     |  |
|   | Input – Output        | 3000 |          |     | V <sub>AC</sub>                              |
|   | Input-Chassis/Signals | 2000 |          |     | V <sub>AC</sub>                              |

| MAIN OUTPUT                             |                  |     |       |        |                 |
|---|------------------|-----|-------|--------|-----------------|
| Parameter                               | Symbol           | Min | Typ   | Max    | Unit            |
| Output Power                            | W                | 0   | -     | 12,000 | W               |
| Factory set default set point           | V                |     | 54/48 |        | V <sub>DC</sub> |
| Max output current                      | I <sub>OUT</sub> |     |       | 250    | A <sub>DC</sub> |
| Isolation Output/frame – other circuits | V                | 100 |       |        | V <sub>DC</sub> |

| AUXILIARY OUTPUT       |                  |     |     |     |                 |
|------------------------|------------------|-----|-----|-----|-----------------|
| Parameter              | Symbol           | Min | Typ | Max | Unit            |
| Set point              | V <sub>OUT</sub> |     | 5.0 |     | V <sub>DC</sub> |
| Output current         | I <sub>OUT</sub> | 0   |     | 4   | A <sub>DC</sub> |
| Isolation Output/Frame | V                | 50  |     |     | V <sub>DC</sub> |
| Output/Main output     | V                | 50  |     |     | V <sub>DC</sub> |

<sup>1</sup> See the derating guidelines published in the rectifier data sheet

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

**General Specifications**

| Parameter                          | Min  | Typ       | Max | Units   | Notes  |
|------------------------------------|--|-----------|-----|---------|--|
| Reliability                        |  | TBD       |     | Hrs     | Full load, 25°C ; MTBF per SR232 Reliability protection for electronic equipment, issue 2, method I, case III, |
| Service Life                       |  | 10        |     | Yrs     | Full load, excluding fans  |
| Unpacked Weight                    |  | 4.76/10.5 |     | Kgs/Lbs |  |
| Packed Weight                      |  | 5.67/12.5 |     | Kgs/Lbs |  |
| <b>Safety/Standards Compliance</b> |  |           |     |         |  |
| Safety Standards                   | UL60950-1, CAN/CSA C22.2 No 60950-1, EN60950-1 |           |     |         |  |
| Certification Marks                | CE mark, UL Recognized (Canada and U.S.)       |           |     |         |  |

**Environmental Specifications**

| Parameter                        | Min | Typ | Max | Units | Notes  |
|----------------------------------|-----|-----|-----|-------|--|
| Ambient Temperature              |     |     |     |       |  |
| Operating                        | -10 |     | 55  | °C    |  |
| Storage                          | -40 |     | 85  | °C    |  |
| Humidity                         |     |     |     |       |  |
| Operating                        | 5   |     | 95  | %     | Relative humidity, non-condensing  |
| Storage                          | 5   |     | 95  |       |  |
| Shock and Vibration acceleration |     |     | 6   | Grms  | NEBS GR-63-CORE, Level 3, 20 -2000Hz, min 30 minutes   |
| Earthquake Rating                | 4   |     |     | Zone  | NEBS GR-63-CORE, all floors, Seismic Zone 4 Designed and tested to meet NEBS specifications. |


**EMC<sup>2</sup>**

| Parameter           | Criteria             | Standard   | Level | Test                        |
|---------------------|----------------------|--|-------|-----------------------------|
| Conducted emissions | AC input             | EN55022, FCC Docket 20780 part 15, subpart J<br>EN61000-3-2<br>Meets Telcordia GR1089-CORE by a 6dB margin | A     | 0.15 – 30MHz<br>0 – 2 KHz   |
| Radiated emissions  |                      | EN55022 by a 6dB margin  | A     | 30 – 10000MHz               |
| Lightning surge     | AC input             | EN61000-4-5, Level 4, 1.2/50µs – error free  | A     | 4kV, common mode            |
|                     |                      |  | A     | 2kV, differential mode      |
|                     |                      | ANSI C62.41 - damage free  | A3    | 6kV, common & differential  |
| Fast transients     | Input immunity       | EN61000-4-4, Level 3   | B     | 5/50ns, 2kV (common mode)   |
| Conducted RF fields | Enclosure immunity   | EN61000-4-6, Level 3   | A     | 130dBµV, 0.15-80MHz, 80% AM |
| Radiated RF fields  |                      | EN61000-4-3, Level 3   | A     | 10V/m, 80-1000MHz, 80% AM   |
|                     |                      | ENV 50140  | A     |                             |
| ESD                 | AC input & DC output | EN61000-4-2, Level 3   | B     | 6kV contact, 8kV air        |

<sup>2</sup> The shelf design does not preclude the embedded module from meeting the EMC requirements specified in this section.



Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

**Shelf terminations**

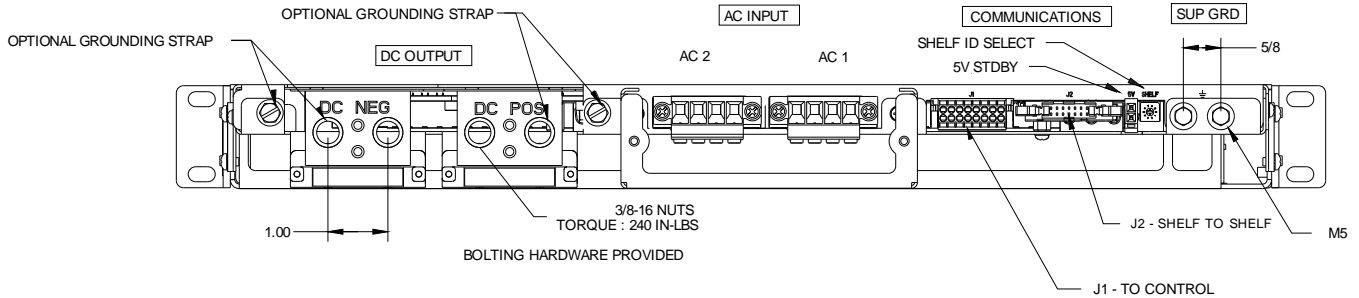

**Input**

  
Wire size: 12 (10A) – 10 (15) AWG  
 Torque: 7 IN-LBS  
 Min strip length: 3/8 inch

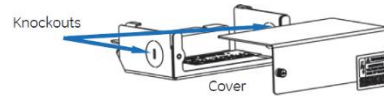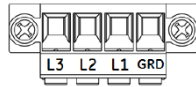


**Communications: J1 Connector [dual-row, 3.5mm pitch header]**

Connector: Phoenix Contact part # 1787072  
 plug-in mate: Phoenix Contact part # 1790548

 
| Pin | Signal     | Pin | Signal        |
|-----|------------|-----|---------------|
| 1   | MOD_PRES_1 | 9   | MOD_PRES_2    |
| 2   | PFW_1      | 10  | PFW_2         |
| 3   | SCL_0      | 11  | SDA_0         |
| 4   | Alert#_0   | 12  | Vprog         |
| 5   | SCL_1      | 13  | SDA_1         |
| 6   | Alert#_1   | 14  | Fault_1       |
| 7   | Fault_2    | 15  | +5V           |
| 8   | Logic_GRD  | 16  | Remote ON/OFF |

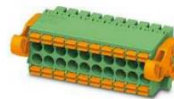

With Lock & Release levers for locking and releasing

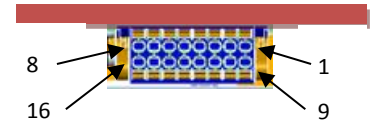

single wire jumper – between Remote ON/OFF and Logic\_GRD

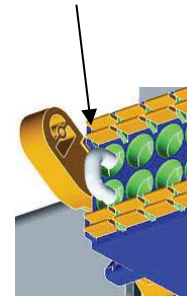

Operation without I2C communications: A Jumper shorting Remote ON/OFF- (turn ON) to Logic\_GRD is inserted into the J1 signal connector by the factory.

Remove this jumper prior to inserting the J1 connector.

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

## Communication Signals


### Shelf-to shelf J2 Connector [dual row, header]

This connector is used to interconnect communications lines between shelves. Up to eight shelves (16 power supplies) can be inter connected in this fashion with individual addressing assignments.

Connector: header: TE 5102159-2  
 latch: TE 102320-1

plug-in mate: ribbon cable individual wires  
 header: TE 1658621-2 TE 102387-2  
 retainer: TE 499252-9  
 pin: TE 6-87756-8

| Pin | Signal    | Pin | Signal        |
|-----|-----------|-----|---------------|
| 1   | SCL_0     | 8   | SDA_1         |
| 2   | SDA_0     | 9   | Isolation n/c |
| 3   | Alert#_0  | 10  | Isolation n/c |
| 4   | 5VA       | 11  | 8V_INT        |
| 5   | Logic_GRD | 12  | Ishare        |
| 6   | Alert#_1  | 13  | spare         |
| 7   | SCL_1     | 14  | spare         |

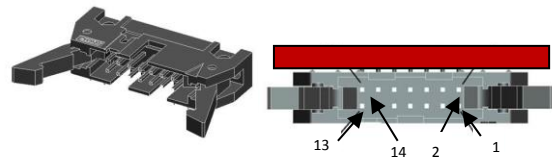

An interconnect ribbon cable is available for two shelves stacked on top of each other (see parts list for information).

Notes: (For all other signals refer to the rectifier data sheet)

8V\_INT-x, and Ishare-x are referenced to power output Vout(-). All other signals are referenced to Logic\_GRD.

### Unit ID:

For communications, unit\_ID is configured by a resistor at the power supply connector of each slot.

| Unit_ID | Voltage level | Rs (± 0.1%) |
|---------|---------------|-------------|
| Invalid | 3.30          |             |
| 6       | 1.35          | 7.15k       |
| 7       | 1.02          | 4.99k       |

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

**Rack\_ID:**

Up to 8 combinations are selectable. The Rack\_ID resistor network is referenced to Logic\_GRD.

A voltage divider between 5V<sub>DC</sub> and Logic\_GRD configures Rack\_ID. A switch between each R<sub>S</sub> value changes the Rack\_ID level according to the table below.

DRD RIGHT ANGLE  
PC MOUNT

Part (or equivalent): TE 1825008-2  
 Comcode: 408524788  
 - with ground terminal

viewed  
from bottom of switch

| Rack_ID | Voltage level |
|---------|---------------|
| 1       | 3.30          |
| 2       | 1.08          |
| 3       | 1.91          |
| 4       | 0.59          |
| 5       | 1.67          |
| 6       | 0.85          |
| 7       | 1.44          |
| 8       | 2.87          |


Resistor tolerance: ± 0.1%

- **Address detection:** The **Slot\_ID pin** must be shorted to **Vout(-)** on each rectifier connector in order to deliver output power. This connection provides a second interlock feature.
- **Pull-up resistors:** 10kΩ pull-up resistors are provided between each signal pin; Clock, Data, Fault, PFW, and +3.3V<sup>3</sup> for customers who would desire these components within the shelf.
- **Always ON:** The shelf is shipped from the factory with a jumper between ENABLE and Logic\_GRD of the J1 signal connector. This assures that the rectifiers would turn ON with output power Enabled if the shelf is not integrated with an external cable set by the customer.

<sup>3</sup> The 3.3V is generated by two diode drops below +5V.

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601


- Default Vout, voltage programmability:** A voltage level, Vprog referenced to Logic\_GRD, configures the default output voltage setting of the power supply. The graph/schematic below shows the relationship between Vprog and output voltage, and the internally set configuration via the resistor divider, setting the output of the power supplies to 48Vdc, (Vprog = 0.587Vdc). The Vprog signal pins of the two rectifiers are paralleled in the shelf. The Vprog pin is accessible via the J1 connector so the default output voltage setting can be changed by the user. Note that this hardware configured default/adjust setting is valid only as long as the output of the rectifiers were not changed via an I<sup>2</sup>C command. Firmware commands over-ride the hardware based Vprog level. An AC voltage interruption that is long enough to decay the internal V<sub>CC</sub> supplied to the DSP controlling the dc-dc converter of the rectifier, resets Vout to its hardware (Vprog) set default level. The rectifier will respond to the Vprog set output voltage instructions until a firmware based output voltage adjustment is received.

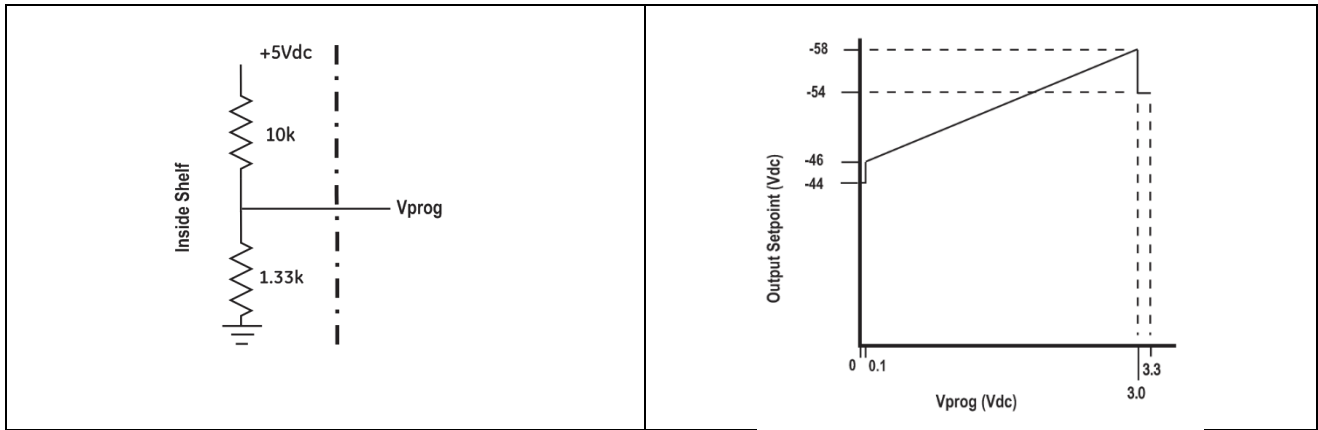

- 8V\_INT:** This signal pin is interconnected between the two rectifier slots. It is also available on the J2 shelf-to-shelf connector for reverse bias capability among shelves. The reference for this signal is Vout(-).
- Ishare:** This signal pin is interconnected between the two rectifier slots. It is also available on the J2 shelf-to-shelf connector for paralleling capability of rectifiers among shelves. The reference for this signal is Vout(-).


**Rectifier Installation**

Caution: The rectifier latch is not a carrying handle  
 To release the latch, press the dark gray area  
 Slide in the rectifier while the latch is in the open position  
 As resistance is felt when inserting, slowly close the latch to complete the insertion. When the latch is locked the rectifier is positively engaged in its housing.  
 The rectifier can get extracted or inserted while the bus is hot.  
 The rectifier is keyed to ensure that it gets inserted into the correct shelf. Do not force mating beyond normally anticipated resistance in order to avoid permanent damage.

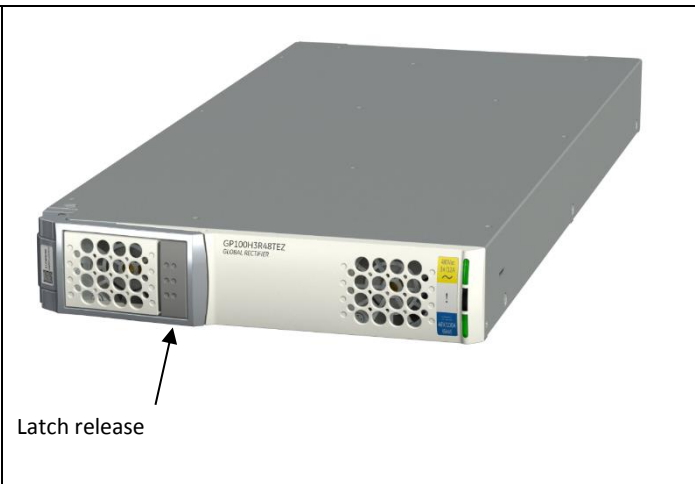

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601


### Shelf keying

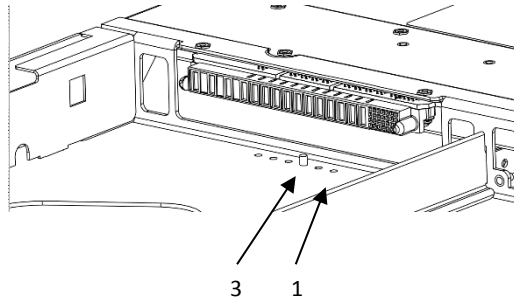

The key is a pin positioned in one of six holes on the bottom of the shelf

|               |        |      | One indicates slot opening |   |   |   |   |   |
|---------------|--------|------|----------------------------|---|---|---|---|---|
| Communication | Vin    | Vout | 1                          | 2 | 3 | 4 | 5 | 6 |
| I2C           | 3Φ 480 | 48   | 1                          |   |   |   |   |   |

Below is a view of the rectifier slot filler configured for slot 1

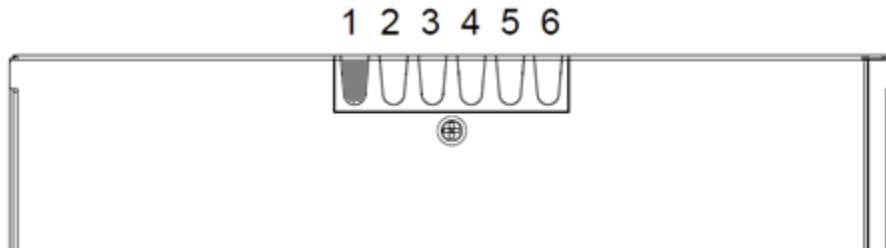


**Rectifier Keying - Bottom View**



Compact Power Line Shelves  
 Dual I<sup>2</sup>C shelves for the GP100 rectifier  
 Model: J2014001L601

Package Outline

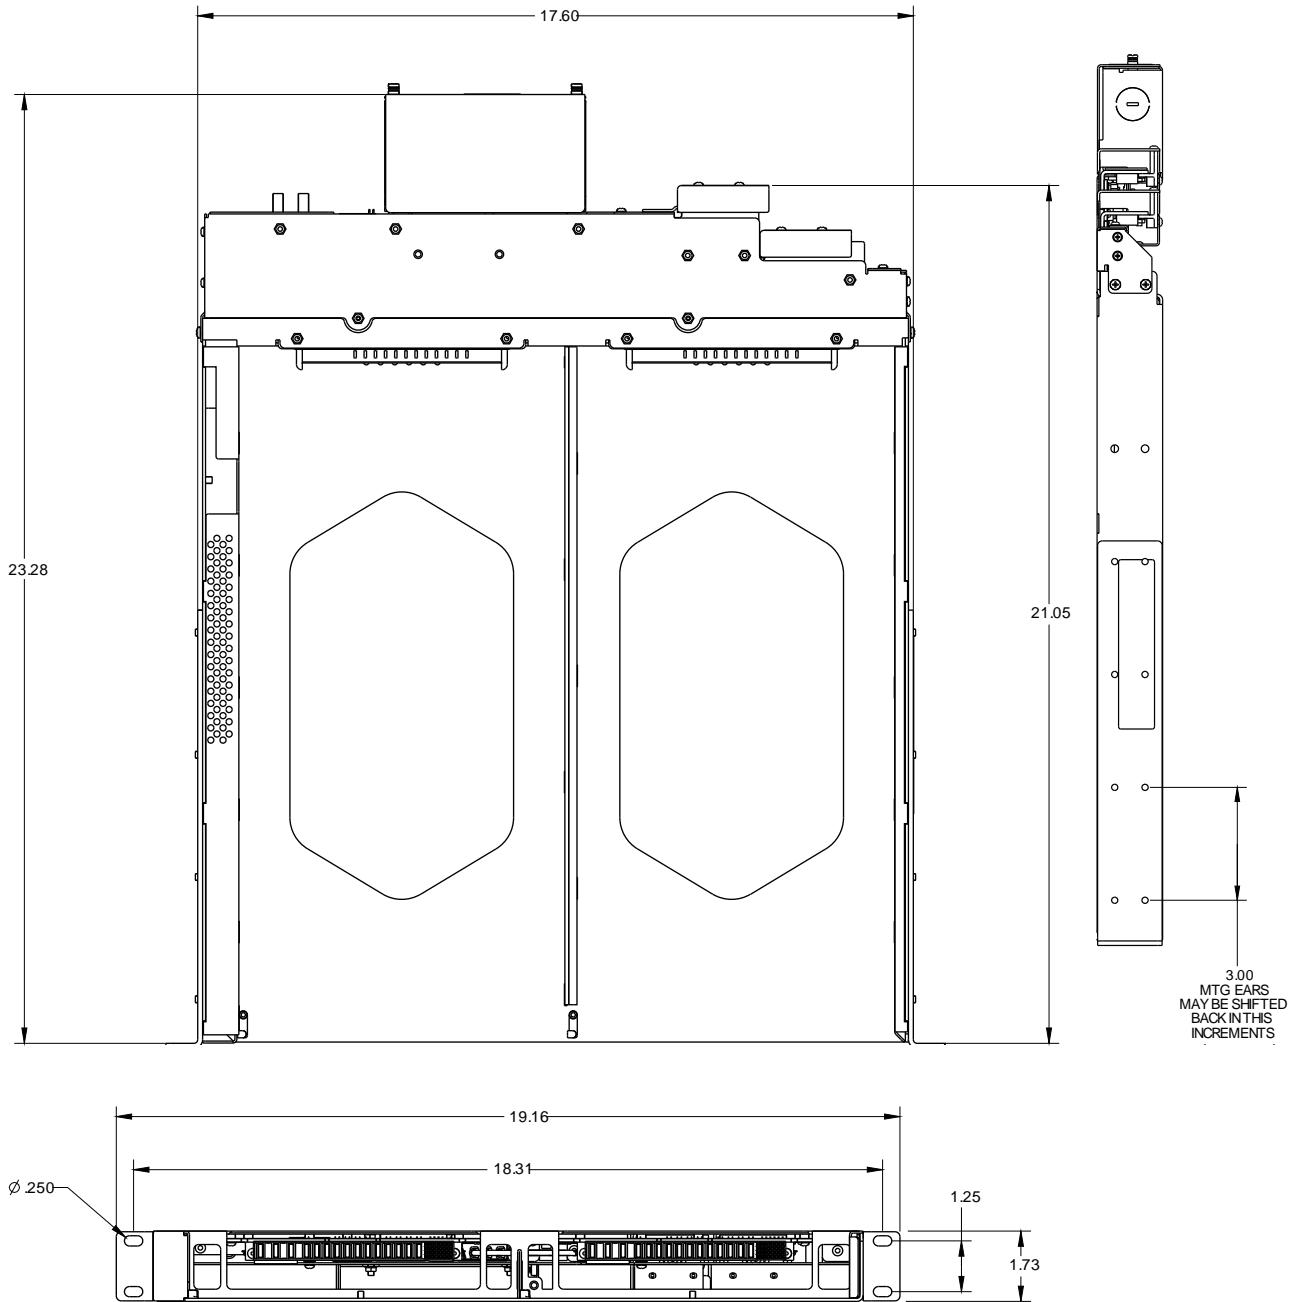




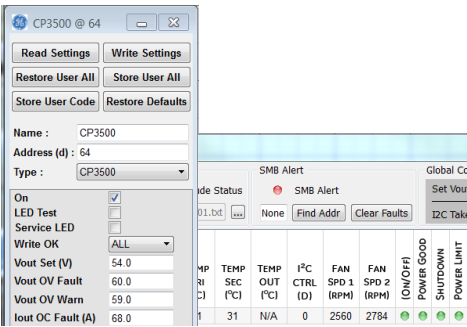

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
 Model: J2014001L601

**Ordering Information**

| Part Number        | Description   | Comcode     |
|--------------------|---|-------------|
| <i>Shelves</i>     |   |             |
| J2014001L601       | GP100, 3Φ-480, dual, redundant, I <sup>2</sup> C shelf configured for 48Vdc output, configured for slot 1, hardware and shelf interconnect included | 150041782   |
| J2014001L601A      | GP100, 3Φ-480, dual, redundant, I <sup>2</sup> C shelf configured for 54Vdc output, configured for slot 1, hardware and shelf interconnect included | 150049293   |
| <i>Accessories</i> |   |             |
|                    | GP100 Slot Filler   | 150045141   |
|                    | Inter-shelf cable set for connecting J2 signals between shelves   | CC848848952 |
|                    | 1u_CPL shelf Interface Board  | 150045498   |
|                    | Cable interface from J1 of the shelf to the CPL Interface Board   | 850050921   |
|                    | USB Isolated Interface Adapter  | 150036482   |

Compact Power Line Shelves  
 Dual I<sup>2</sup>C shelves for the GP100 rectifier  
 Model: J2014001L601

Accessories
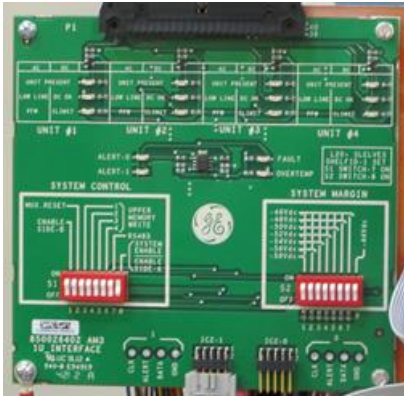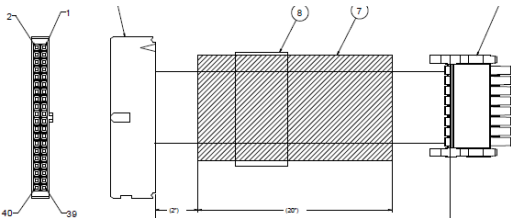
| Item  | Description   | Part number          |
|---|---|----------------------|
|    | <p>1u_CP3500_shelf_interface board. This debug tool can be used to evaluate the performance of a set of rectifiers inserted into this shelf. The board provides terminations to two independent Isolated Adaptors that can be connected to either of the two i2c lines. Additionally, connection points are provided for interfacing to the four signals of each i2c line for monitoring the signals. The input interface is a standard IEC 320 C20 type socket. Outputs are connected via standard 0.25 fast-ons.</p>  | <p>150045498</p>     |
|   | <p>Interface cable between the J1 signal connector of the shelf and the 40 pin mating connector of the interface board above.</p>   | <p>850050921</p>     |
|  | <p>Isolated Interface Adapter Kit – interface between a USB port and the I<sup>2</sup>C connector on the rectifier interface board. Includes a cable set to the PC and to the 1u_CP3500_interface board above.</p>  | <p>150036482</p>     |
|  | <p>The site below downloads the GE Digital Power Insight™ software tools, including the pro_GUI. When the download is complete, icons for the various utilities will appear on the desktop. Click on pro_GUI.exe to start the program after the download is complete.</p> <p><a href="http://www.geindustrial.com/products/embedded-power">http://www.geindustrial.com/products/embedded-power</a></p> <p>Graphical User Interface Manual; The GUI download created a directory  In that directory start the DPI_manual.pdf file.</p> | <p>Free download</p> |

The GE Digital Power Insight™ software tool exercises the various commands and functions available via the PMBus™ interface of the power supply.

Additionally, two independent GUIs, representing two independent ‘system controllers’, can be connected to the two independent, multiplexed i<sup>2</sup>C lines in order to demonstrate the redundant communications features of the platform. The GUI displays and controls which i<sup>2</sup>C line is in control. The GUIs can also be set up such that control is shifted automatically from one controller to the other, executed at a pre-set time interval.

Another useful feature of the GUI is the automated polling feature that records all time stamped state changes automatically. The power system can be monitored for an extended period of time and if any operational state changed it will be recorded for further analysis.

## Compact Power Line Shelves

Dual I<sup>2</sup>C shelves for the GP100 rectifier

Model: J2014001L601

## Safety

### Product Labeling

Follow all warnings and instructions marked on the product. Some of the safety symbols used with the CP3500 rectifier and this shelf may include the following. They may also be accompanied by instructions:

**Mounting and Installation**

- This product shall be installed in compliance with mounting requirements for the ultimate application.
- This product must be installed, serviced, and operated only by skilled and qualified personnel who have the necessary knowledge and practical experience with electrical equipment and who understand the hazards that can arise when working on this type of equipment. This product is intended for use in a Restricted Access Location.
- This equipment is to be used in controlled environments (an area where the humidity is maintained at levels that cannot cause condensation on the equipment, the contaminating dust is controlled, and the steady-state ambient temperature is within the range specified).
- This equipment has been evaluated for use in a continuous ambient temperature of up to 55°C and the application environment should not exceed 55°C.
- The CE mark if provided on the product is applied to show conformance to the requirements outlined in the European Union's Low Voltage Directive {2006/95/EC} and EMC Directive {2004/108/EC}.
- This shelf has been evaluated for hot swapping.
- A separate protective Earthing terminal is provided at the rear of the shelf
  - the building installation shall provide a means for connection to protective earth; and
  - the equipment is to be connected to that means; and
  - a SERVICE PERSON shall check whether or not the socket-outlet from which the equipment is to be powered provides a connection to the building protective earth. If not, the SERVICE PERSON shall arrange for the installation of a PROTECTIVE EARTHING CONDUCTOR from the separate protective Earthing terminal to the protective earth wire in the building.

## Compact Power Line Shelves

Dual I<sup>2</sup>C shelves for the GP100 rectifier

Model: J2014001L601

## Output Connections

- All field wiring should comply with the U.S. National Electrical Code (NEC) and/or applicable local codes/standards.
- Routing of the DC output cables should guarantee that cables are not in contact with sources of heat and surfaces that may damage the cable insulation.
- The DC output is not provided with a fuse or circuit breaker suitable for branch circuit protection. Therefore, the power shelf should be mounted in the same rack or cabinet as the equipment being powered. Use interconnecting power cables suitable for the application and sized to carry the rated output current. The interconnecting cables should be capable of carrying the overload current and short circuit current without damage or risk of fire.
- The output for the system is SELV and has available power greater than 240VA.
- Insulation on output field-wired conductors should be rated no less than 90°C. Wiring internal to enclosed equipment cabinets should be rated at 105°C (minimum). The provided DC output cords (red and black wires) are rated for 105°C.
- Before opening the insulating cover to gain access to load and ground connections, ensure all power supplies are disconnected from the AC MAINS.

## AC Input Connections

- This shelf is configured with primary internal wiring and Molex connectors, rated for internal factory wiring only. The Molex connector is not UL Recognized for direct connection to the AC mains. The internal wiring is not UL recognized to be directly accessible by a user. Consideration should be taken on the end product's Listing to comply with NEC requirement for AC mains installations.
- AC branch circuits to this equipment must be protected with fuses or circuit breakers sized as required by the U.S. National Electric Code (NEC) and/or local codes. Up to four AC mains power cords are required to power the shelf (one for each rectifier). Each power cord should be connected to a separate AC mains branch circuit with an overcurrent protector rated at no more than 30A.
- The power supply mains inlet may be used as the means to provide AC protective earthing.
- An accessible AC disconnect/protection device to remove AC power from the equipment in the event of an emergency must be provided. An accessible socket-outlet/receptacle installed near the equipment is also acceptable as a disconnect.
- The equipment is powered by multiple AC inputs (one per rectifier). Disconnect all AC sources of power before servicing.
- These units are to be used with TN-S power systems only.

## Safety Symbols and Guidelines

Read and understand all instructions before attempting any installation of this product. When installing, operating, or maintaining the J85480S1 Power System, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Such precautions include the following:



This symbol identifies the need to refer to the equipment instructions for important information.



This symbol identifies the presence of hazardous AC or DC voltages or hazardous energy levels. In the context of this product

- The DC output cables contain electrical energy levels capable of causing heating and arcing if shorted to metal objects. Make connections with the power disconnected.
- Hazardous AC voltage and DC electrical energy is contained within the enclosure of the power shelf. No user or field serviceable parts inside.



This symbol is used to identify safety earth ground connection points within the equipment.

Compact Power Line Shelves  
**Dual I<sup>2</sup>C shelves for the GP100 rectifier**  
Model: J2014001L601

### German Safety Guidelines

#### Installationsanleitung

- Alle Ausgänge des Gerätes erfüllen die Anforderungen für SELV nach IEC/EN60950-1.
- Die Ausgänge des Gerätes liegen über den Limits für Energiegefahr nach IEC/EN60950-1 (>240 VA). Das Gerät ist zum Einbau in ein Montage-Rack bestimmt. Siehe Einbaubestimmungen in der Montageanleitung, um eine Gefährdung des Benutzers während der Installation zu vermeiden.

#### **ACHTUNG:**

#### **Hoher Ableitstrom Vor Anschluss an den Versorgungsstromkreis unbedingt Erdungsverbinding herstellen**

- Das Produkt ist zum Gebrauch in einer Umgebungstemperatur von max. 55°C bestimmt.
- Die Gerätestecker des Produktes sind dazu bestimmt, eine sichere Erdung des Gerätes herzustellen.
- Das Produkt ist zum Gebrauch in einer Umgebung mit Verschmutzungsgrad 2 nach IEC/EN60950 bestimmt.
- Die Netzteile des Gerätes können während des Betriebes einzeln ausgetauscht werden (Hot Swapping).
- Das Gerät wurde zusammen mit den Anschlussleitungen (ohne Anschlussstecker) geprüft. Die Installation eines Steckers des jeweiligen Landes, sollte nur durch geschultes Service Personal durchgeführt werden. Als alternative könnte eine Vorinstallation des Steckers bereits bei der Herstellung erfolgt sein.

## Contact Us

For more information, call us at

USA/Canada:

**+1 877 546 3243**, or +1 972 244 9288

Asia-Pacific:

**+86.021.54279977\*808**

Europe, Middle-East and Africa:

**+49.89.878067-280**

**[www.gecriticalpower.com](http://www.gecriticalpower.com)**



GE Critical Power reserves the right to make changes to the product(s) or information contained herein without notice, and no liability is assumed as a result of their use or application. No rights under any patent accompany the sale of any such product(s) or information.