

DEMO MANUAL DC1832A

DESCRIPTION

Demonstration circuit 1832A is a monolithic step-down DC/DC switching regulator featuring the LT3995. The LT3995 is a compact, high efficiency monolithic step-down switching regulator that consumes only 2.7µA of quiescent current. The demo circuit is designed for 3.3V, 3A output from a 4.3V to 60V input. The switching frequency can be programmed either via oscillator resistor or external clock up to 2MHz. To synchronize to an external clock, move JP2 to SYNC and apply the external clock to the SYNC turret. The RT resistor (R5) should be chosen to set the LT3995 internal switching frequency at least 20% below the lowest synchronization input frequency.

Low ripple Burst Mode[®] operation increases the efficiency at the light load while keeping the output ripple below 15mV. The SYNC pin on the demo board is grounded by default by setting JP2 at RT FREQ for low ripple Burst Mode operation. Figure 1 shows the demo board efficiency at 12V input voltage.

The LT3995 is in shutdown when the EN pin is low and active when the pin is high. The threshold of the EN pin is accurate at 1.02V with 60mV of hysteresis. Users can populate R7 and R8 to provide a programmable under



voltage lockout. A low dropout voltage of 500mV is maintained when the input voltage drops below the programmed output voltage. During a short-circuit fault, the LT3995 has current limit foldback to limit the power dissipation.

The demo board has an EMI filter installed. The EMI performance of the demo board at 12V input voltage is shown on Figure 2. The limit in Figure 2 is EN55022 Class B. The figure shows the circuit passes the test with a wide margin. To use the EMI filter, the input should be tied to VEMI not V_{IN} .

The LT3995 data sheet gives a complete description of the part, operation and application information. The data sheet must be read in conjunction with this demo manual for demo circuit 1832A. The LT3995 is assembled in a 16lead plastic MSOP package with an exposed pad for low thermal resistance. Proper board layout is essential for both proper operation and maximum thermal performance. See the data sheet sections for details.

Design files for this circuit board are available at http://www.linear.com/demo

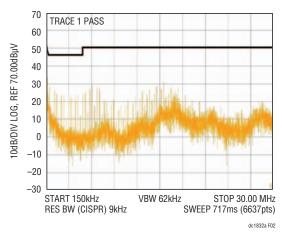


Figure 2. LT3995 Demo Board EMI Performance (Switching Frequency = 300kHz, V_{IN} = 12V)







PERFORMANCE SUMMARY Specifications are at T_A = 25°C

PARAMETER	CONDITIONS	VALUE
Guaranteed Minimum Input Voltage		4.3V
Maximum Input Voltage		60V
Output Voltage V _{OUT}	V _{IN} = 4.3V ~ 60V	3.275V ± 3%
Switching Frequency	R _T = 182k	300kHz ± 20%
Guaranteed Maximum Output Current I _{OUT}	V _{IN} = 4.3V ~ 60V	3A
Typical Efficiency	V _{IN} = 12V, I _{OUT} = 3A	82.2%
Typical Output Voltage Ripple	V _{IN} = 12V, I _{OUT} = 3A	11mV

QUICK START PROCEDURE

Demonstration circuit 1832A is easy to set up to evaluate the performance of the LT3995. Refer to Figure 3 for proper measurement equipment setup and use the following procedure.

NOTE. When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the $V_{\rm IN}$ or $V_{\rm OUT}$ and GND terminals. See Figure 4 for the proper scope technique.

- 1. Place JP1 on the ON position.
- 2. Place JP2 on the RT FREQ position.
- 3. With power off, connect the input power supply to V_{IN} and GND. Make sure that the input voltage does not exceed 60V.

- 4. With power off, connect load from $V_{\mbox{OUT}}$ to GND.
- 5. Turn on the power at the input.
- 6. Check for the proper output voltage (3.3V).

NOTE. If there is no output, temporarily disconnect the load to make sure that the load is not set too high or is shorted.

- 7. Once the proper output voltage is established, adjust the load within the operating ranges and observe the output voltage regulation, ripple voltage, efficiency and other parameters.
- 8. An external clock can be added to the SYNC terminal when SYNC function is used (JP2 on the SYNC position). Please make sure that the SYNC frequency is at least 20% higher than the set switching frequency. See the data sheet Synchronization section.



dc1832at

QUICK START PROCEDURE

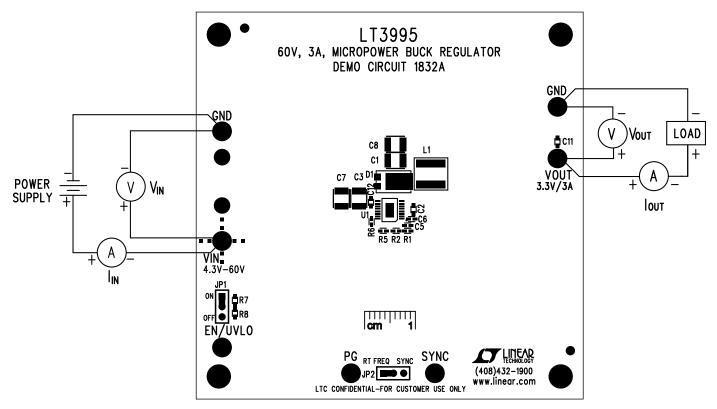


Figure 3. Proper Measurement Equipment Setup

 


Figure 4. Measuring Input or Output Ripple



DEMO MANUAL DC1832A

PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
Require	d Circuit	Components		
1	2	C1, C8	CAP., X5R, 47µF, 10V, 20%, 1210	TDK, C3225X5R1A476M
2	1	C2	CAP., X5R, 0.47µF, 25V, 10%, 0603	TDK, C1608X5R1E474M
3	2	C3, C7	CAP., X7R, 2.2µF, 100V, 10%,1210	TDK, C3225X7R2A225M
4	1	C5	CAP., COG, 10pF, 50V, 10%, 0402	TDK, C1005C0G1H100D
5	1	C6	CAP., X7R, 10nF, 25V, 10%, 0402	TDK, C1005X7R1E103K
6	1	C11	CAP., X5R, 1µF, 10V, 10%, 0603	TDK, C1608X5R1A105K
7	1	C12	CAP., X7R, 0.1µF, 100V, 10%, 0603	MURATA, GRM188R72A104KA35D
8	1	D1	DIODE, PDS360 PowerDi5	DIODE INC., PDS360
9	1	L1	IND, 8.2µH	COILCRAFT, XAL6060-822ME
10	1	R1	RES., CHIP, 1.00M, 1/16W, 1%, 0402	NIC, NRC04F1004TRF
11	1	R2	RES., CHIP, 576k, 1/16W, 1%, 0402	NIC, NRC04F5763TRF
12	1	R5	RES., CHIP, 182k, 1/16W, 1%, 0402	NIC, NRC04F1823TRF
13	1	R6	RES., CHIP, 200k, 1/16W, 1%, 0402	NIC, NRC04F2003TRF
14	1	U1	I.C., LT3995EMSE, MSE16	LINEAR TECHNOLOGY, LT3995EMSE
Addition	al Demo	Board Circuit Components		· ·
1	1	C4	CAP., ALUM., 100µF, 100V, 10%	SUN ELECT, 100CE100KXT
2	2	C9, C10	CAP., X7R, 2.2µF, 100V, 10%, 1210	TDK, C3225X7R2A225M
3	1	C13	CAP., HVP SERIES, 33µF, 63V, 20%	SUNCON, 63HVP33M
4	1	L2	IND, 1.0µH	VISHAY, IHLP-1616BZER1R0M01
5	1	L3	IND, 3.3µH	VISHAY, IHLP-2020BZER3R3M01
6	0	R7,R8	RES., 0603	OPT
Hardwai	e: For D	emo Board Only		· ·
1	7	E1, E2, E3, E4, E5, E6, E7	TURRET, 0.094"	MILL-MAX, 2501-2-00-80-00-00-07-0
2	2	E8, E9	TESTPOINT, TURRET, 0.061" PBF	MILL-MAX, 2308-2-00-80-00-00-07-0
3	2	JP1, JP2	JMP, 1X3-079	SAMTEC, TMM-103-02-L-S
4	2	XJP1, XJP2	SHUNT, 2mm CTRS.	SAMTEC, 2SN-BK-G





-1F - C11 E1 3.3V/3A GND **NOTE: UNLESS OTHERWISE SPECIFIED** 1. ALL RESISTORS ARE IN OHMS, 0402. ALL CAPACITORS ARE IN MICROFARADS, 0402. **RT FREQ** JP2 SYNC RT FRE 8<u>555</u> 100/ 1210 120 120 120 120 4 NN ខ្លុំខ្ល L3 3.3uH IND-IHLP2020BZ-01 R1 1%00M 57<mark>6</mark> 576 E ۸۸۸ 4ΛΛ -+C13 73uF 63V 63HVP33 L1 8.2uH D1 D1 D1 D1 D1 L2 1.0uH IND-IHLP1616BZ-01 ŀ C2 0.47uF 0603 R5 182k 1% (300kHz) 8 C10 2.2uF 1210 1210 16 4 SO SWS BOOST æ SYNC OUT 5 C9 1210 1210 1210 Ð ЭN LT3995EMSE 6 GND 41 ЭN ᅇ ដ 8 0 0 VEMI 5 GND NNN NNN S E S 273 15 13 10nF 130R \$ 200K C12 100V 0603 Seperation Separation ┥┝╼╢╸ ₩ łh 1200 1200 1200 1200 <u>م</u> 22¹⁰⁰⁰ N H SUNCON 100CE100KXT 100ur 1000ur PG O VIN 4.3V - 60V OE3 4 Ó GND



SCHEMATIC DIAGRAM

Information furnished by Linear Technology Corporation is believed to be accurate and reliable. However, no responsibility is assumed for its use. Linear Technology Corporation makes no representation that the interconnection of its circuits as described herein will not infringe on existing patent rights. dc1832af

5

DEMO MANUAL DC1832A

DEMO MANUAL DC1832A

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following AS IS conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.

LTC currently services a variety of customers for products around the world, and therefore this transaction is not exclusive.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. Common sense is encouraged.

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology 1630 McCarthy Blvd. Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

dc1832at