

Class R Fuseblocks Catalog Data

Catalog Number	Covers		Voltage	Current	Number of Poles	Label
Class R	w/o Indication	w/ Indication				
RM25100-1CR	CVR-RH-25100	CVRI-RH-25100	250	100	1	RM25100-1CR
RM25100-2CR					2	RM25100-2CR
RM25100-3CR					3	RM25100-3CR
RM25200-1CR	CVR-RH-25200	CVRI-RH-25200		200	1	RM25200-1CR
RM25200-2CR					2	RM25200-2CR
RM25200-3CR					3	RM25200-3CR
RM25400-1CR	CVR-RH-25400	CVRI-RH-25400		400	1	RM25400-1CR
RM25400-2CR					2	RM25400-2CR
RM25400-3CR					3	RM25400-3CR
RM25600-1CR	CVR-RH-25600	CVRI-RH-25600		600	1	RM25600-1CR
RM25600-2CR					2	RM25600-2CR
RM25600-3CR					3	RM25600-3CR

Catalog Number	Covers		Voltage	Current	Number of Poles	Label
Class R	w/o Indication	w/ Indication				
RM60100-1CR	CVR-RH-60100	CVRI-RH-60100	600	100	1	RM60100-1CR
RM60100-2CR					2	RM60100-2CR
RM60100-3CR					3	RM60100-3CR
RM60200-1CR	CVR-RH-60200	CVRI-RH-60200		200	1	RM60200-1CR
RM60200-2CR					2	RM60200-2CR
RM60200-3CR					3	RM60200-3CR
RM60400-1CR	CVR-RH-60400	CVRI-RH-60400		400	1	RM60400-1CR
RM60400-2CR					2	RM60400-2CR
RM60400-3CR					3	RM60400-3CR
RM60600-1CR	CVR-RH-60600	CVRI-RH-60600		600	1	RM60600-1CR
RM60600-2CR					2	RM60600-2CR
RM60600-3CR					3	RM60600-3CR

COOPER Bussmann
St. Louis MO 63178

 
TITLE:

 
Class R fuse holder-CUST

SCALE:
1:1


SIZE:
A3

SHEET:
1 OF 14

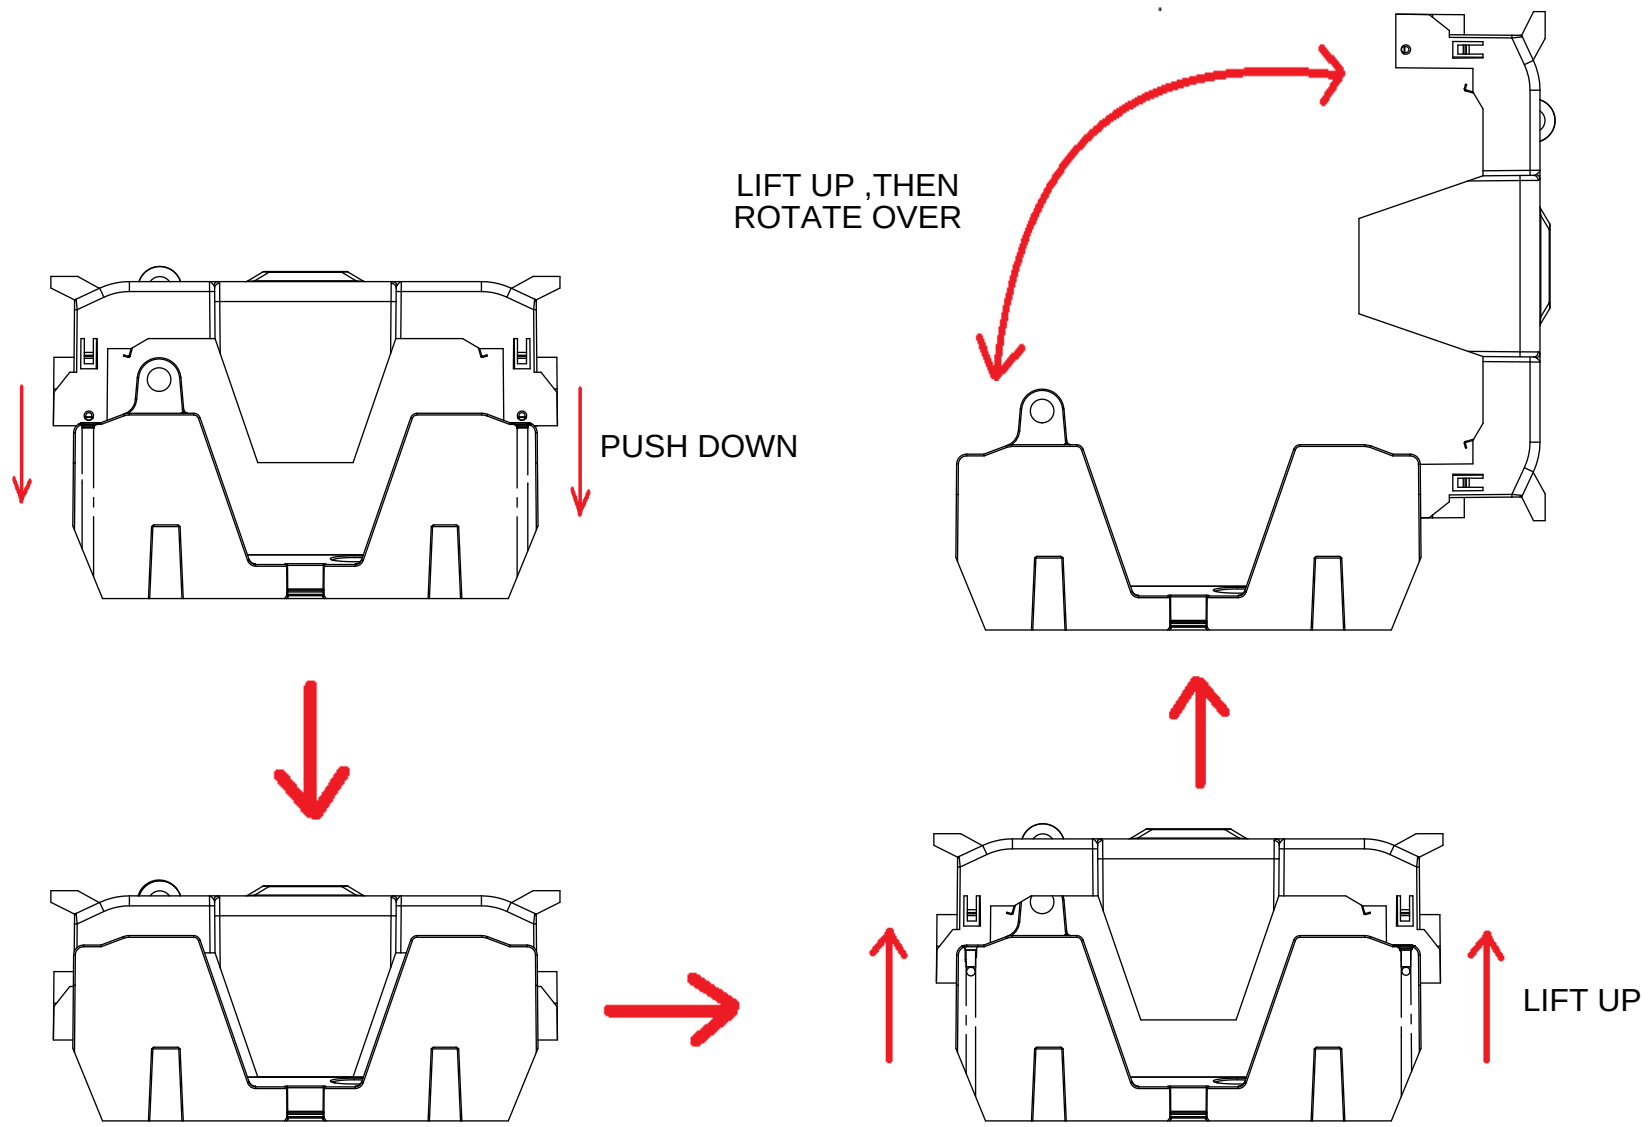


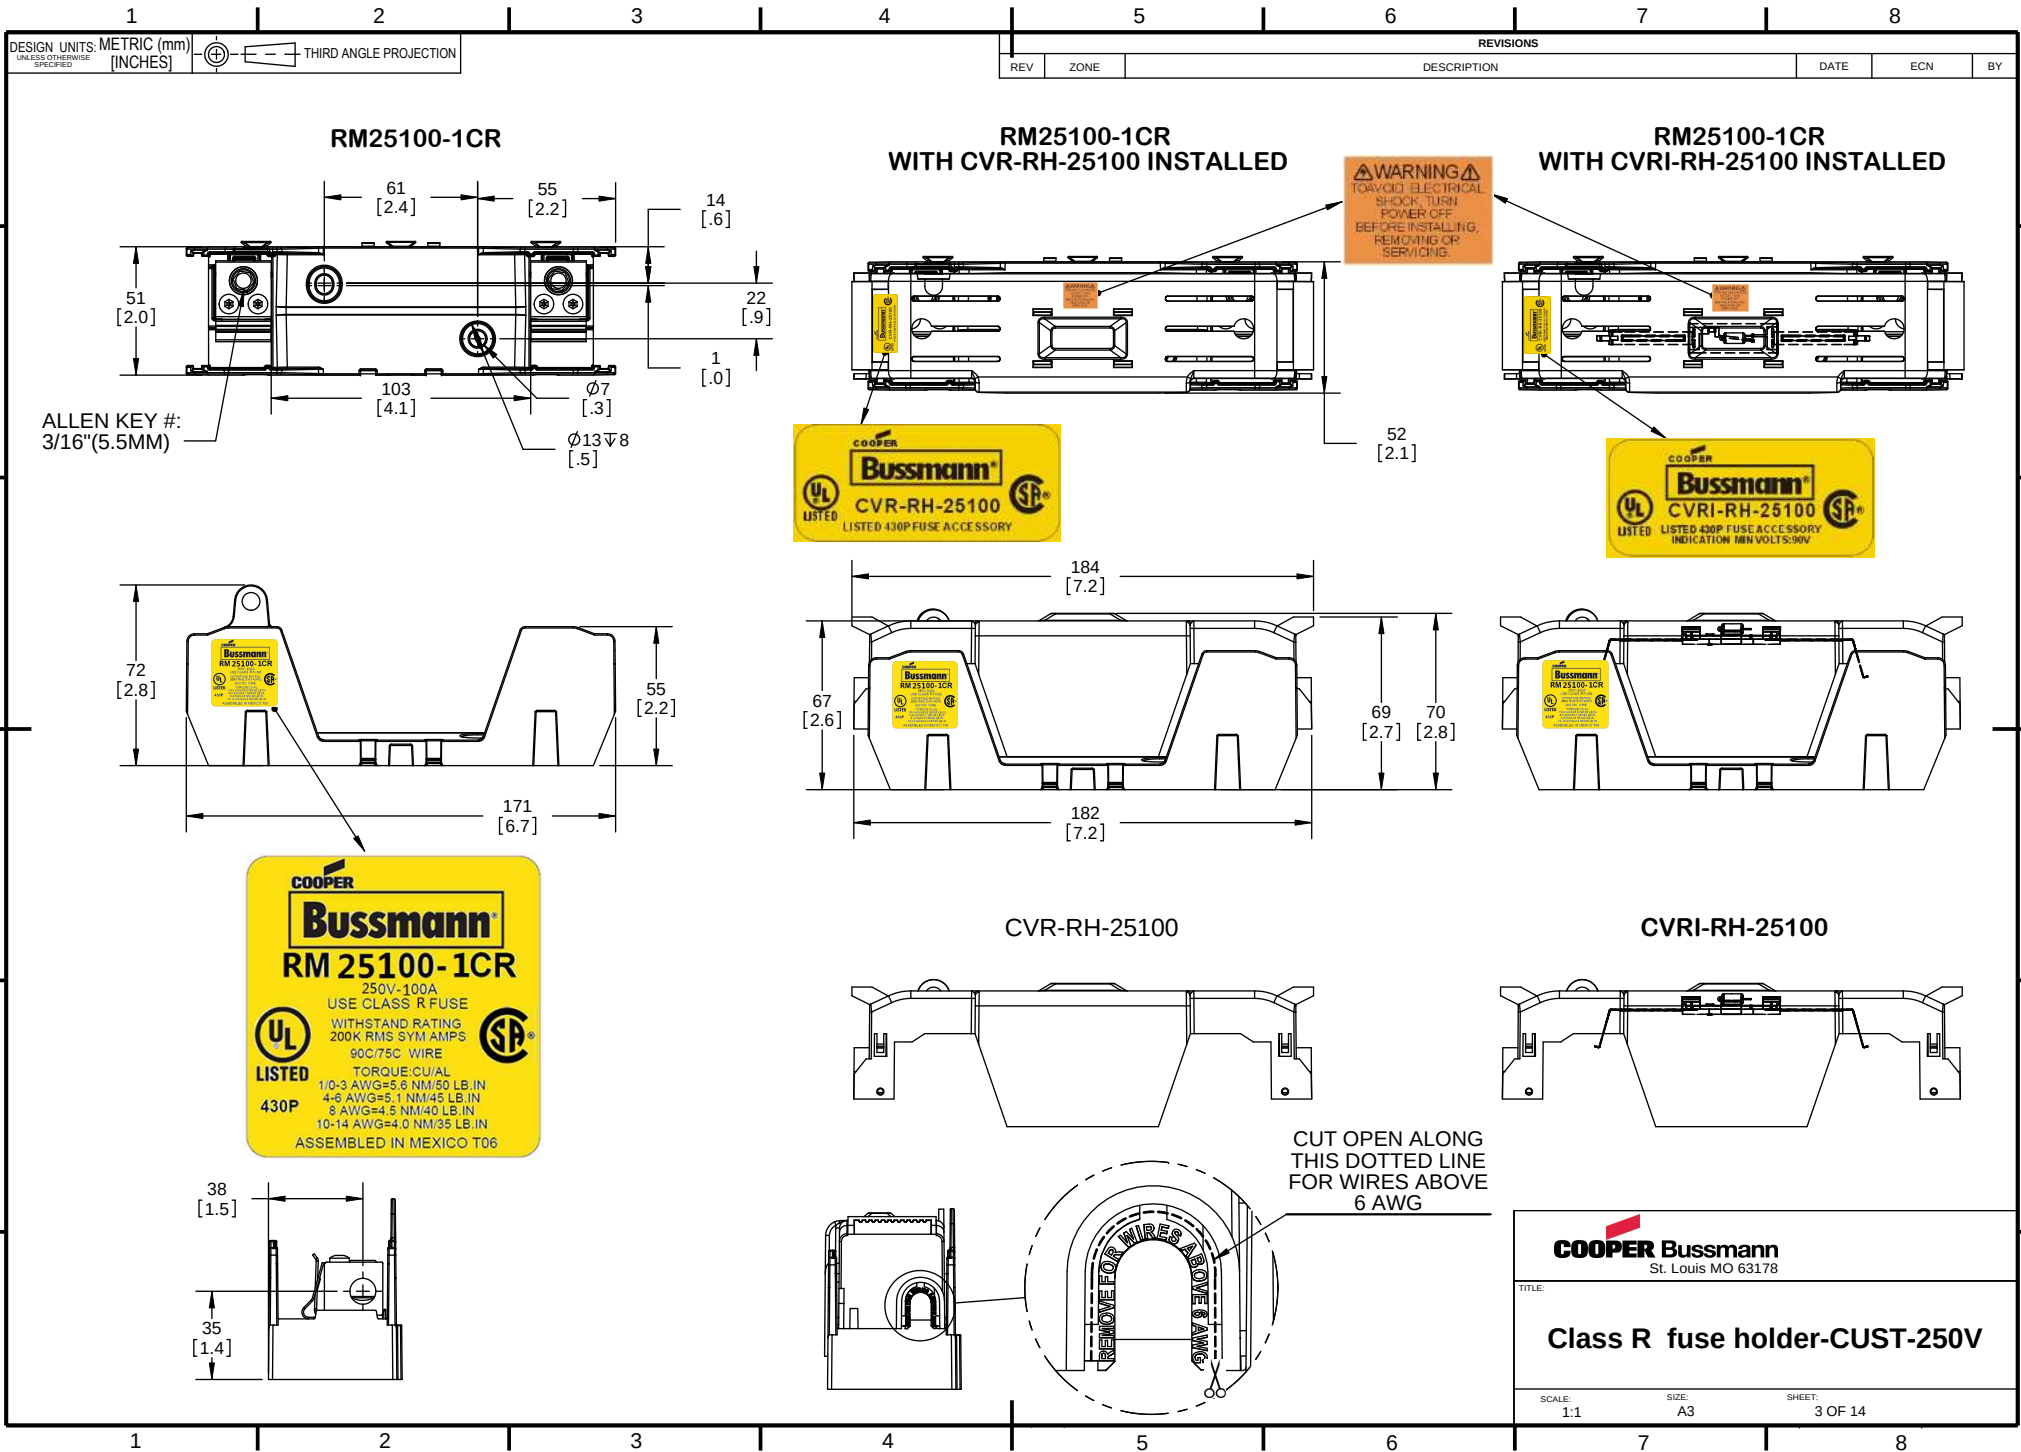







RM25100-2CR

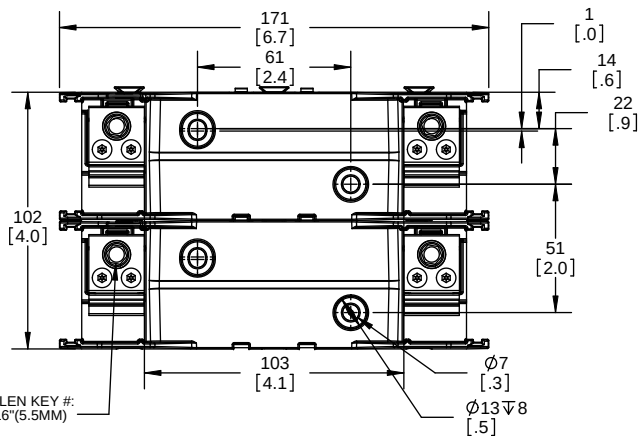 

RM25100-2CR WITH CVR-RH-25100 INSTALLED

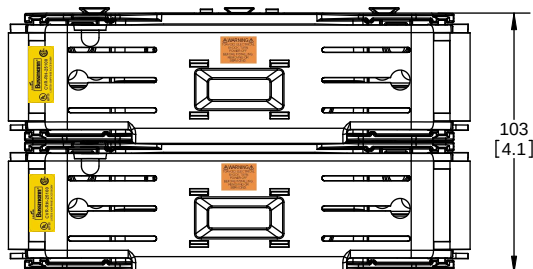 

RM25100-2CR WITH CVRI-RH-25100 INSTALLED

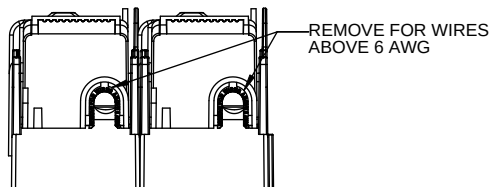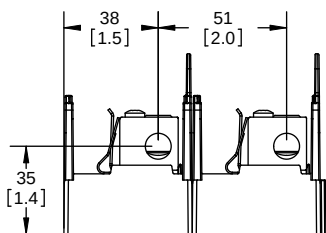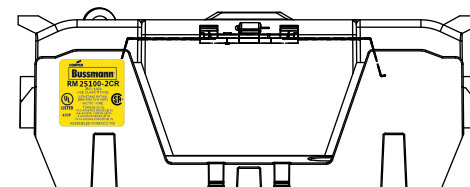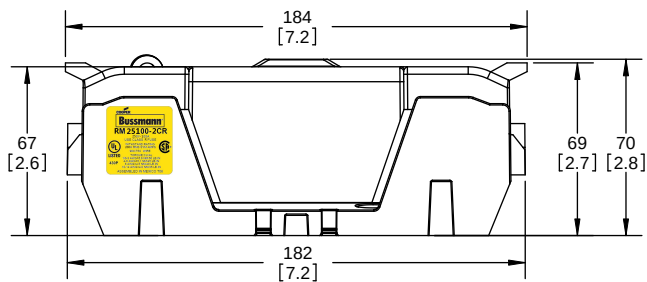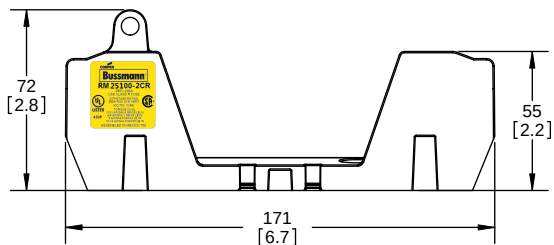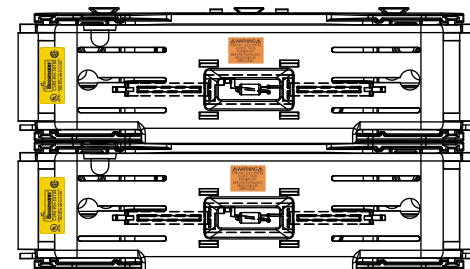      

COOPER Bussmann
St. Louis MO 63178

TITLE:


Class R fuse holder-CUST-250V

SCALE:
1:1


SIZE:
A3

SHEET:
4 OF 14






 
RM25100-3CR

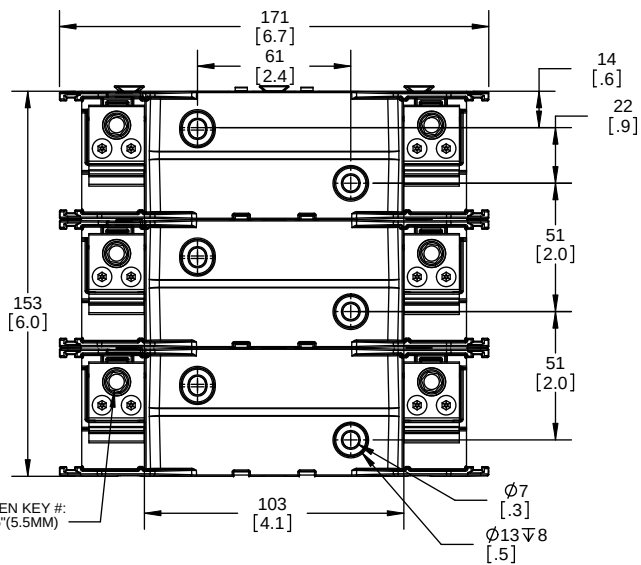

RM25100-3CR WITH CVR-RH-25100 INSTALLED

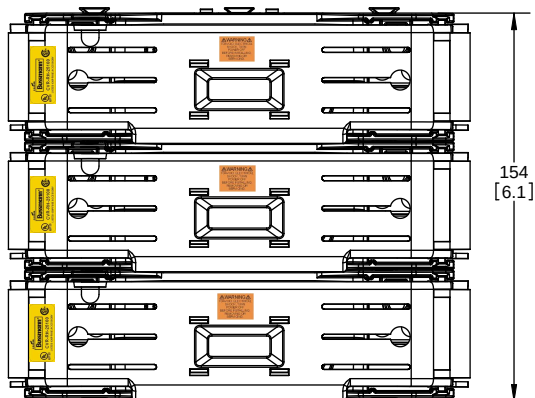 

RM25100-3CR WITH CVRI-RH-25100 INSTALLED

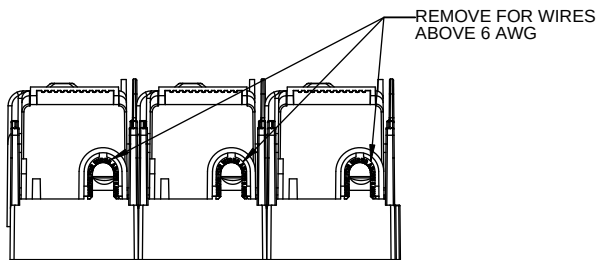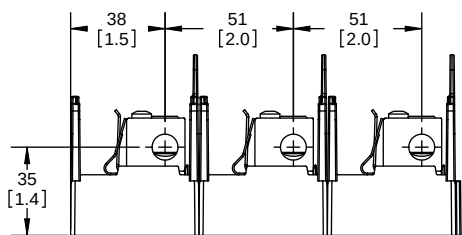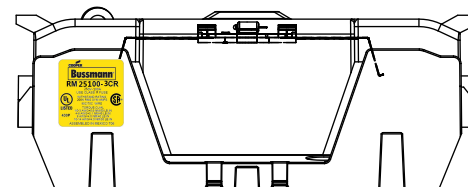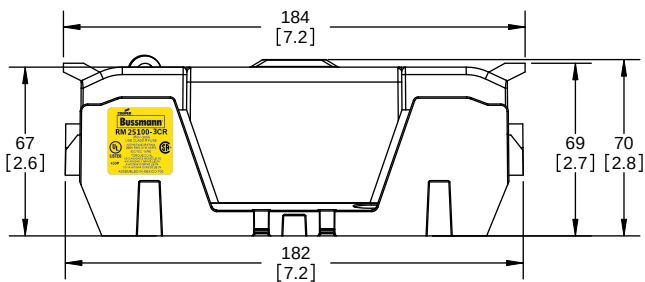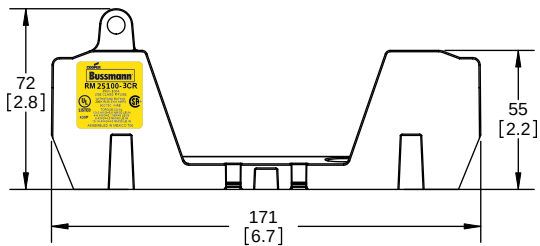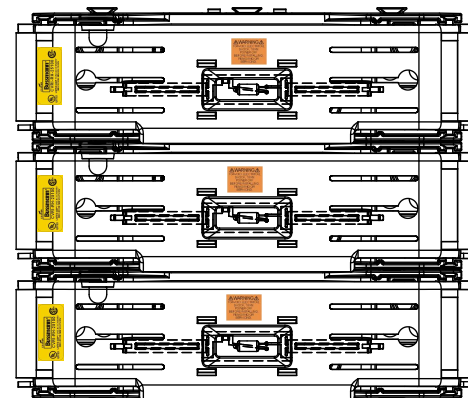      

COOPER Bussmann
St. Louis MO 63178

TITLE:

Class R fuse holder-CUST-250V




SCALE:
1:1

SIZE:
A3



SHEET:
5 OF 14

RM25200-1CR

  
 
ALLEN KEY #:
3/8"(10.0MM)

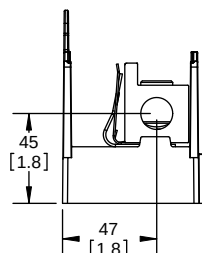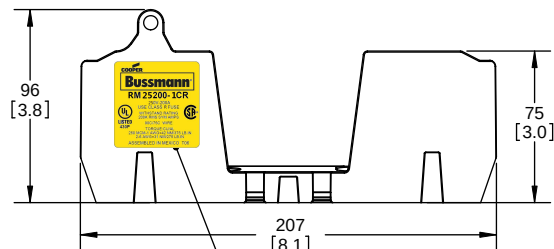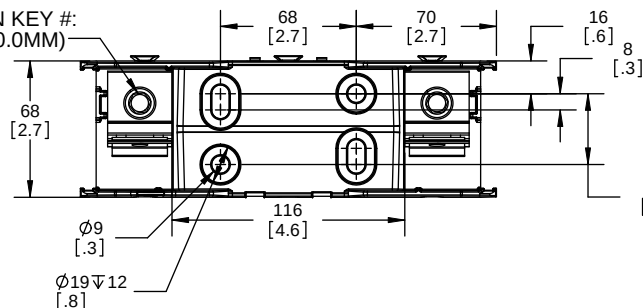

RM25200-1CR WITH CVR-RH-25200 INSTALLED

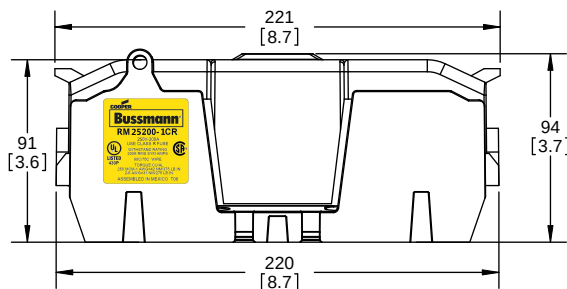 
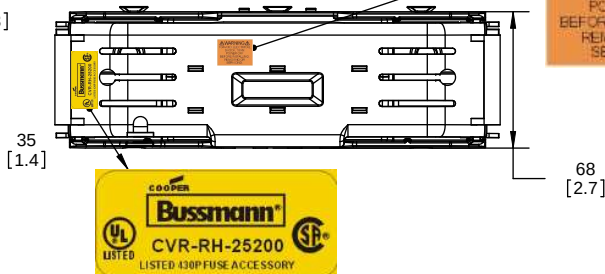 


CVR-RH-25200

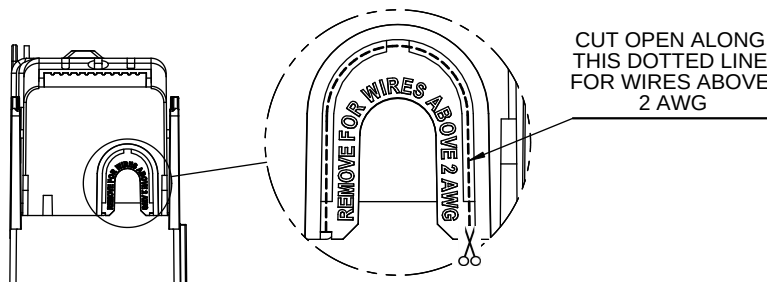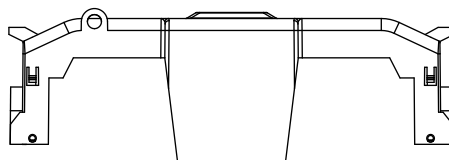  


RM25200-1CR WITH CVRI-RH-25200 INSTALLED

  WARNING
TO AVOID ELECTRICAL SHOCK, TURN POWER OFF BEFORE INSTALLING, REMOVING OR SERVICING.

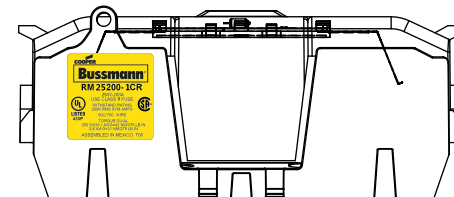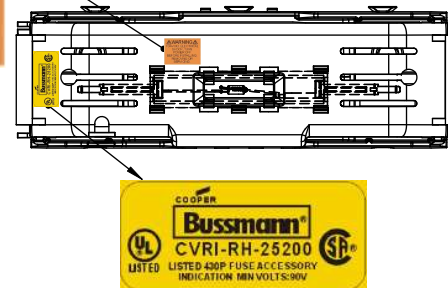

CVRI-RH-25200

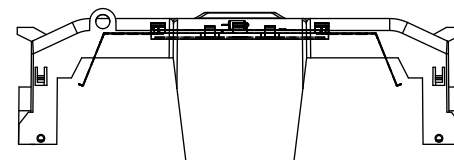 


COOPER Bussmann
St. Louis MO 63178


Class R fuse holder-CUST-250V

SCALE: 1:1 SIZE: A3 SHEET: 6 OF 14





 
RM25200-2CR

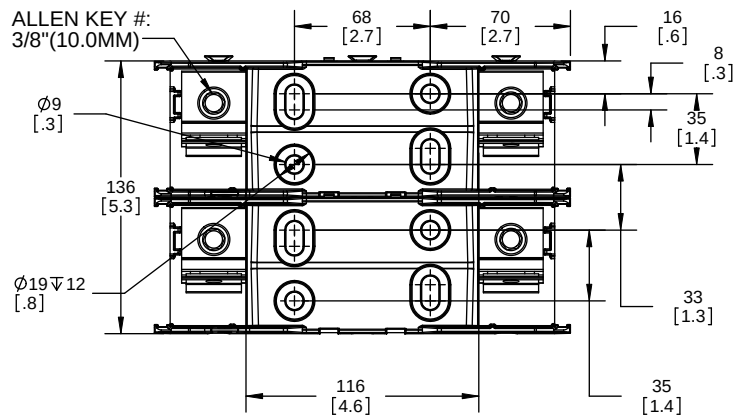

RM25200-2CR WITH CVR-RH-25200 INSTALLED

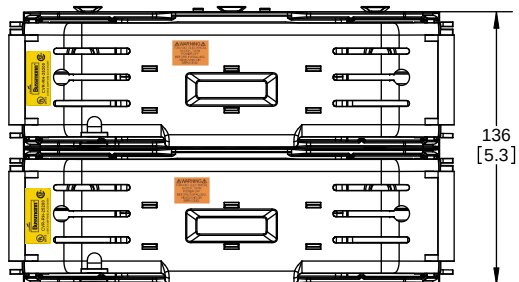 

RM25200-2CR WITH CVRI-RH-25200 INSTALLED

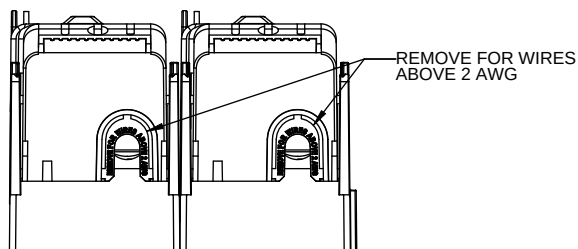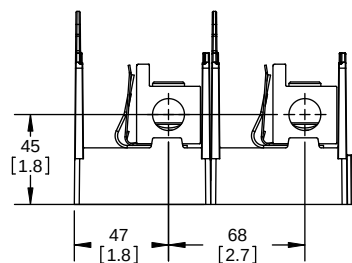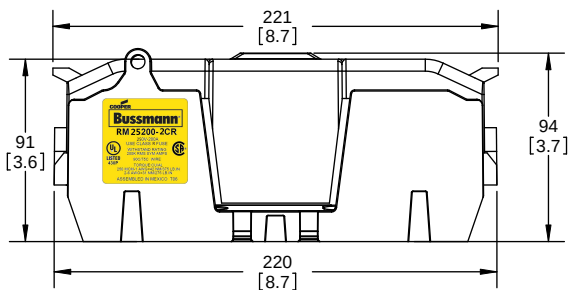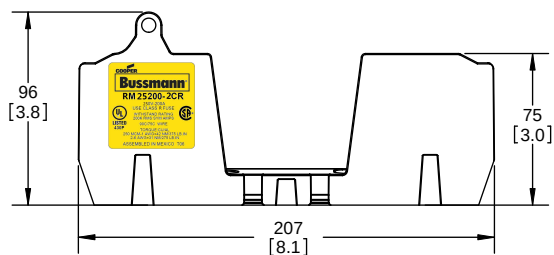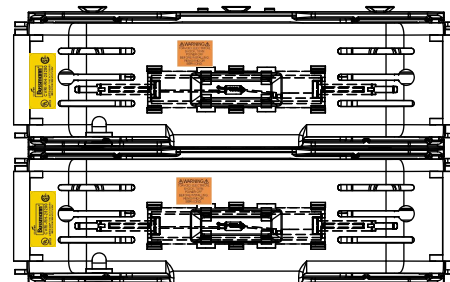     

COOPER Bussmann
St. Louis MO 63178

TITLE:


Class R fuse holder-CUST-250V

SCALE:
1:1


SIZE:
A3

SHEET:
7 OF 14





 
RM25200-3CR

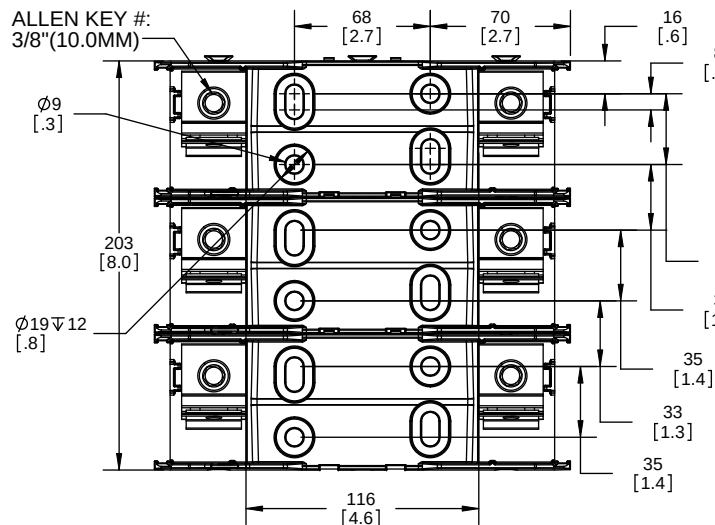

RM25200-3CR WITH CVR-RH-25200 INSTALLED

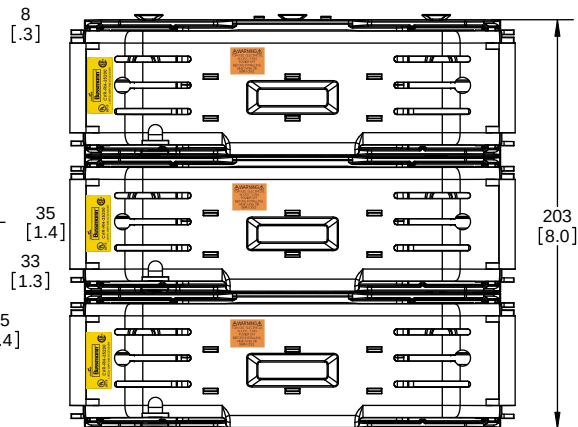 

RM25200-3CR WITH CVRI-RH-25200 INSTALLED

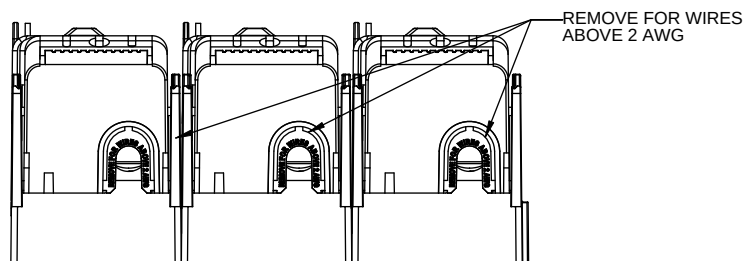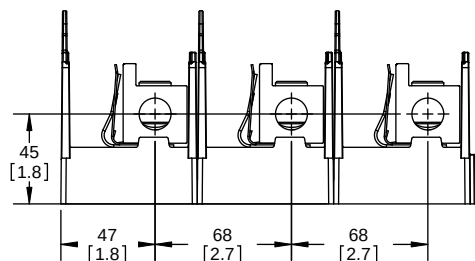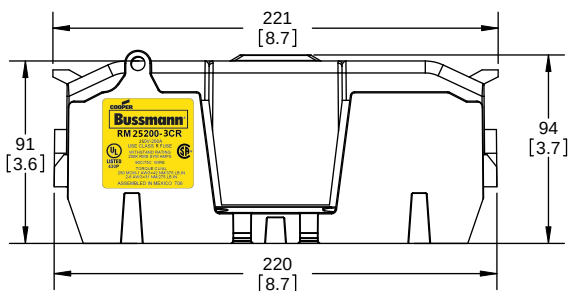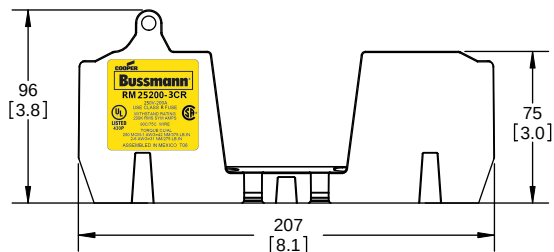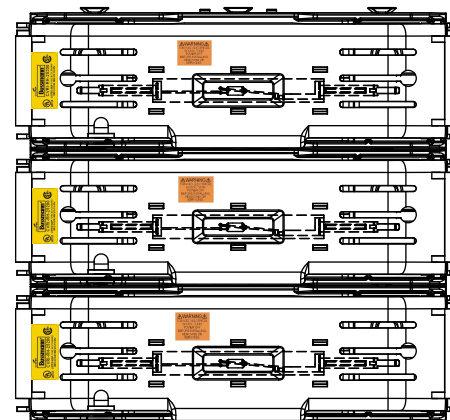     

COOPER Bussmann
St. Louis MO 63178

TITLE:


Class R fuse holder-CUST-250V

SCALE:
1:1

SIZE:
A3

SHEET:
8 OF 14






 
RM25400-2CR

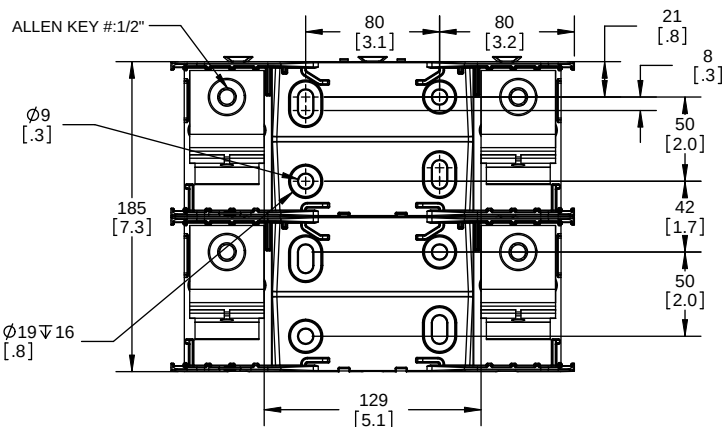

RM25400-2CR WITH CVR-RH-25400 INSTALLED



      RM25400-2CR WITH CVRI-RH-25400 INSTALLED

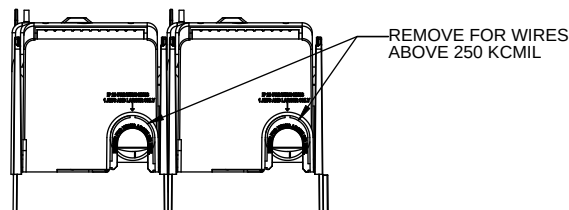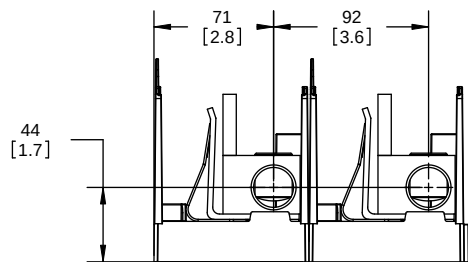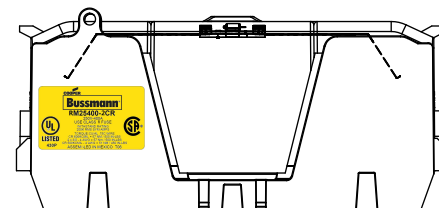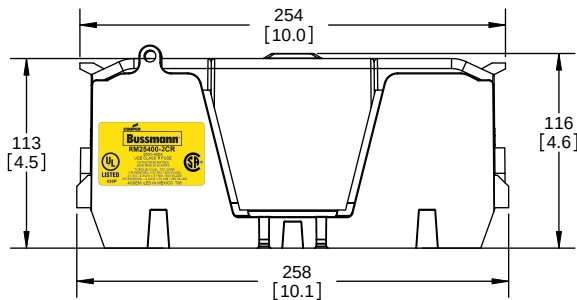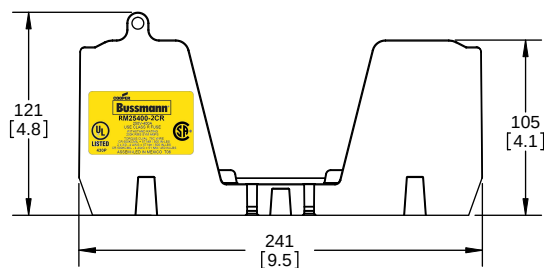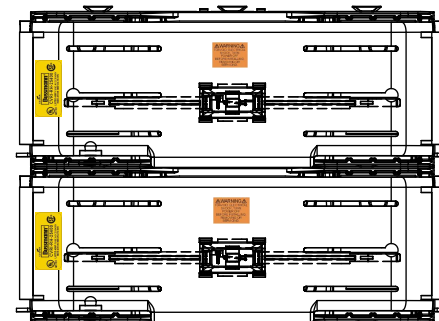

REMOVE FOR WIRES
ABOVE 250 KCMIL

COOPER Bussmann
St. Louis MO 63178

TITLE:


Class R fuse holder-CUST-250V

SCALE:
1:1


SIZE:
A3

SHEET:
10 OF 14






 
RM25400-3CR

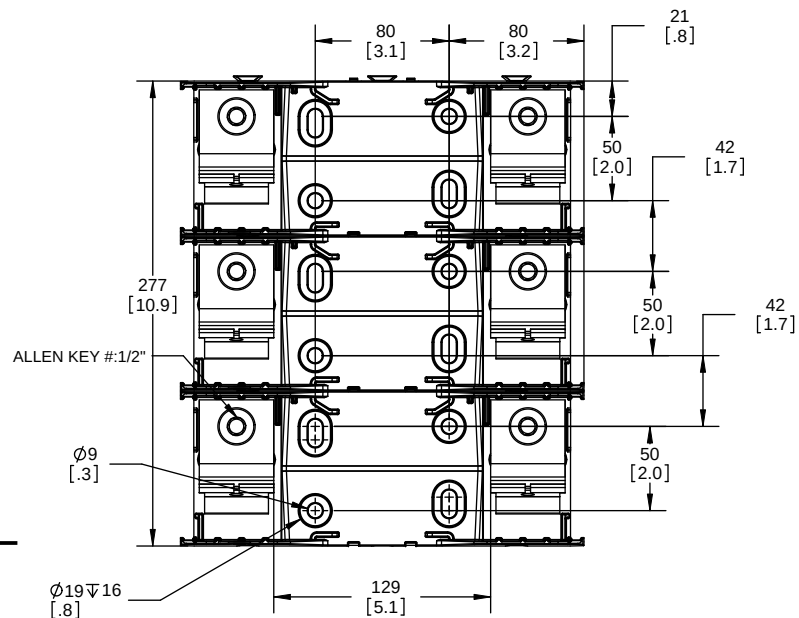


RM25400-3CR WITH CVR-RH-25400 INSTALLED

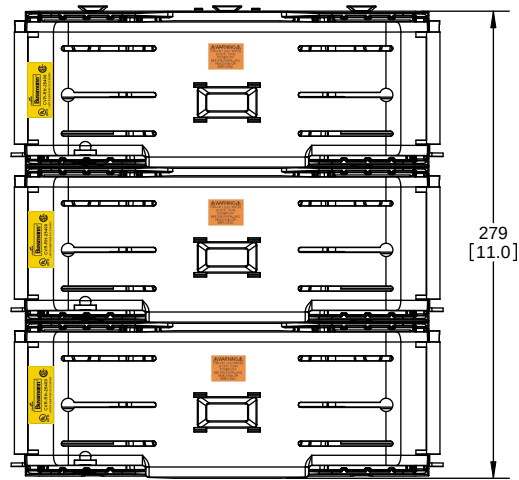 


RM25400-3CR WITH CVRI-RH-25400 INSTALLED

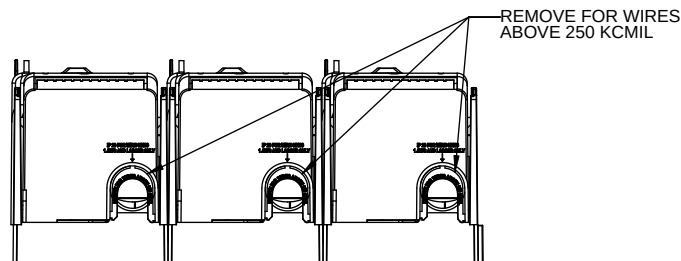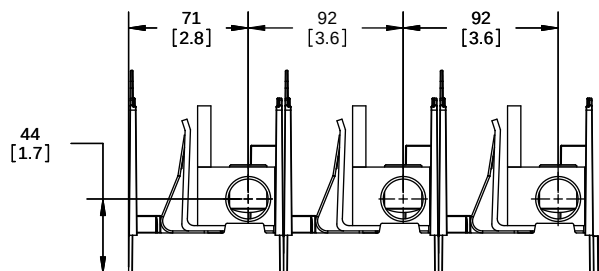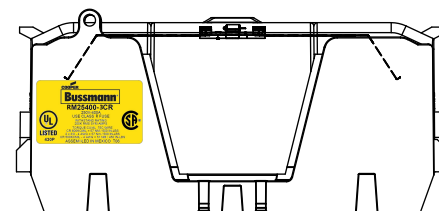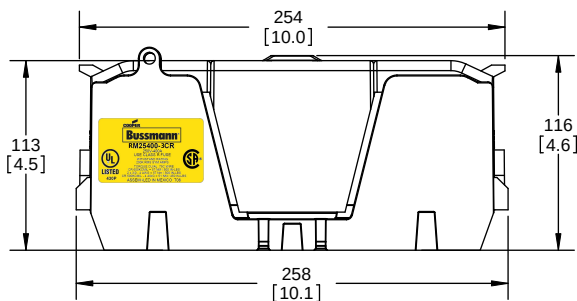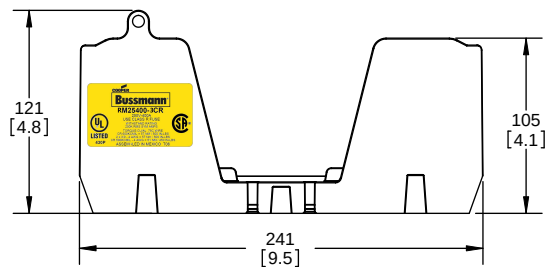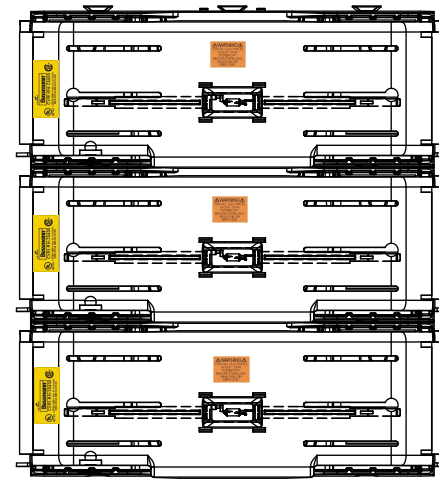      


RM25600-1CR

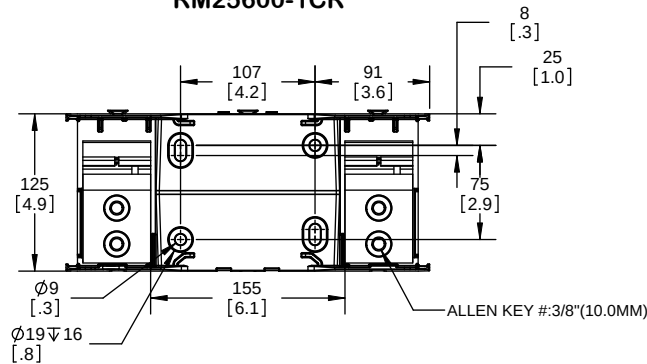 




RM25600-1CR WITH CVR-RH-25600 INSTALLED

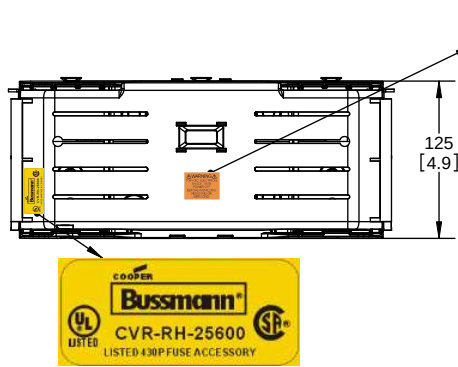 


RM25600-1CR WITH CVRI-RH-25600 INSTALLED

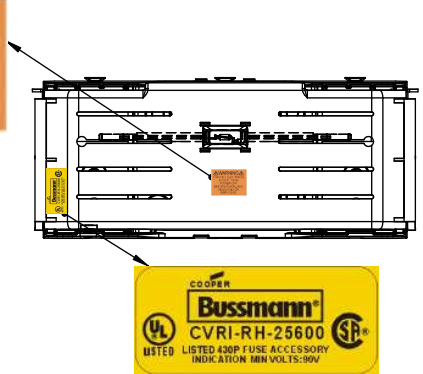 

 
 
 
WARNING
TO AVOID ELECTRICAL SHOCK, TURN POWER OFF BEFORE INSTALLING, REMOVING OR SERVICING.

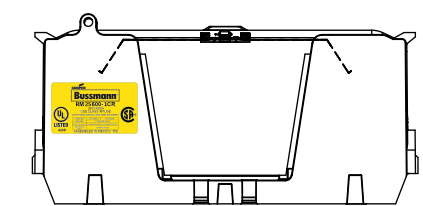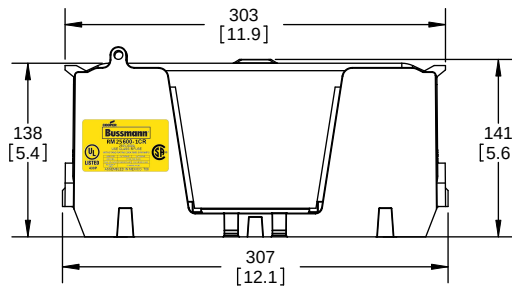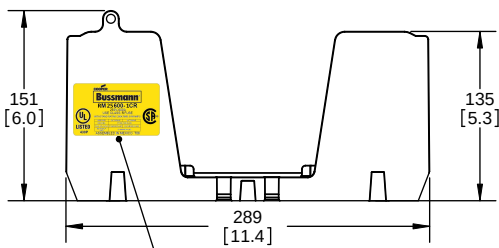

CVR-RH-25600

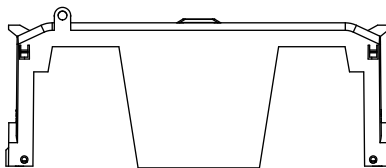 

CVRI-RH-25600

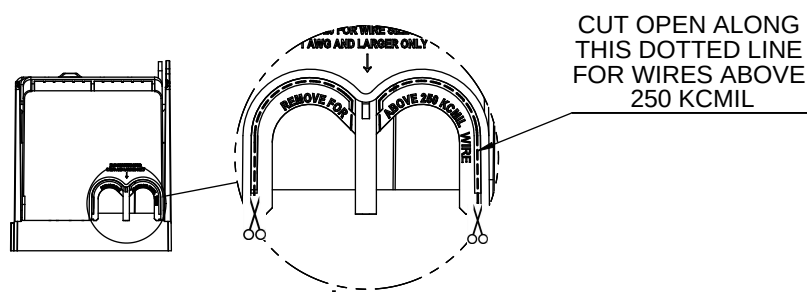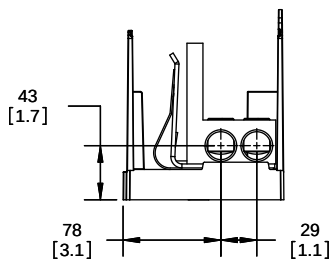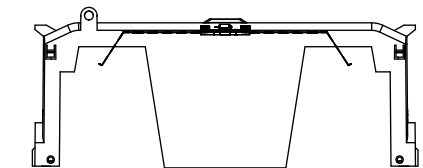   

COOPER Bussmann
St. Louis MO 63178








Class R fuse holder-CUST-250V

SCALE: 1:1
SIZE: A3
SHEET: 12 OF 14

RM25600-2CR

RM25600-2CR WITH CVR-RH-25600 INSTALLED

       RM25600-2CR WITH CVRI-RH-25600 INSTALLED

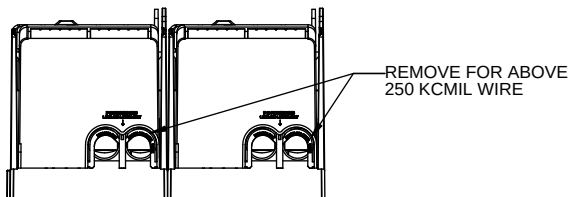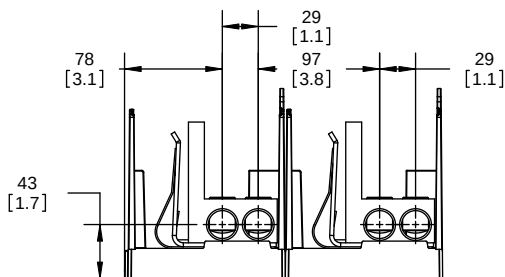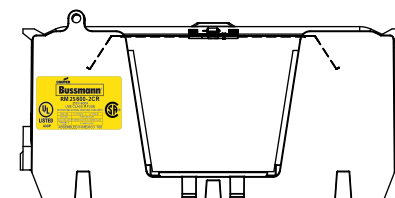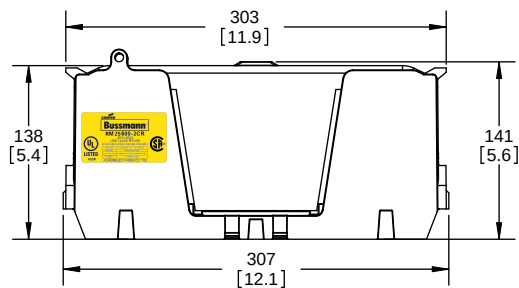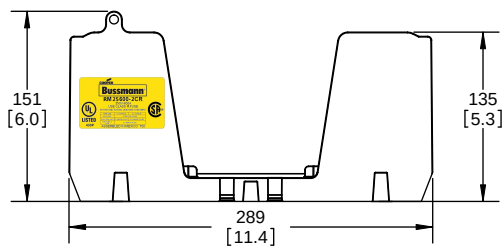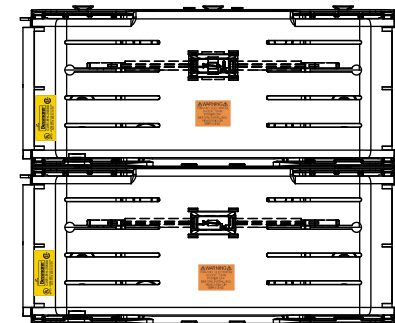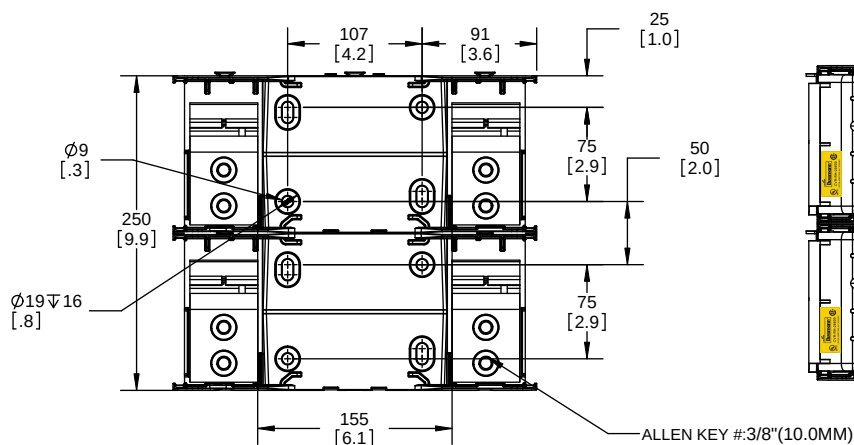


COOPER Bussmann
St. Louis MO 63178


TITLE:
Class R fuse holder-CUST-250V

SCALE: 1:1 SIZE: A3 SHEET: 13 OF 14






 
RM25600-3CR

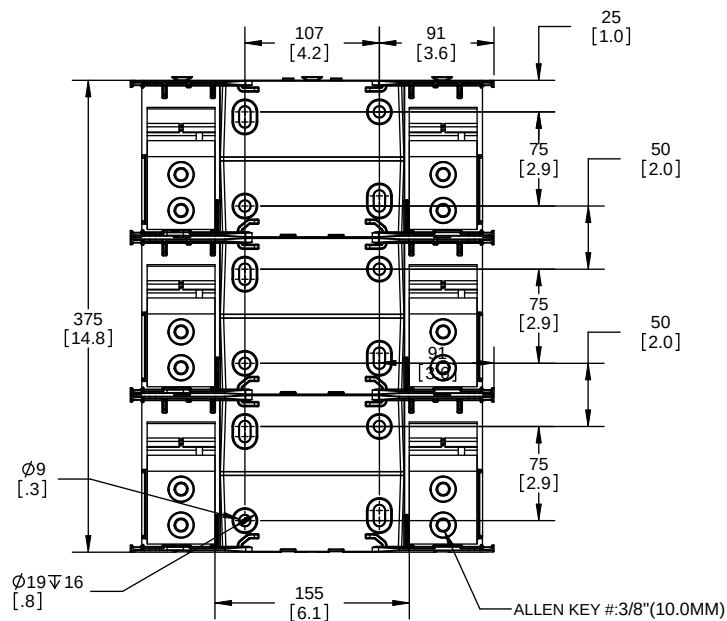

RM25600-3CR WITH CVR-RH-25600 INSTALLED

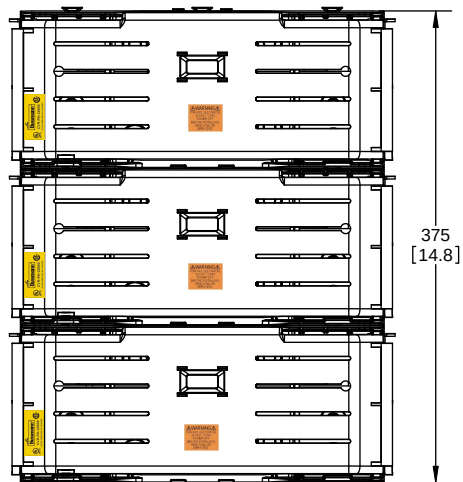 


RM25600-3CR WITH CVRI-RH-25600 INSTALLED

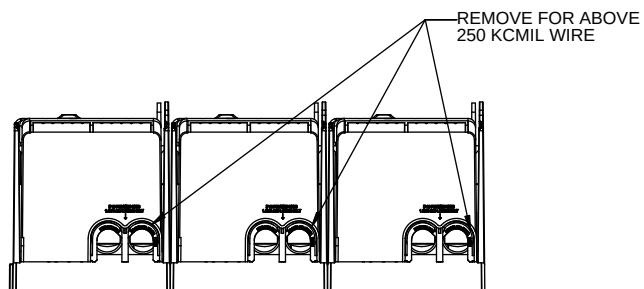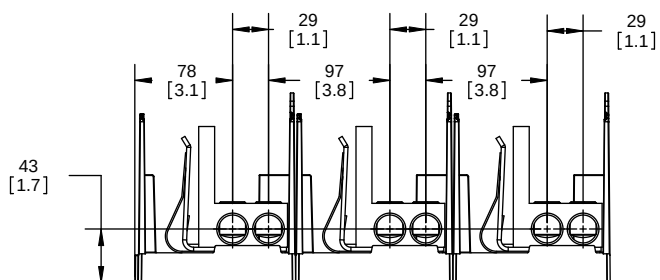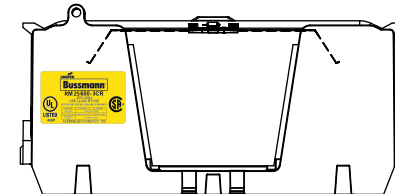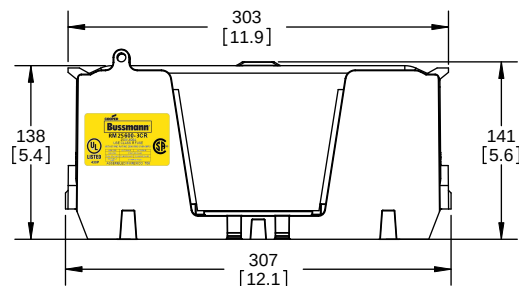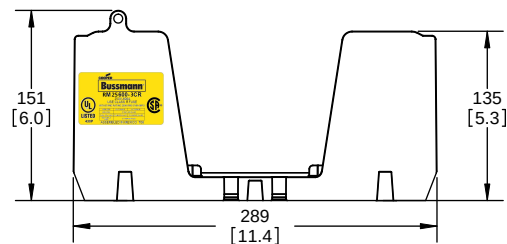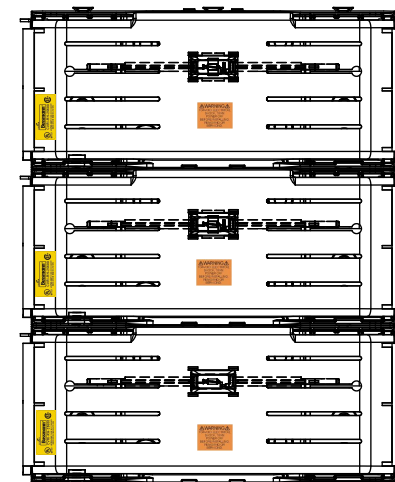      

COOPER Bussmann
St. Louis MO 63178

TITLE:
Class R fuse holder-CUST-250V







 
SCALE: 1:1 SIZE: A3 SHEET: 14 OF 14

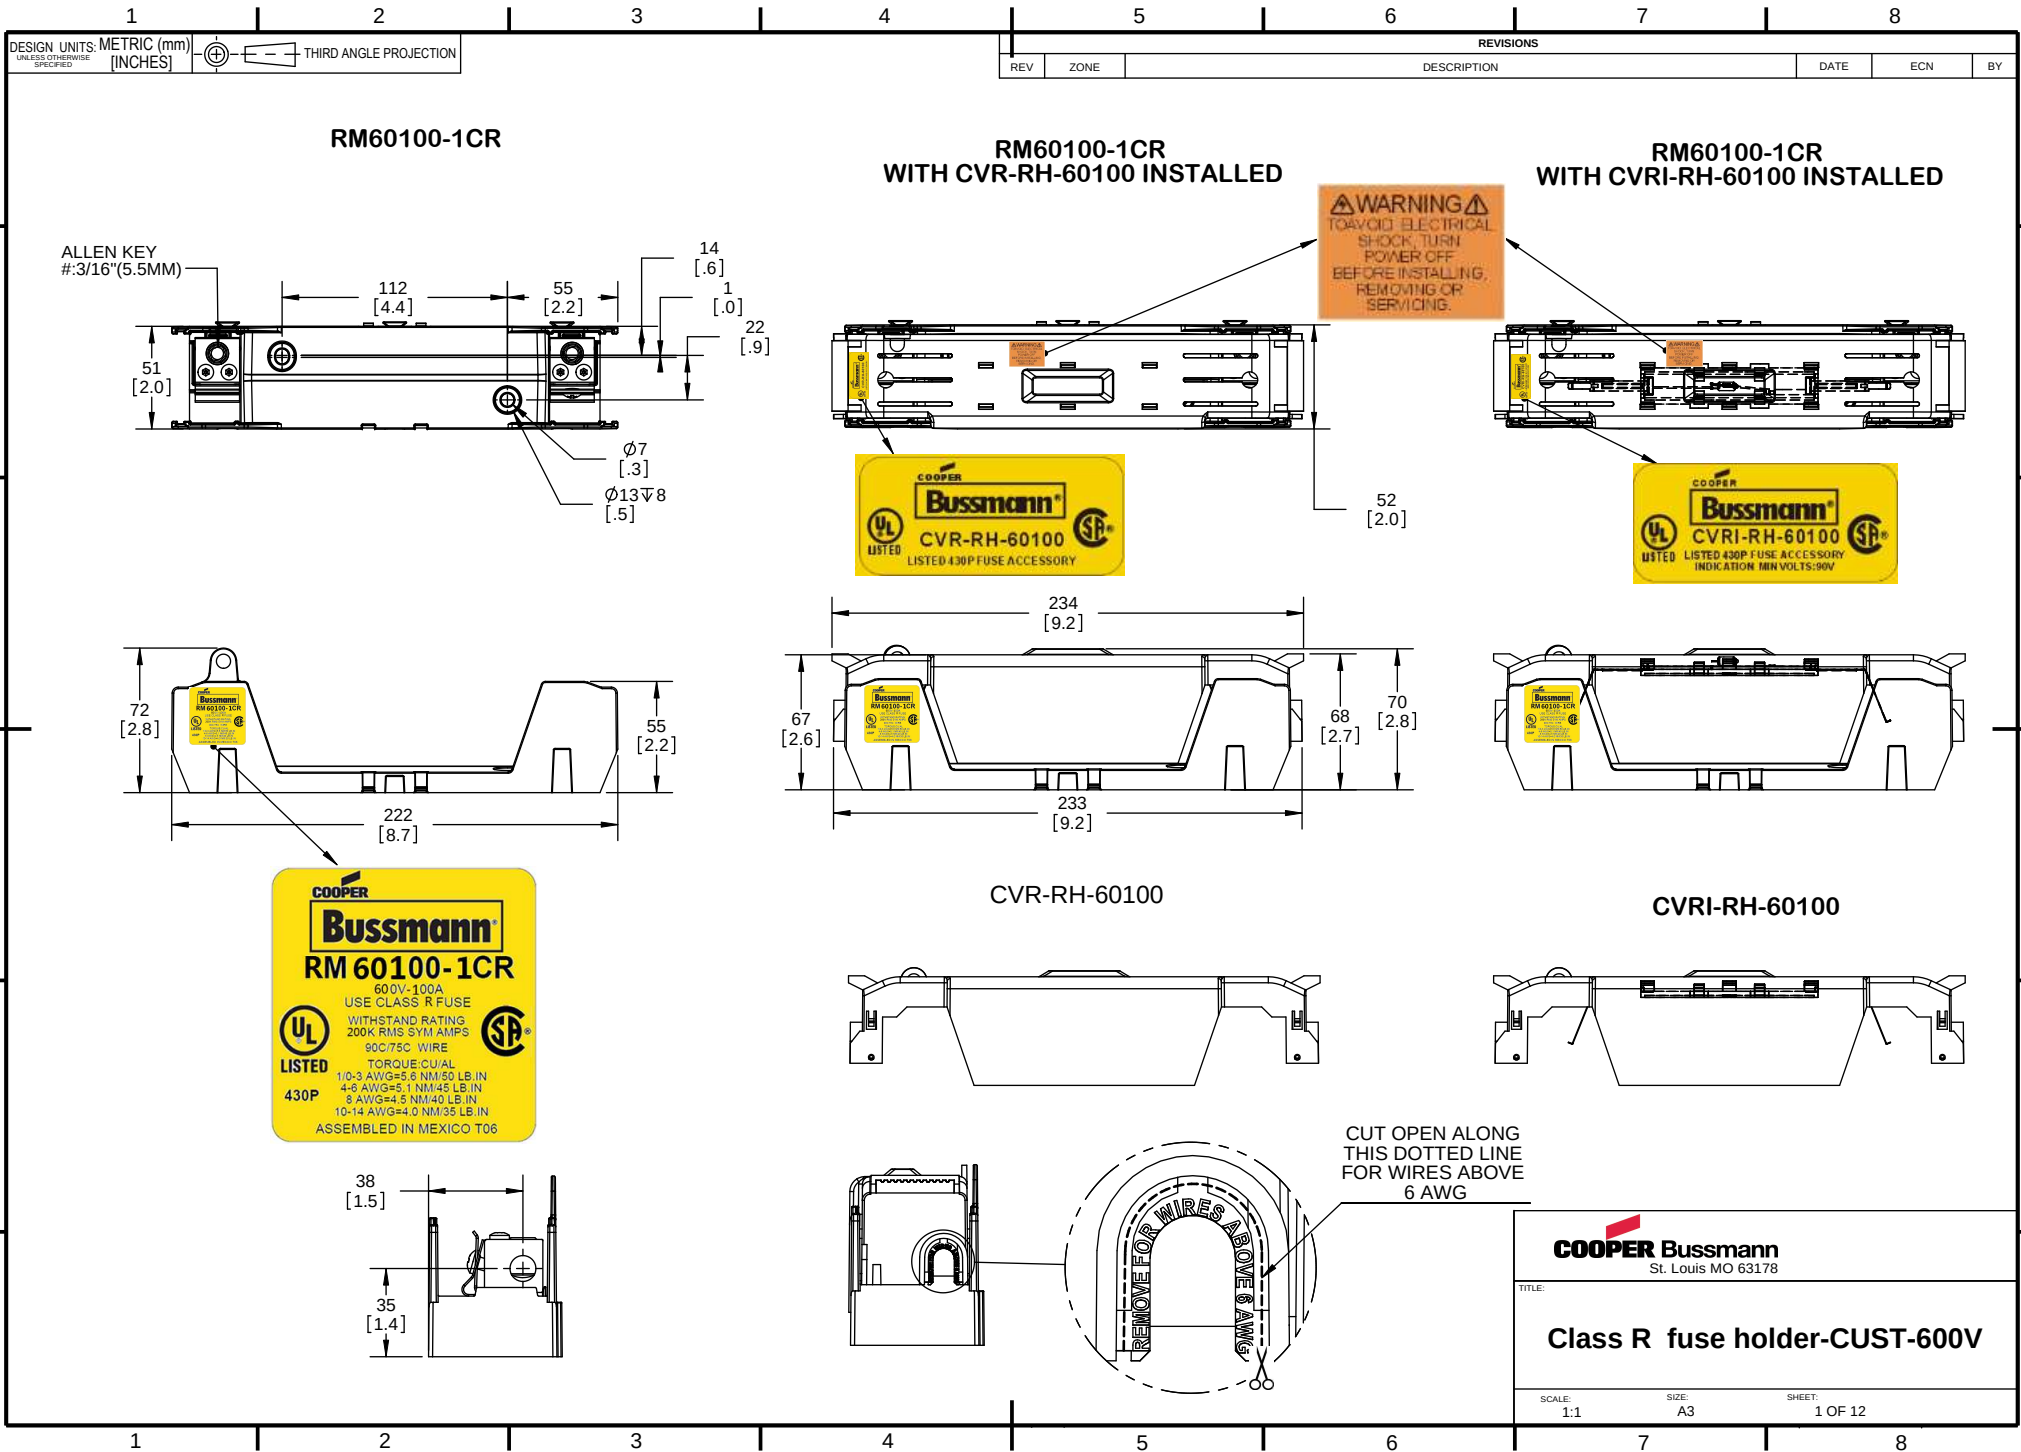


RM60100-2CR

RM60100-2CR
WITH CVR-RH-60100 INSTALLED

        RM60100-2CR
WITH CVRI-RH-60100 INSTALLED

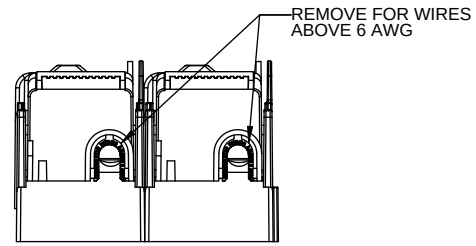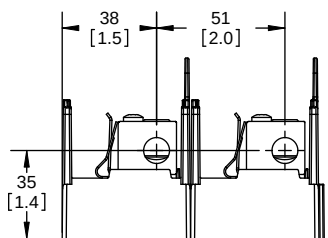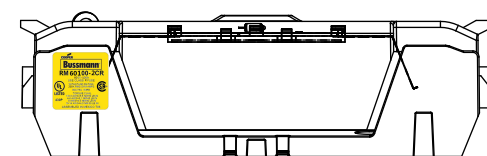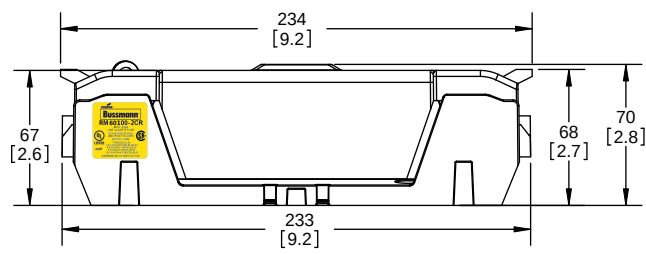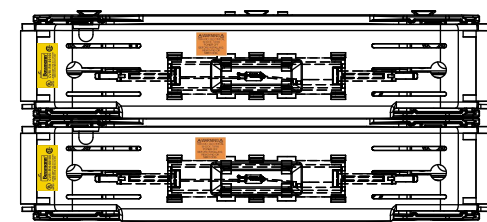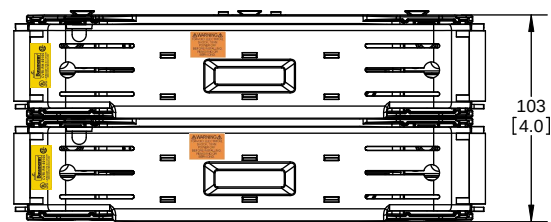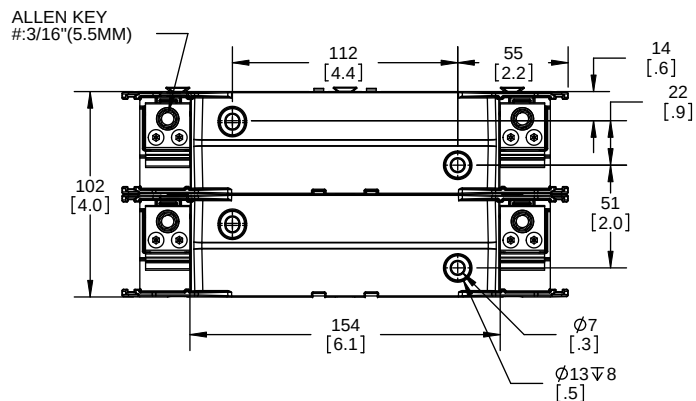

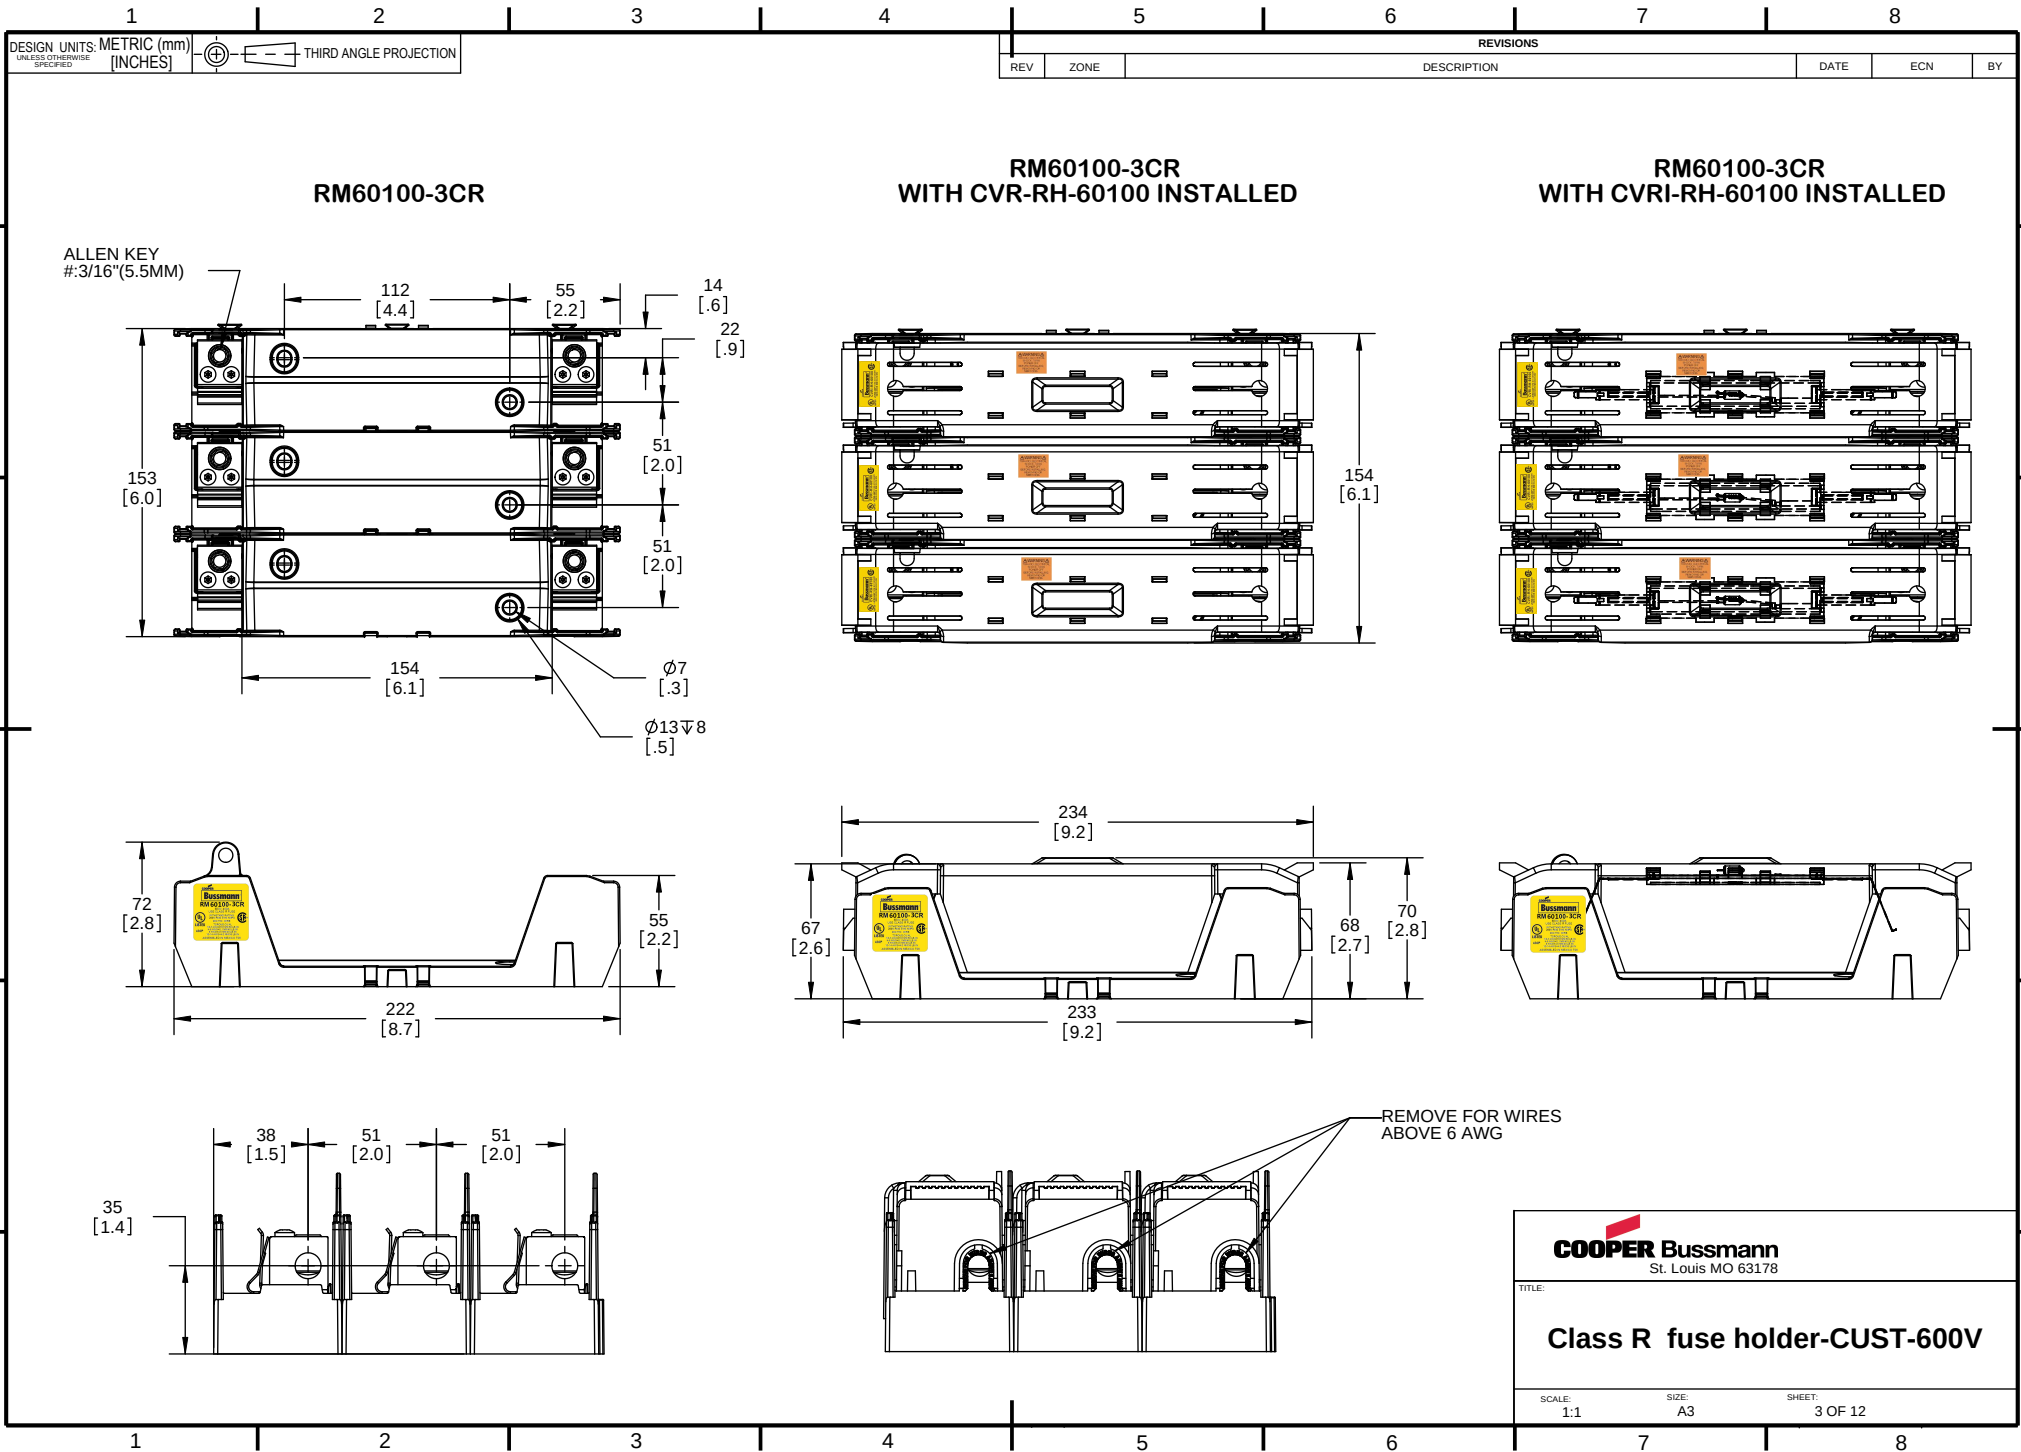



COOPER Bussmann
St. Louis MO 63178

TITLE:

Class R fuse holder-CUST-600V

  SCALE: 1:1
SIZE: A3
SHEET: 3 OF 12

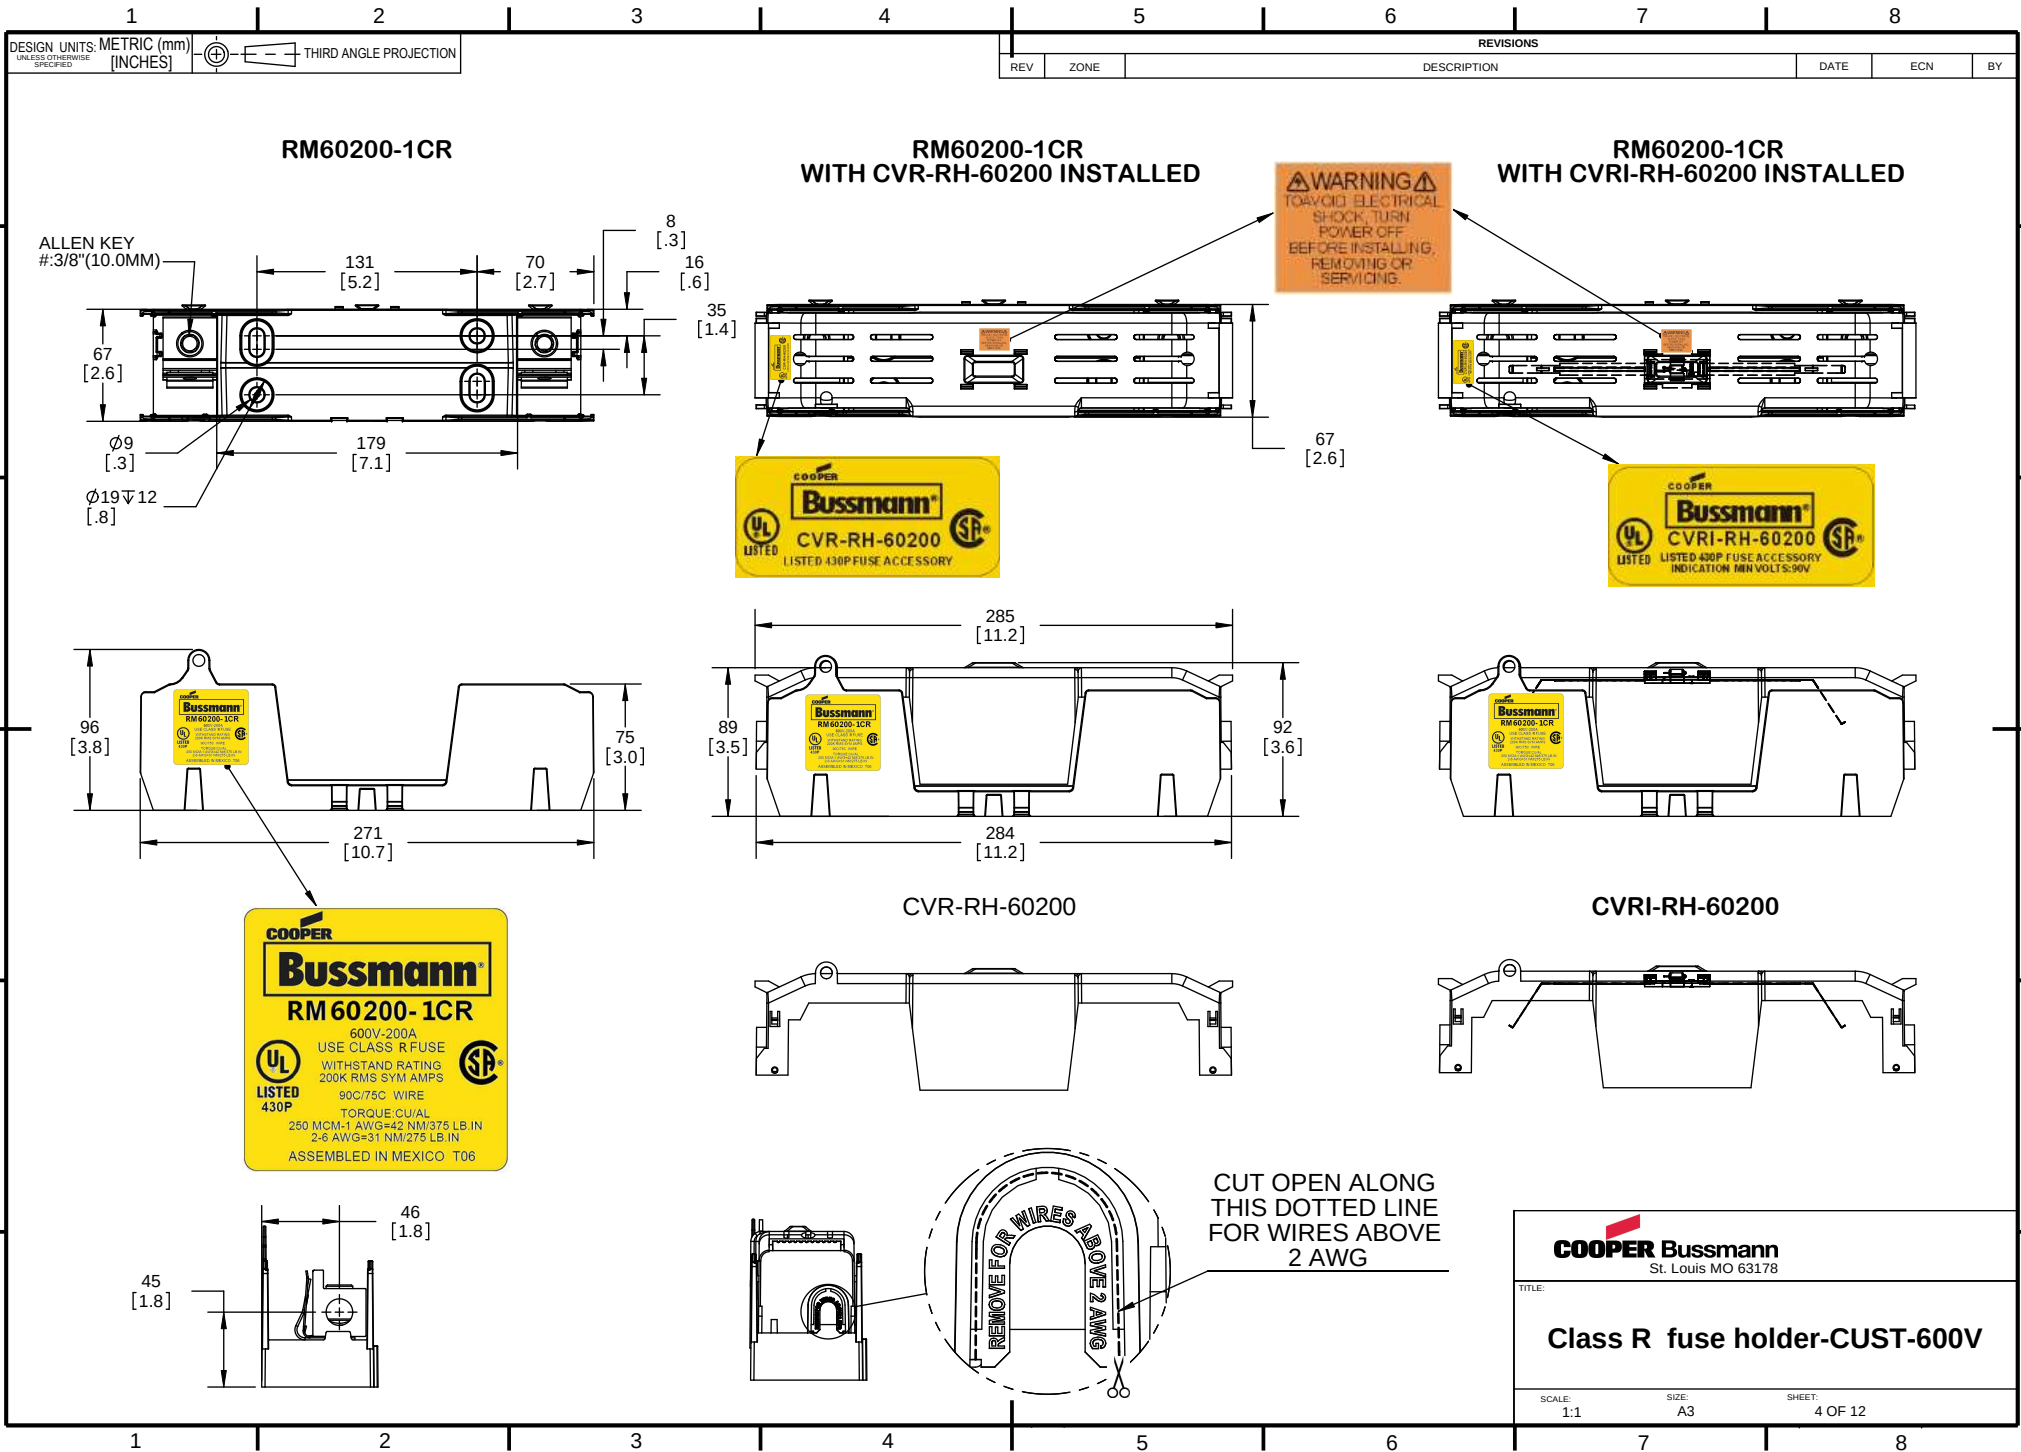


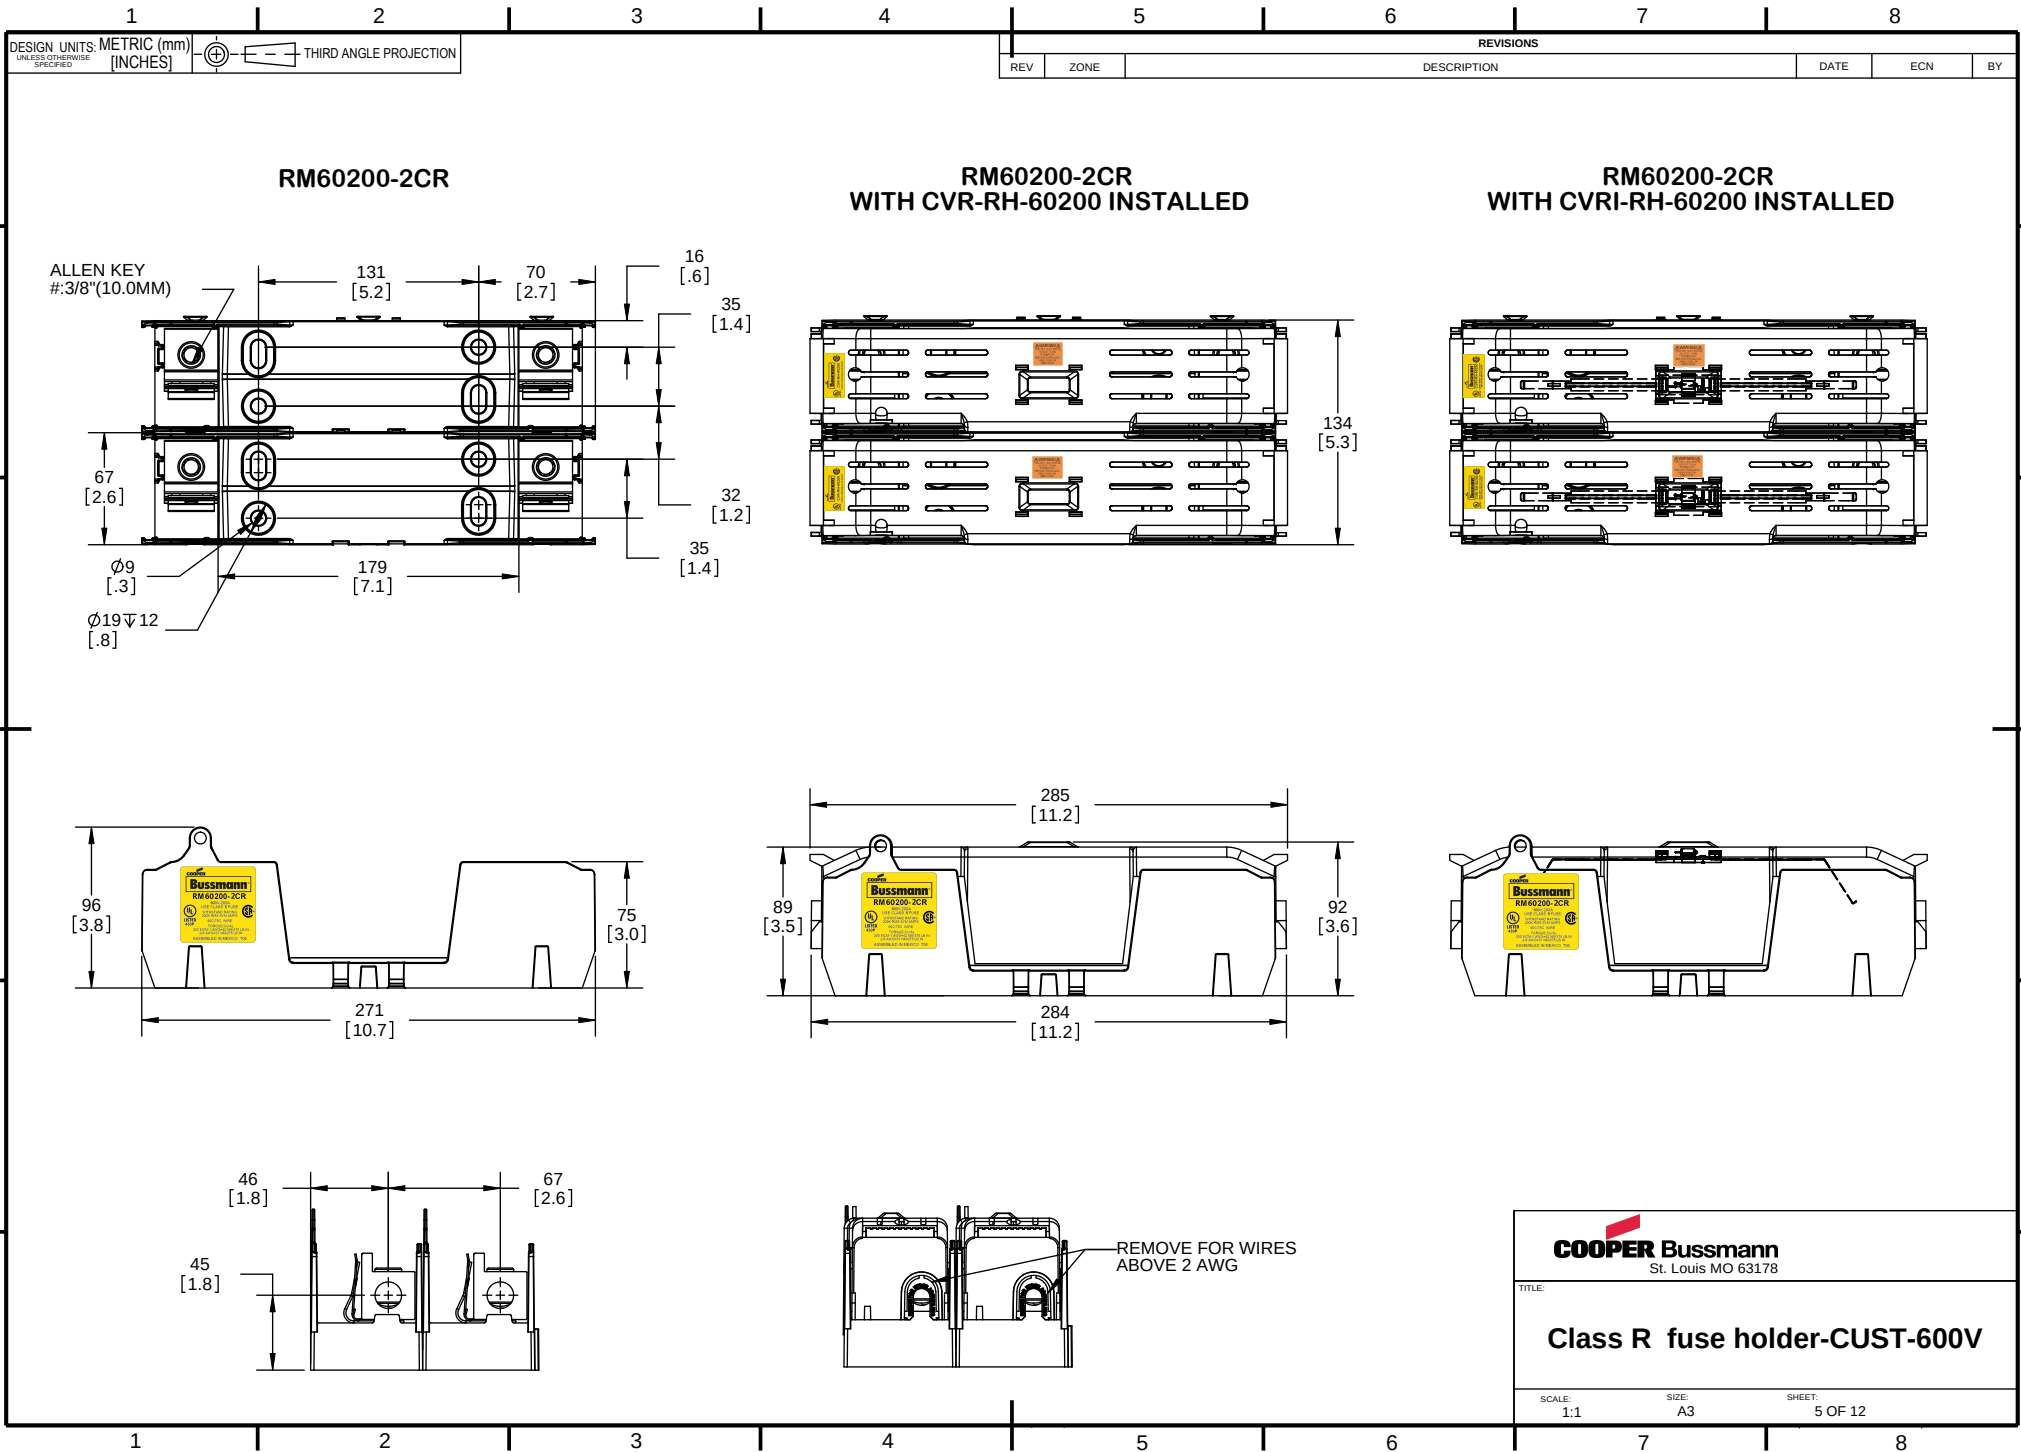

COOPER Bussmann
St. Louis MO 63178

TITLE: **Class R fuse holder-CUST-600V**

SCALE: 1:1	SIZE: A3	SHEET: 5 OF 12
------------	----------	----------------

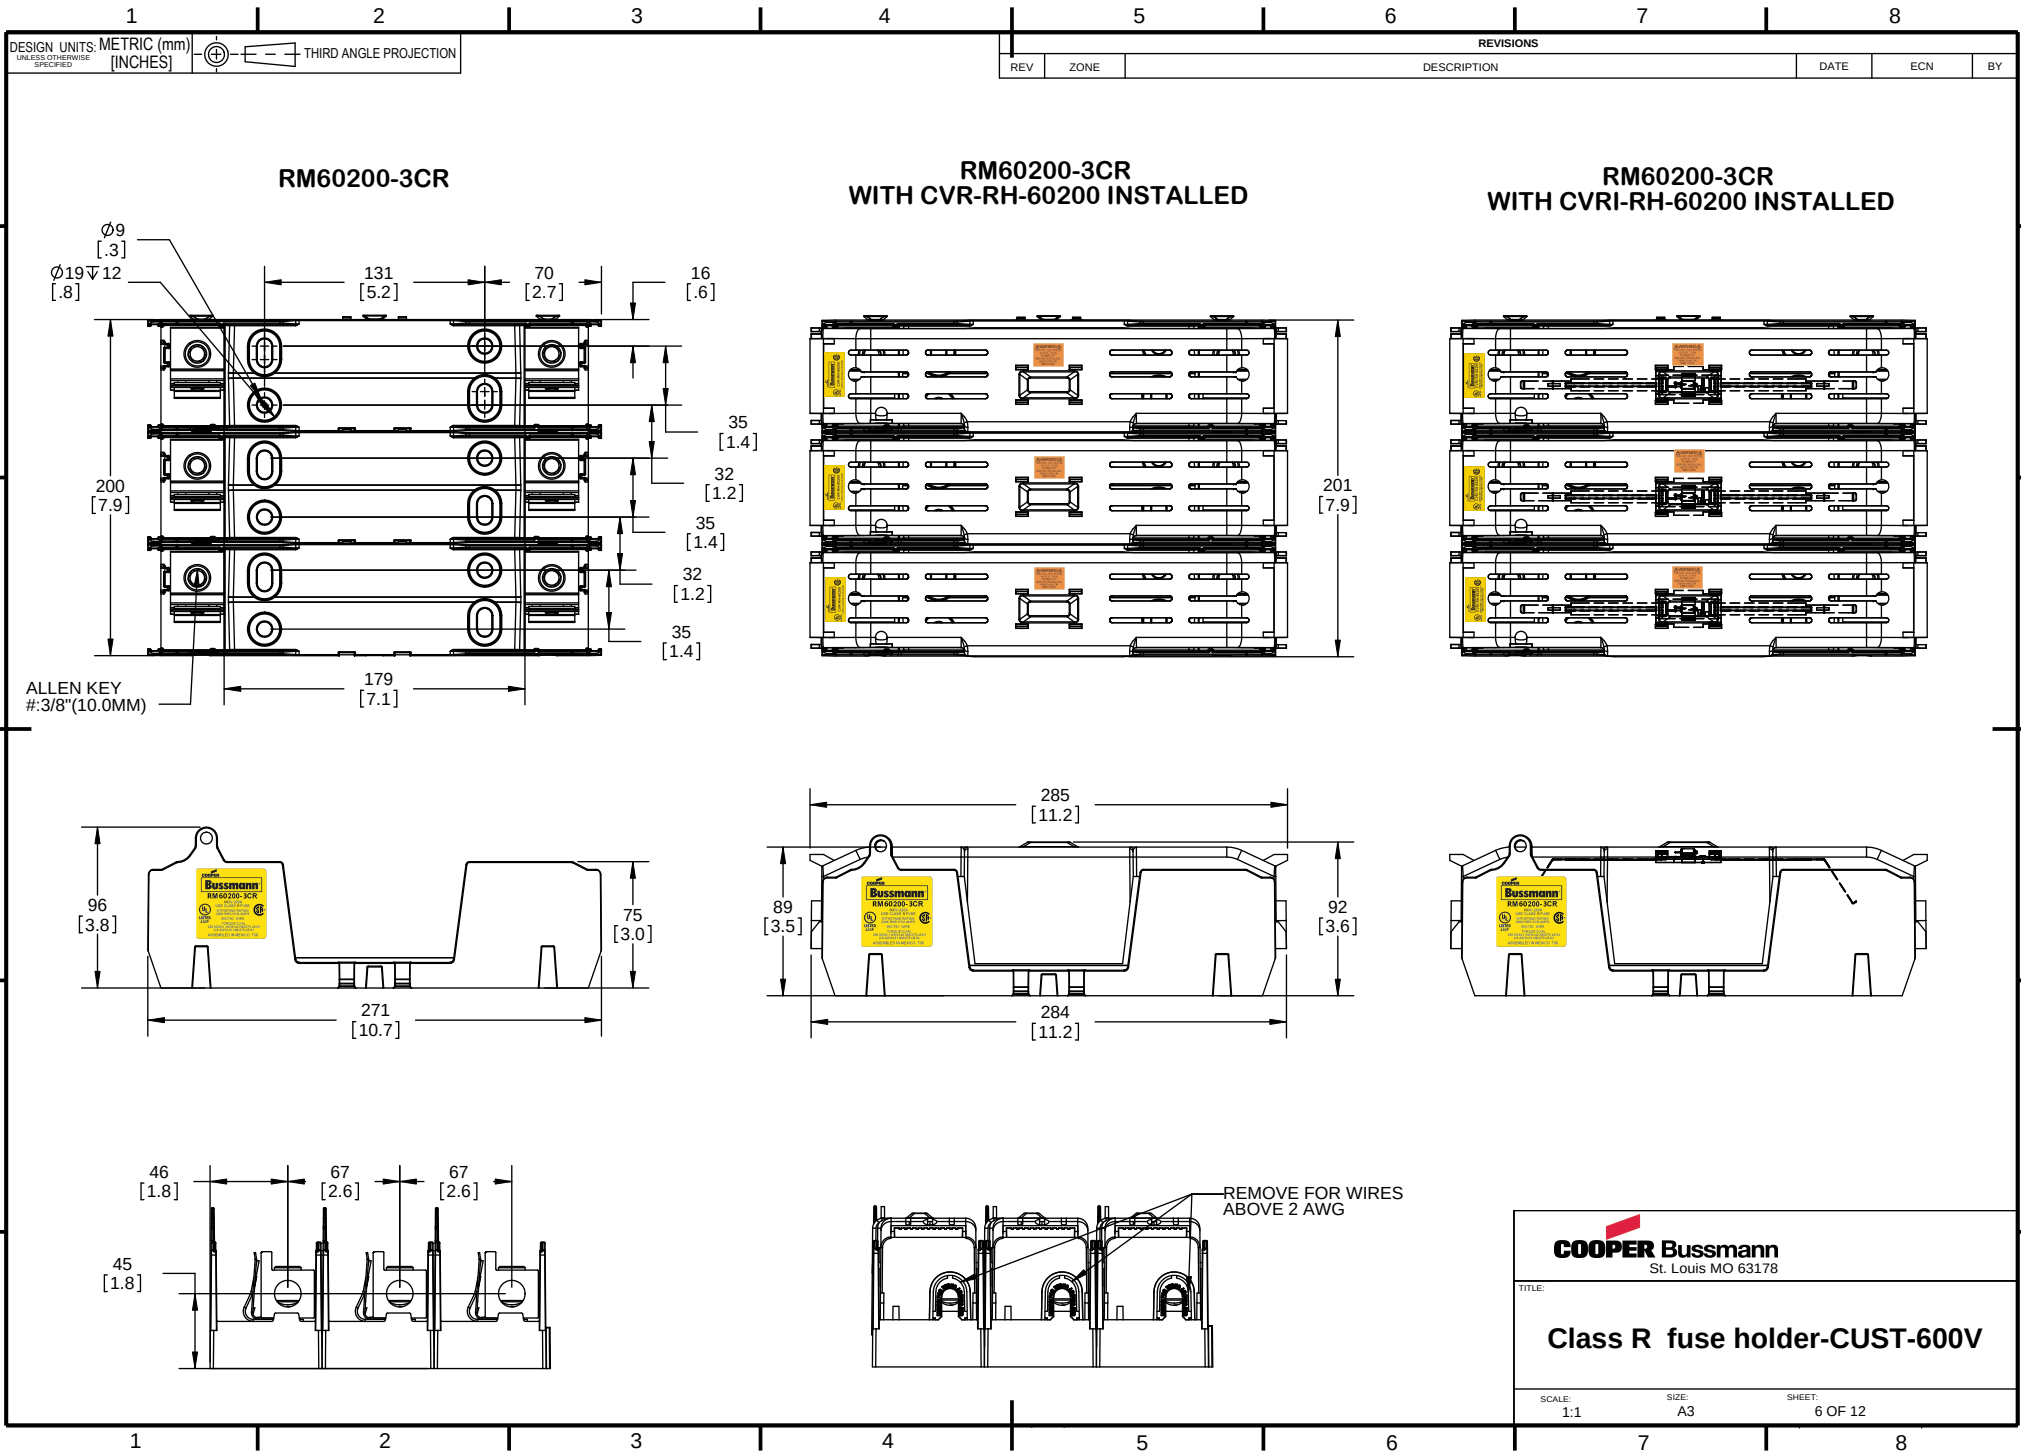 



COOPER Bussmann
St. Louis MO 63178

TITLE:

Class R fuse holder-CUST-600V

  SCALE: 1:1
SIZE: A3
SHEET: 6 OF 12

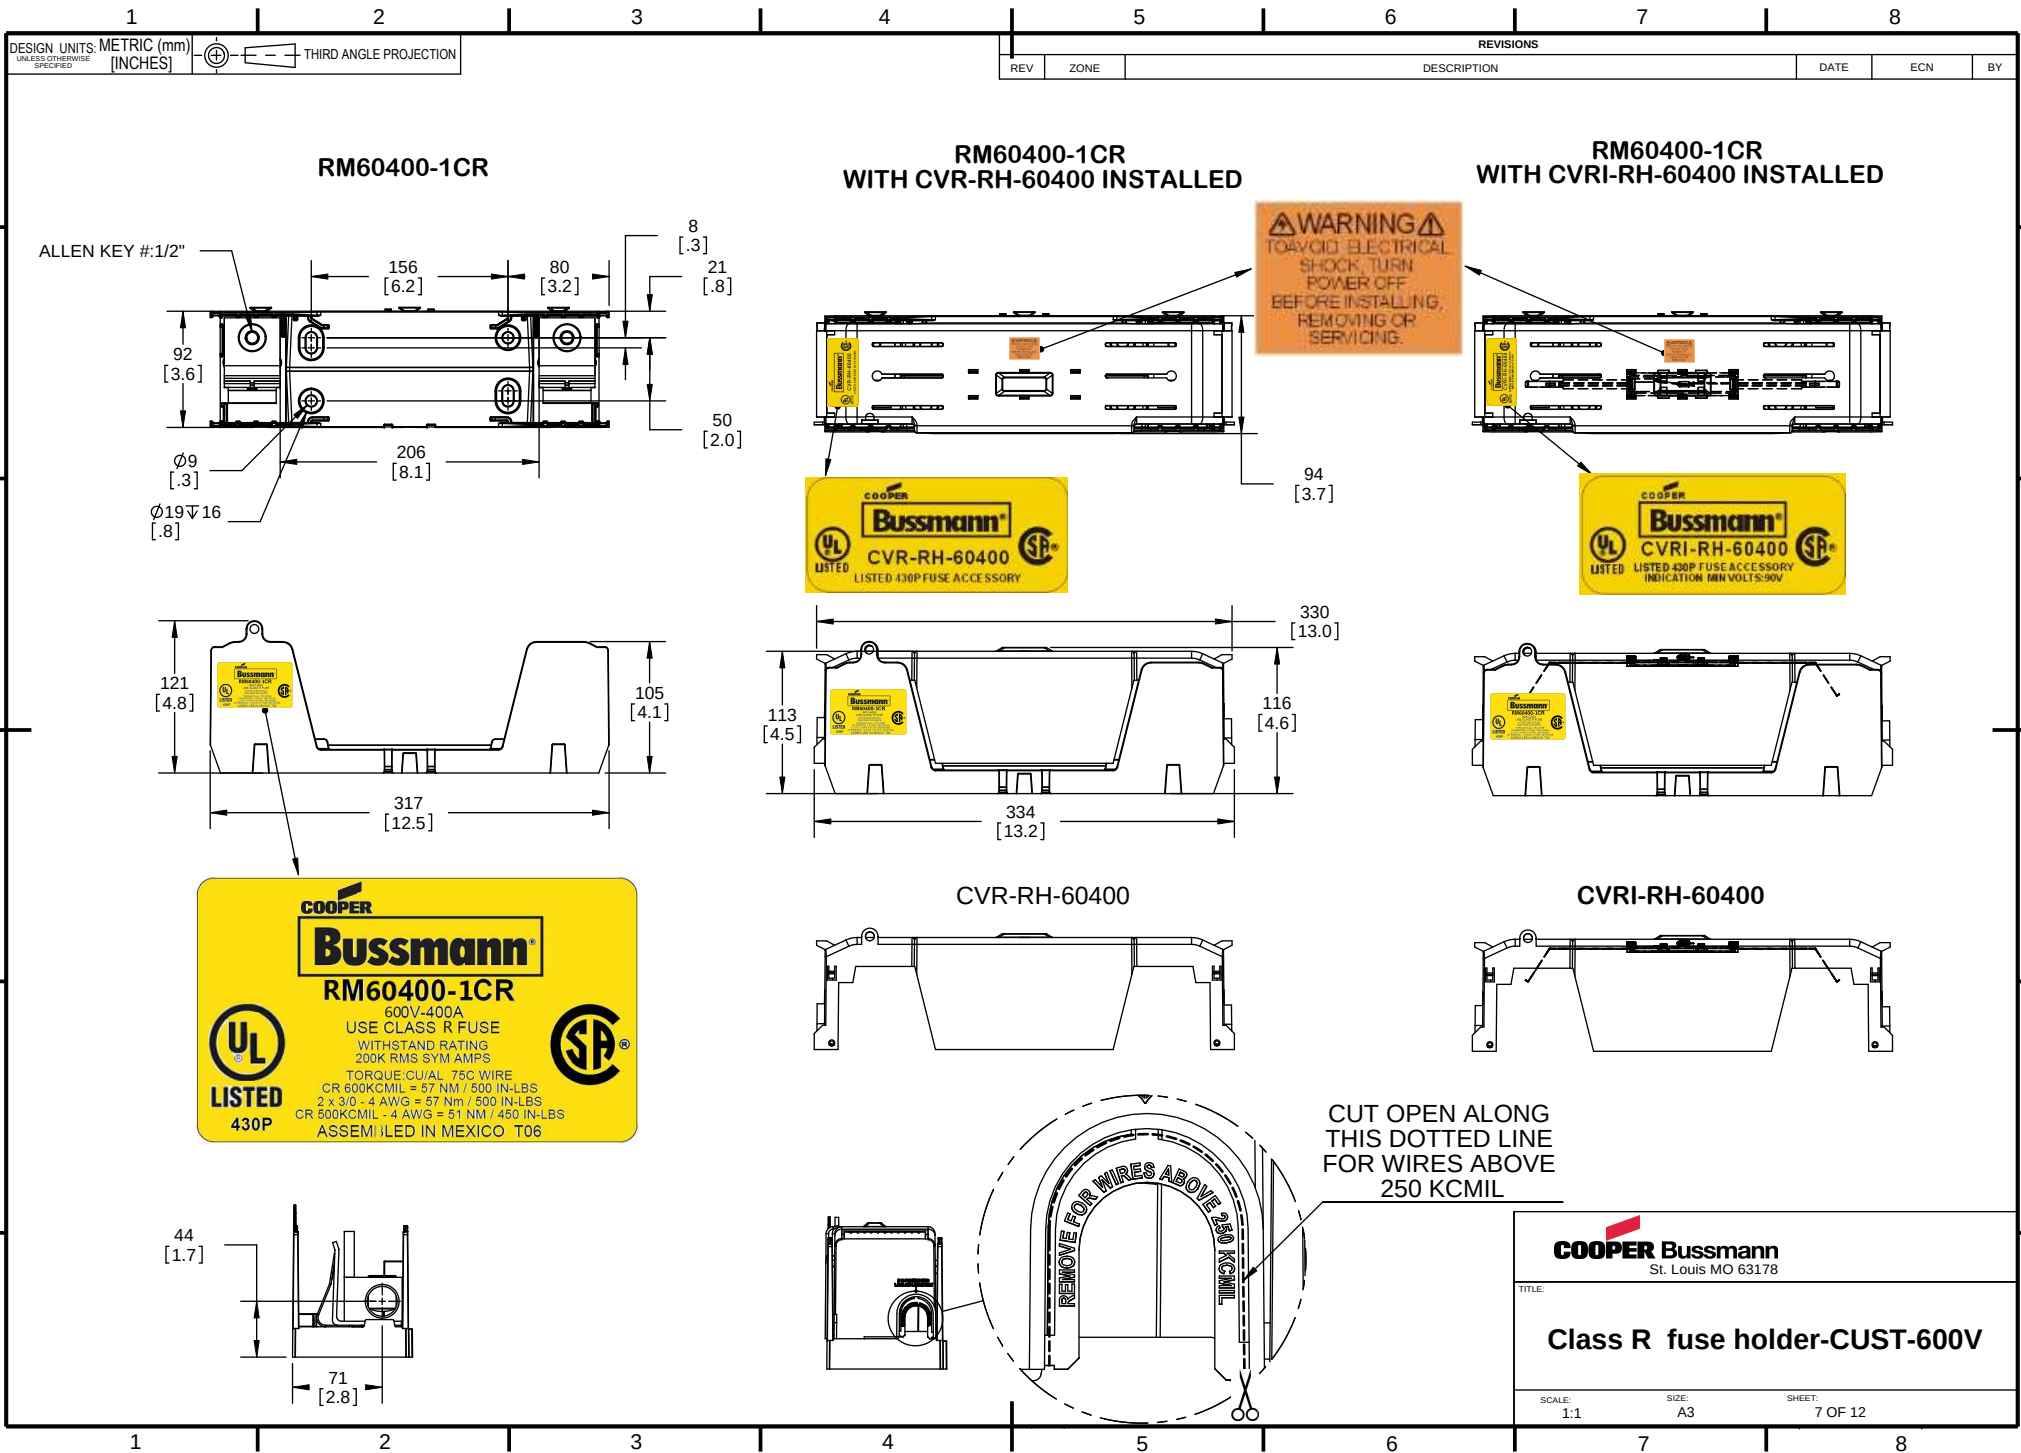

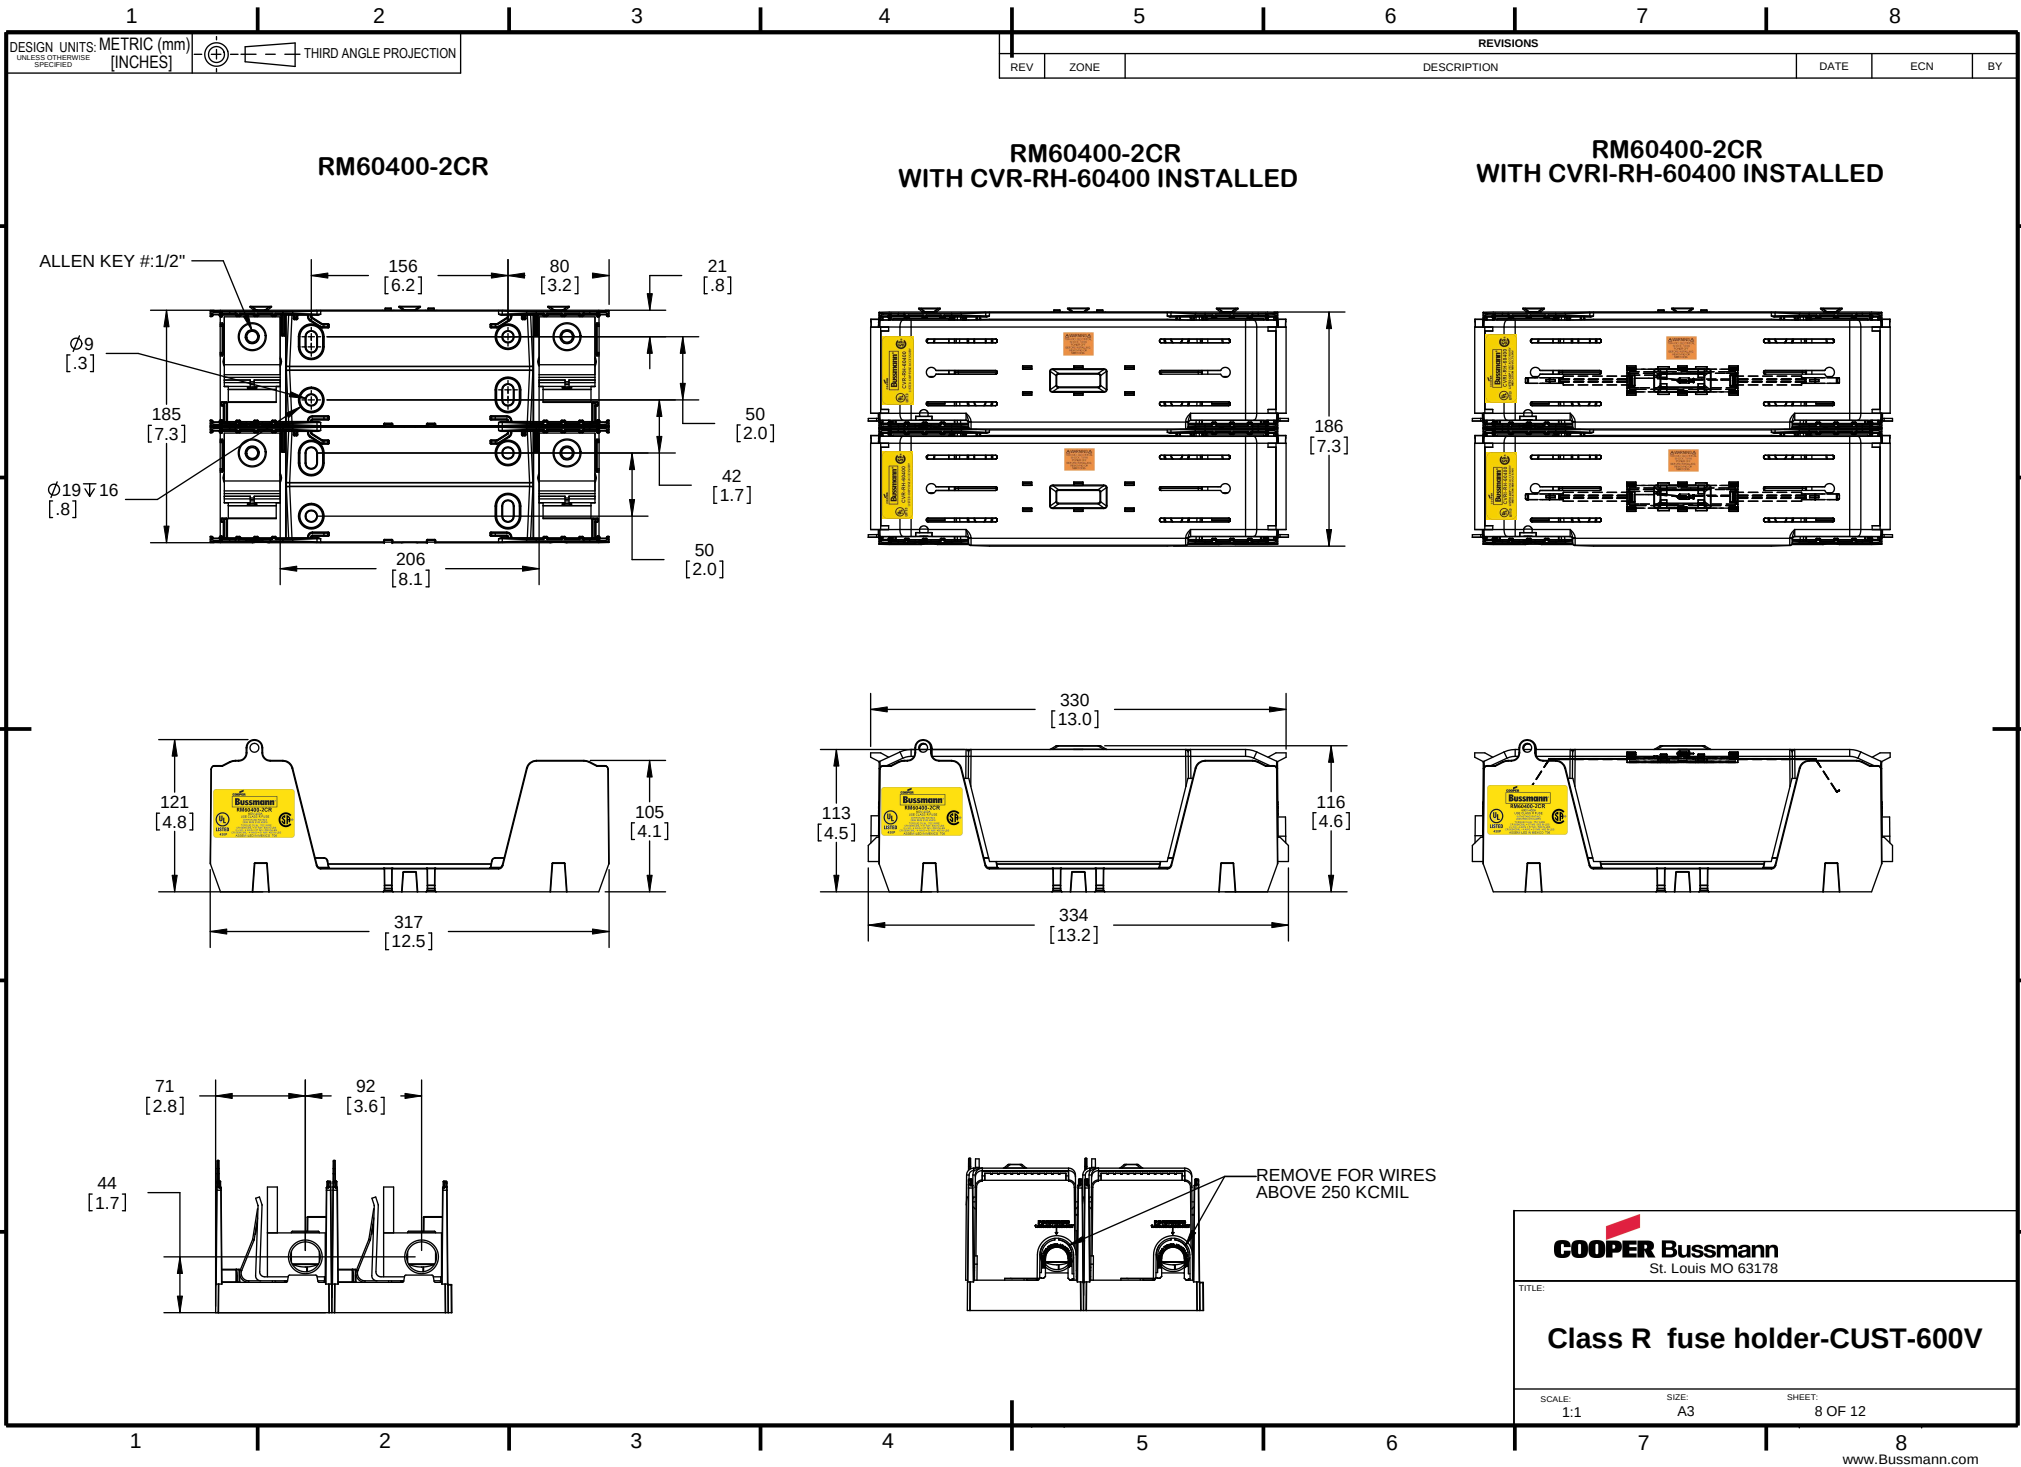



COOPER Bussmann
St. Louis MO 63178


TITLE:
Class R fuse holder-CUST-600V

SCALE: 1:1SIZE: A3SHEET: 8 OF 12

  
 
Drawing template A3 - Rev 05

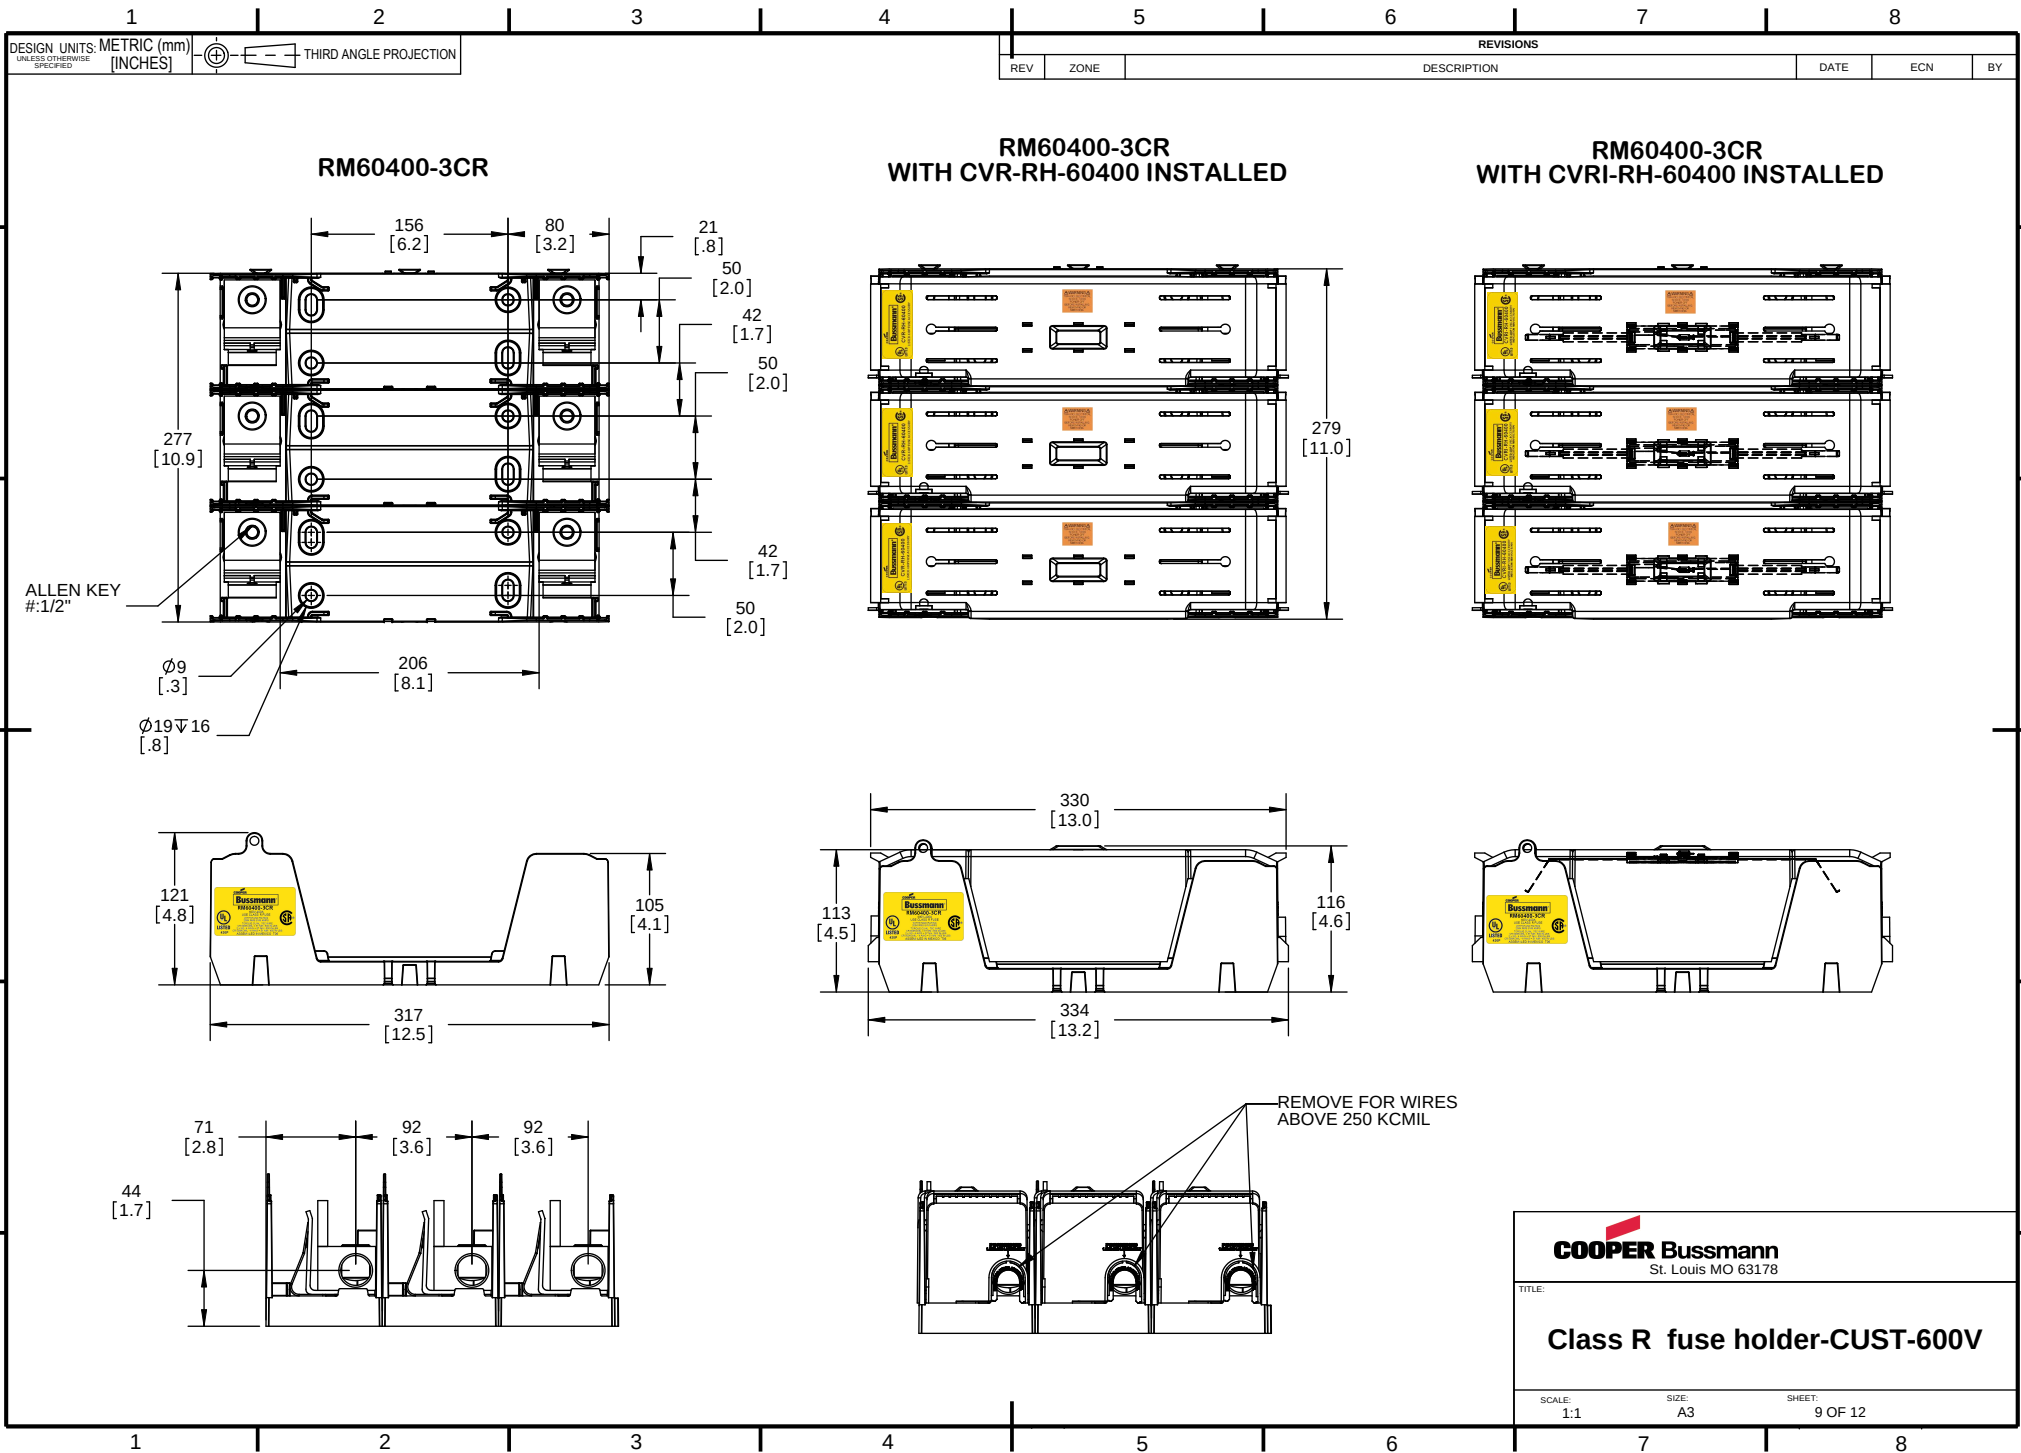

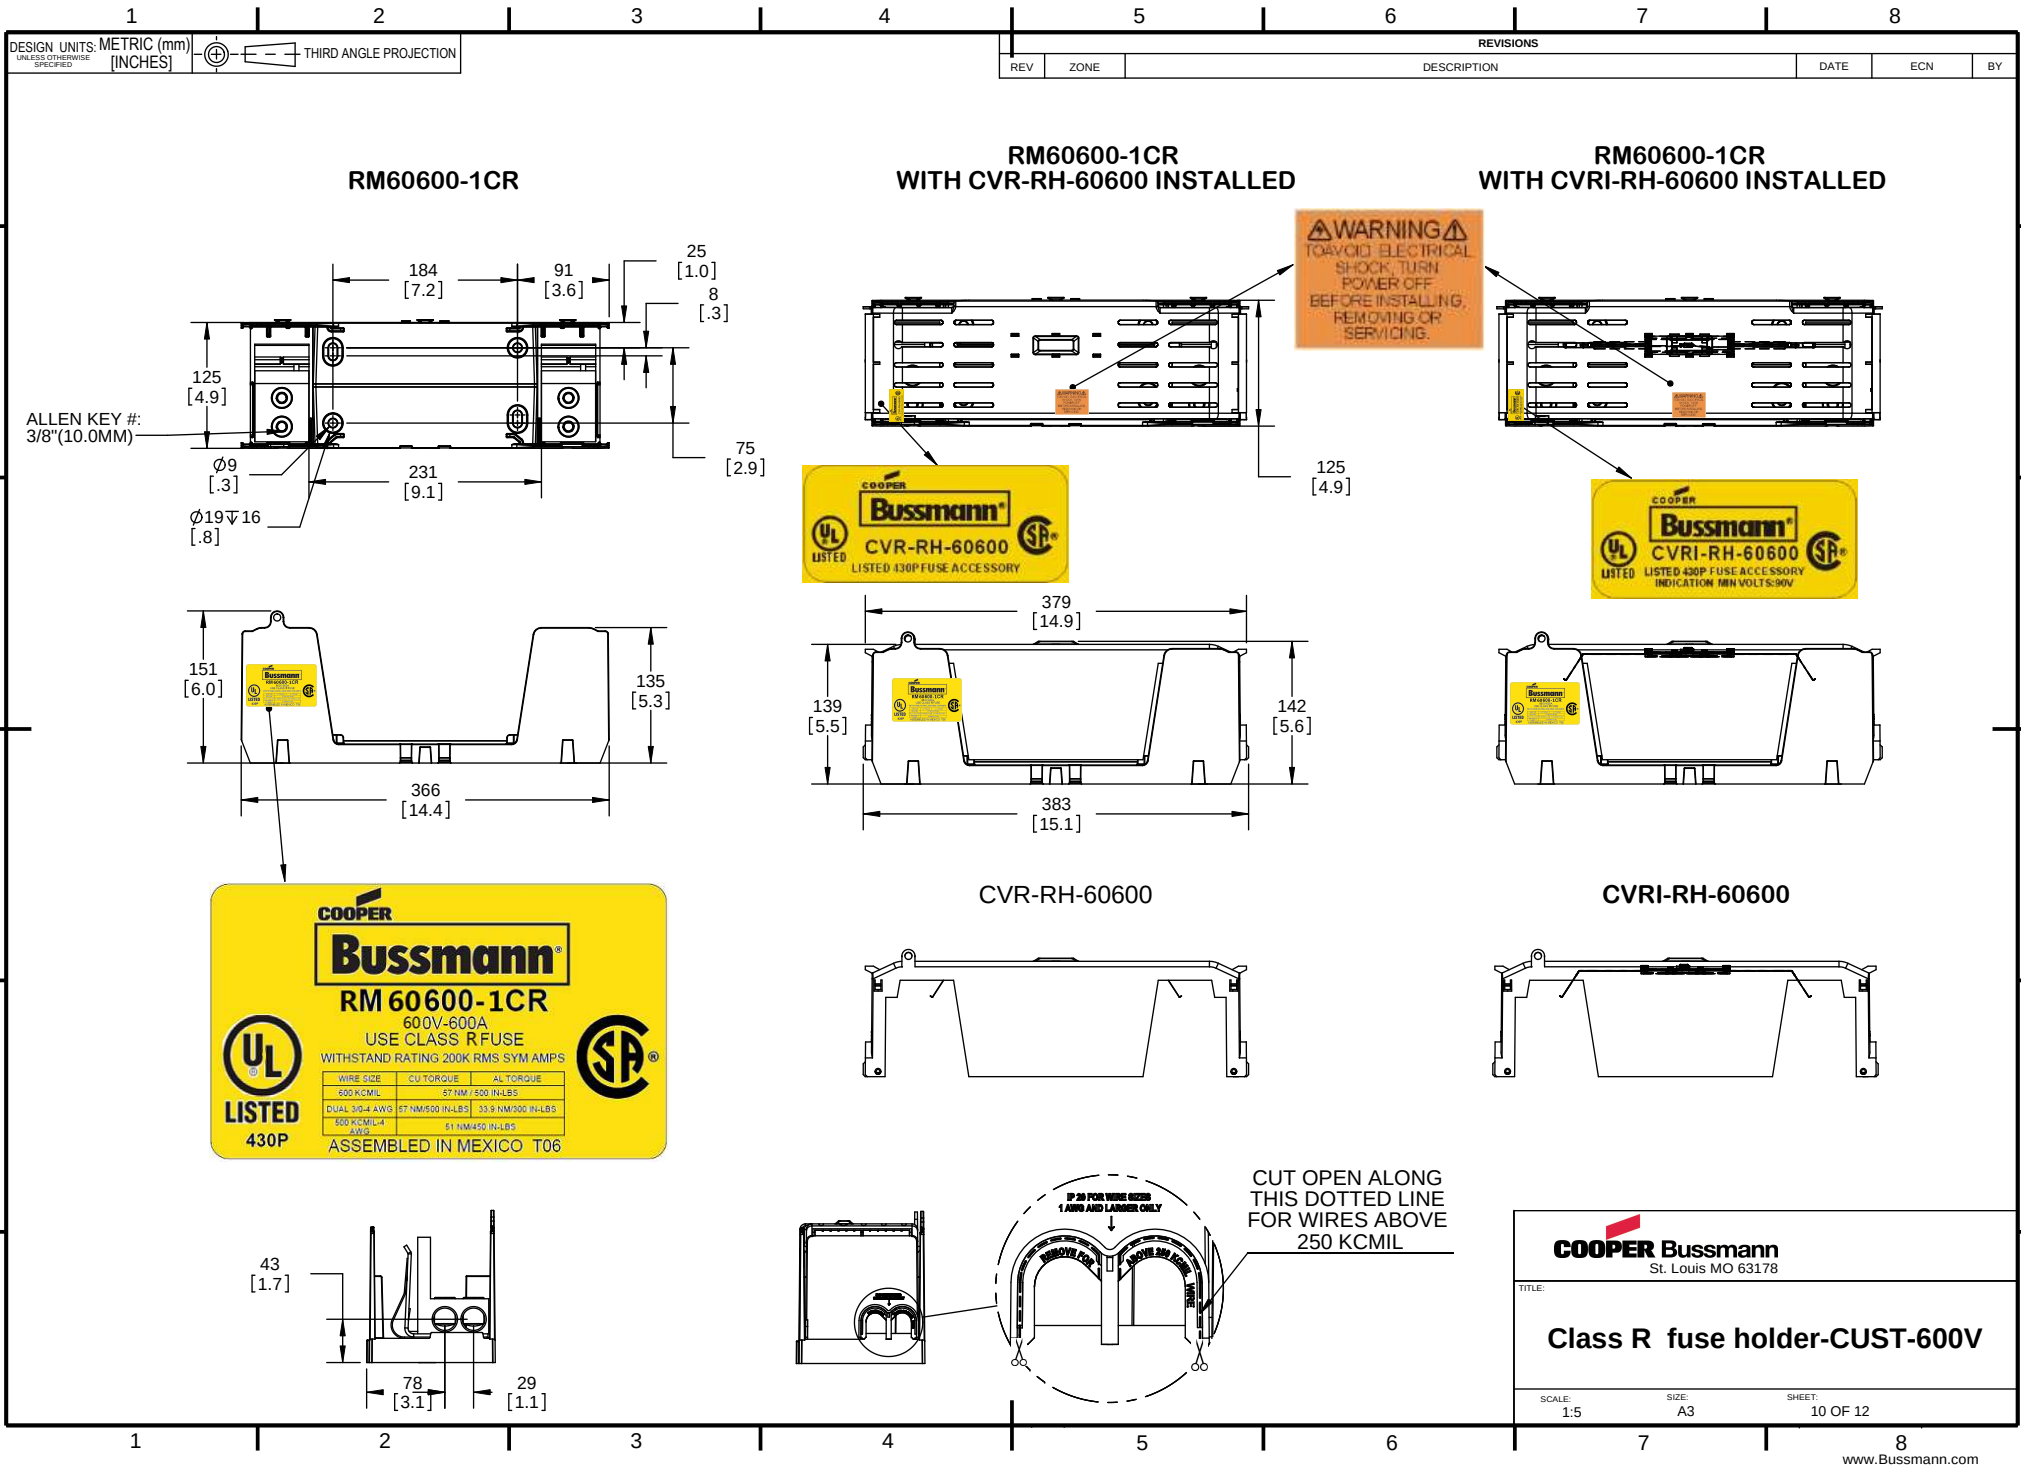

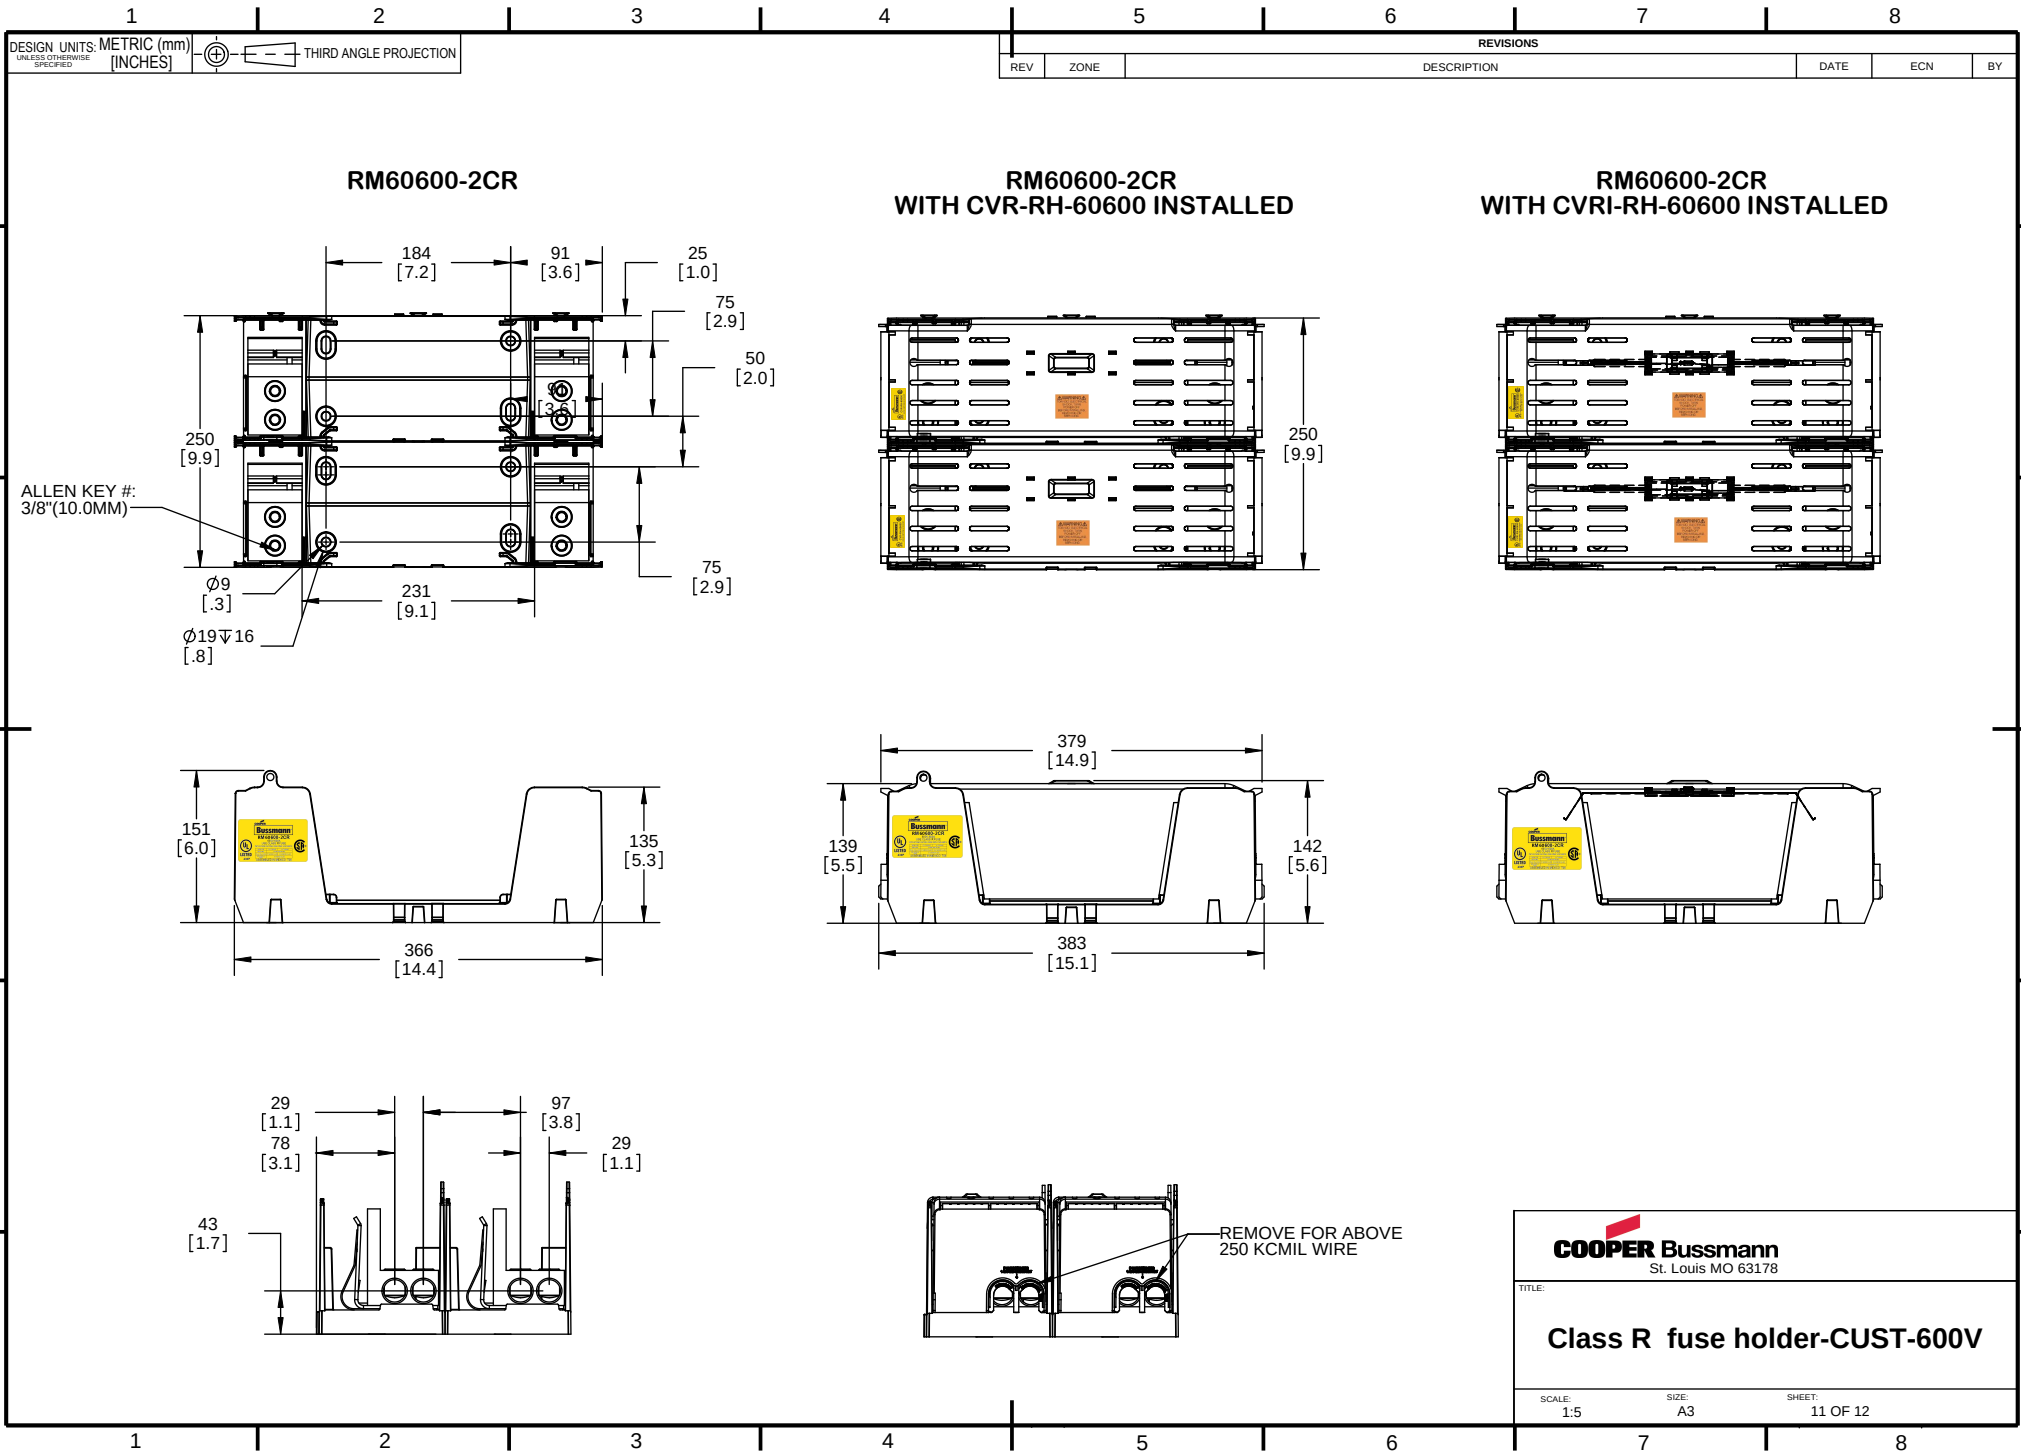

**RM60600-3CR
WITH CVRI-RH-60600 INSTALLED**

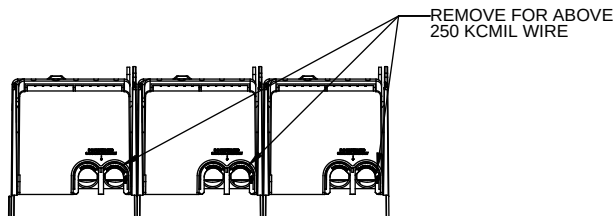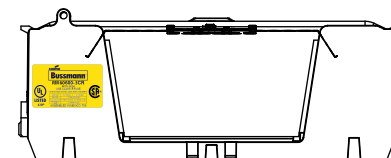  

COOPER Bussmann
St. Louis MO 63178

TITLE:

Class R fuse holder-CUST-600V

SCALE:
1:

SIZE:
A3

SHEET:
12 OF 12