









TERMINATIONS AND ADAPTERS

| TERMINATIONS AND ADAPTERS | | |
|---|--|---|
| Product | Features | Accessory For |
| 1N5339B Termination Device  | 5 W axial-lead ground-check termination. Included with SE-105 and SE-107. | SE-105 SE-107 |
| SE-TA6-SM Stud-Mount Termination Assembly  | 50 W ground-check termination that is robust and compact for submersible pumps. Wire lead simplifies installation. (Replacement for 1N4553B) | SE-105 SE-107 |
| SE-TA6 Termination Assembly  | 50 W ground-check termination with convenient mounting holes and screw terminals. | SE-105 SE-107 |
| SE-TA6A (PGA-0T6A) Termination Assembly  | Temperature compensated 50 W ground-check termination with convenient mounting holes and screw terminals. | SE-105 SE-107 SE-134C |
| SE-TA6A-WL Termination Assembly  | Temperature compensated 50 W ground-check termination with convenient mounting holes and screw terminals. | SE-105 SE-107 SE-134C |
| SE-TA6ASF-WL Small-Format Termination Assembly with Wire Leads  | Temperature compensated 12 W ground-check termination, ideal for use in cable-coupler end caps and submersible pumps. Mounting holes and wire leads. | SE-105 SE-107 SE-134C |
| SE-TA12A Termination Assembly  | Temperature compensated 50 W ground-check termination with convenient mounting holes and screw terminals. | SE-135 SE-145 |
| SE-TA12ASF-WL Small-Format Termination Assembly with Wire Leads  | Temperature compensated 12 W ground-check termination, ideal for use in cable-coupler end caps and submersible pumps. Mounting holes and wire leads. | SE-135 SE-145 |
| SE-TA12A-WL Termination Assembly  | Temperature compensated 50 W ground-check termination with convenient mounting holes and screw terminals. | SE-135 SE-145 |
| SE-TA12A SE-TA12B Termination Assemblies  | Used together to allow an SE-134C to monitor a splitter box and two cables. | SE-134C |
| PPI-600V Parallel Path Isolator  | Parallel ground-path rejection for ground-check monitors. Eliminates intermachine arcing and prevents stray DC currents from flowing in a monitored ground wire. | SE-105 SE-107 SE-134C SE-135 |
| RK-13 Relay Interface Module  | Separate ground-fault and ground-check indication contacts for the SE-105, and separate ground-fault and resistor-fault contacts for the SE-325. Used to provide output to a PLC and operate standard pilot lights. Complete with conformally coated circuit boards. | SE-105 SE-107 SE-325 |
| SE-485-DIN Industrial RS-485 to RS-232 Converter  | Industrial network quality RS-485 to RS-232 serial converter. DIN-rail mounted, 24 Vdc required. | MPS FPS |
| SE-485-PP Port-Powered Serial Converter  | Converts an RS-485 signal to an RS-232 signal. Used for set-point programming and updating flash memory. 115.2 kbit/s maximum transfer rate. | MPU-32 MPU FPU-32 FPS |
| CA-945 Serial Connector Adapter Kit  | Connects an RJ45 to a 9-pin serial connector. Includes 1.5 m cable and plug-in adapter. | MPU-32 FPU-32 |
| SE-ICUSB232 USB to RS-232 Converter  | Connects a 9-pin serial cable to a USB port. | SE-330 SE-330AU SE-485-PP CA-945 SE-330HV SE-485-DIN |

TERMINATIONS AND ADAPTERS

| TERMINATIONS AND ADAPTERS | | |
|--|---|--------------------------|
| Product | Features | Accessory For |
| A0033 Detector Cable  | Extension cable for the A0200 and A0300 sensors. | D0900 |
| AC700-CUA Communications Adapter  | Optical network-interface and firmware-upgrade communication adapter. Field-installed. | EL731 |
| D0400 Junction Box (No Indication)  | Junction box without indication, for parallel connection of more than 2 sensors for one relay. Designed to connect up to 8 sensors. | D0900 |
| D0500 Junction Box (Indication)  | Junction box with indication, for parallel connection of more than 2 sensors for one relay. Designed to connect up to 8 sensors. | D0900 |
| E5540 USB Cable | USB Cable with A/Mini-B plug (2 m). | E5000 |
| G0100 Programming Kit  | Connects to RS232 port. Includes blank front-plate labels and permanent pen for texting scales. | G2000 G3000 G3300 |
| K 3452 &K3450 RS232 Cable  | For configuration from PC. | M2000 |
| K1025 USB A-B Cable  | USB A to B cable. | M2500 |
| T4910 Potentiometer with Cable  | For external power factor setting. External contact between terminals 12 (COM) and 28 (PF ON). Included. | T4900 |