

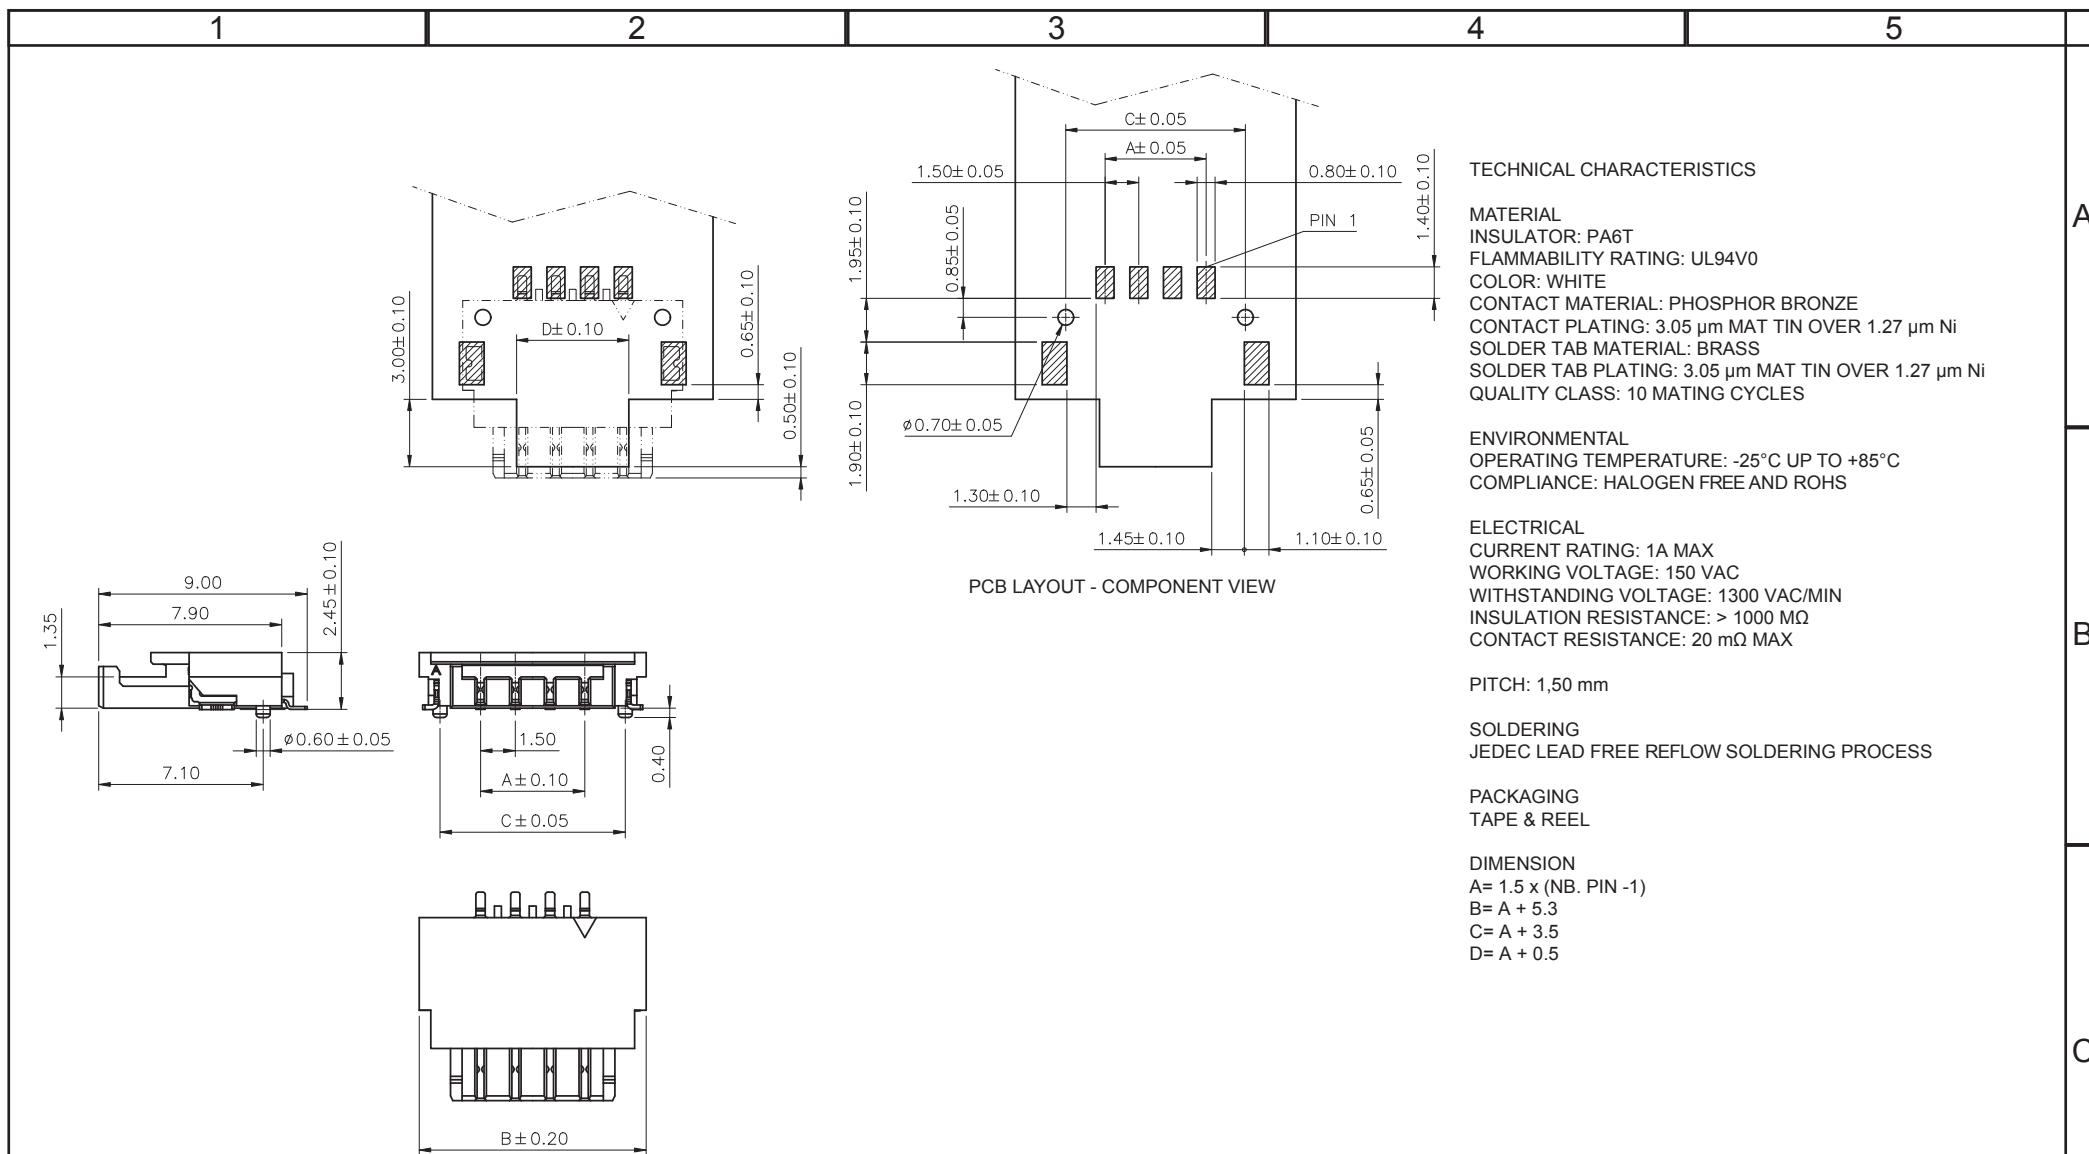

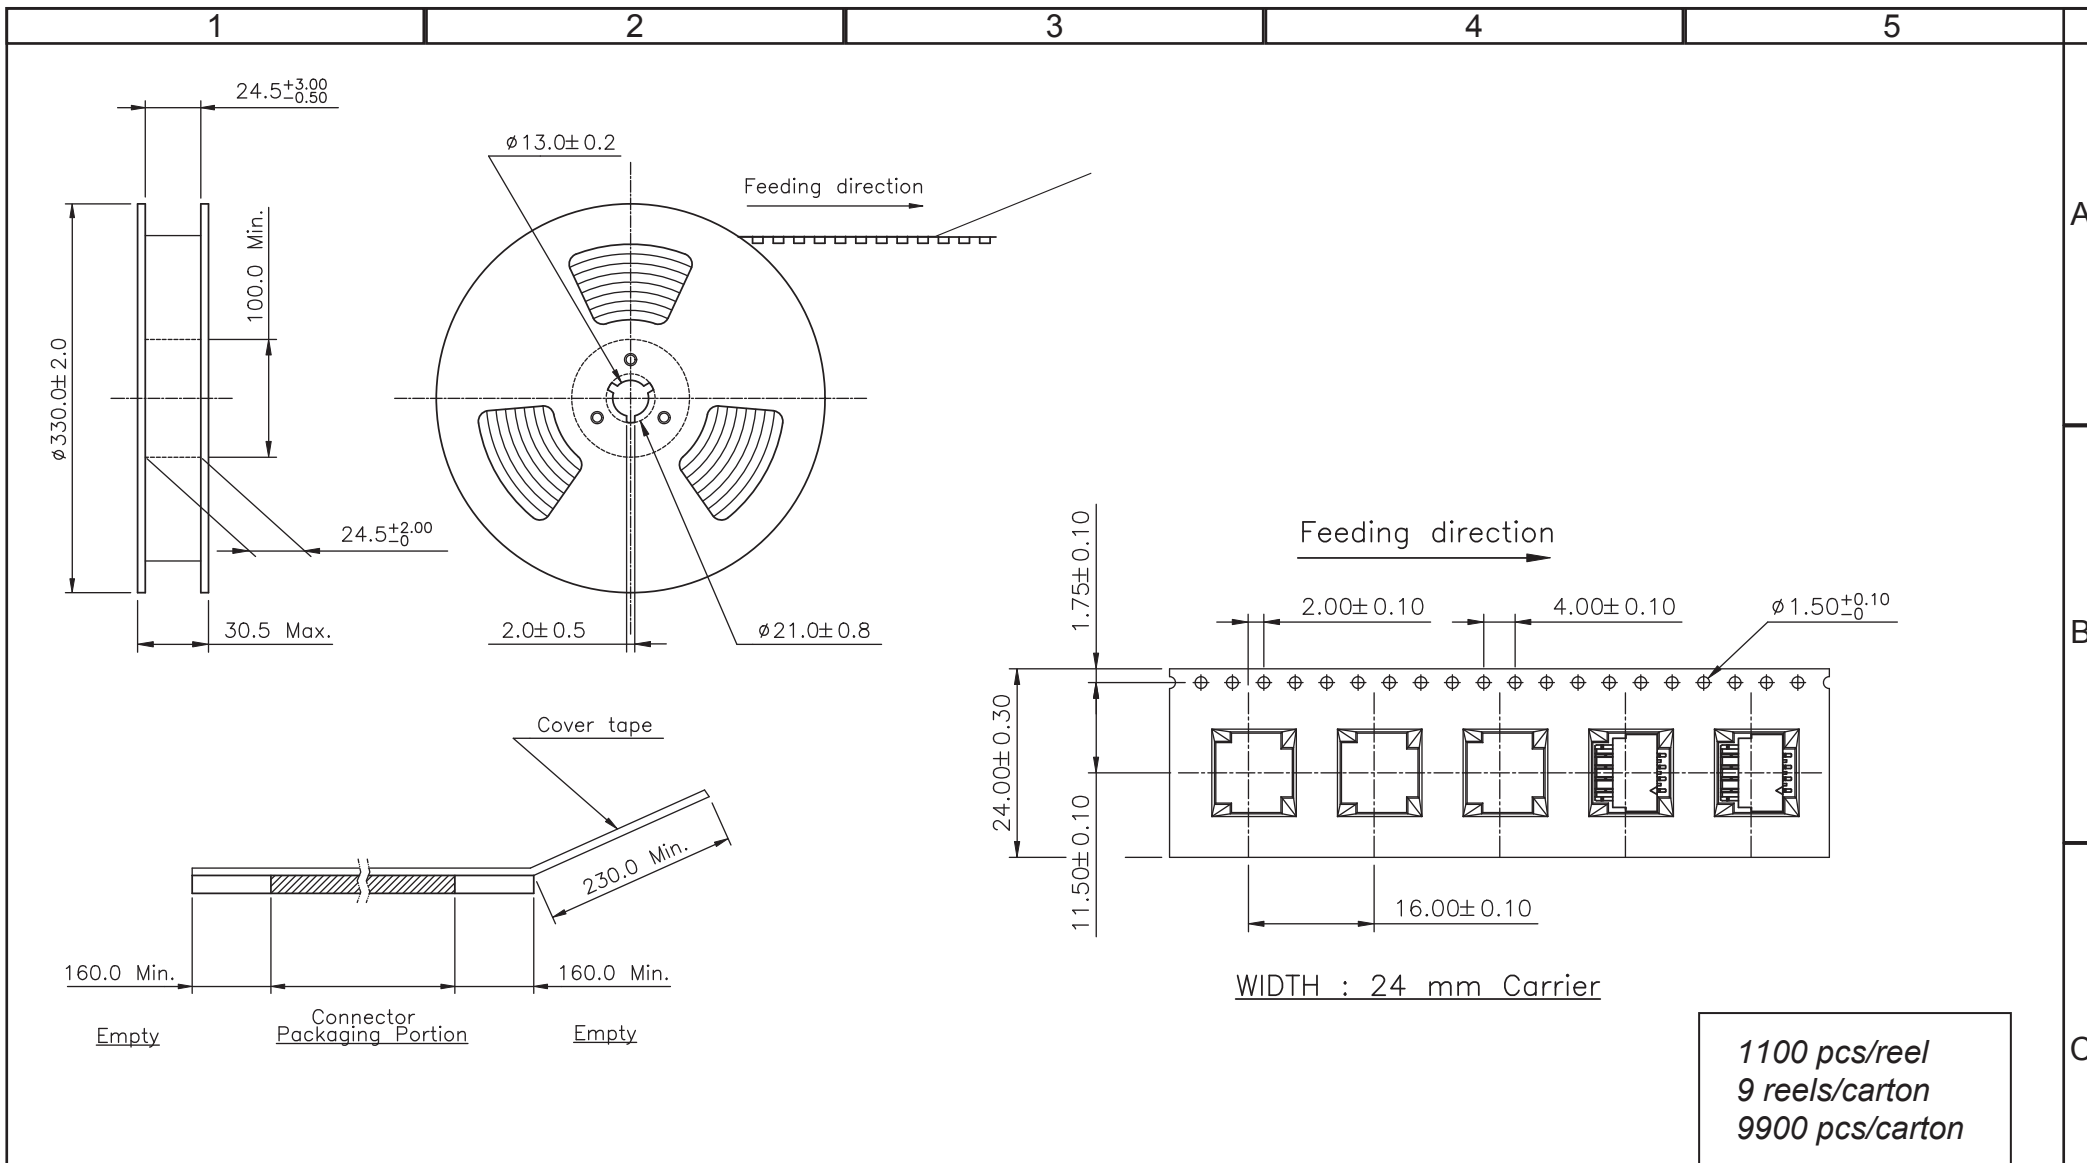
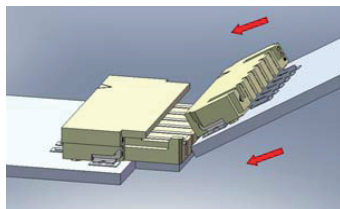
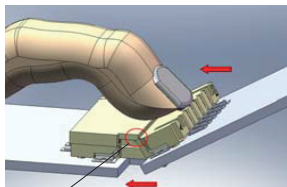
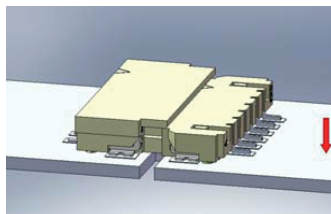
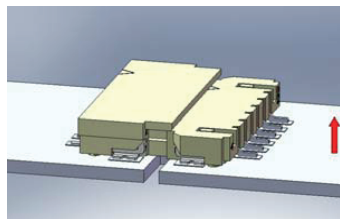
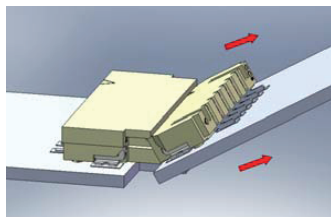
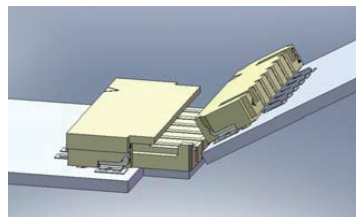


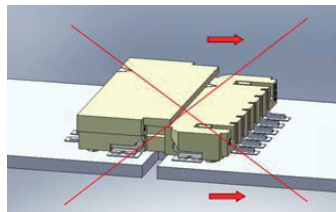


RoHS Compliant				PROJECTION: 	GENERAL TOLERANCE .X = +/- 0.2 .XX = +/- 0.15	 WÜRTH ELEKTRONIK		DESCRIPTION: BtB 1.50MM PITCH RECEPTACLE HORIZONTAL WERI PART NO: 695 4xx 151 122	SIZE A4
F									
E									
D									
C	20-OCT-15	QUALITY CLASS	AK	APPROVAL: GMo	UNIT: MM				
B	07-OCT-15	LAYOUT	AK		SCALE:				
A	17-JUN-15	PDF	AK		SHEET: 1/4				
REV	DATE	FILE	BY		DRAW: AK				

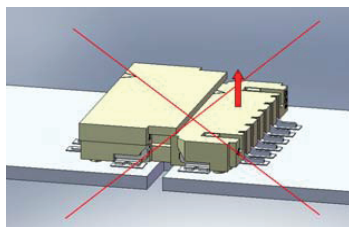

RoHS Compliant							
				PROJECTION: 	GENERAL TOLERANCE .X = $\pm$ 0.2 .XX = $\pm$ 0.15		
F							
E							
D							
C				APPROVAL: GMo	UNIT: MM	DESCRIPTION: BtB 1.50MM PITCH RECEPTACLE HORIZONTAL	SIZE
B					SCALE:		
A		PDF			SHEET: 2/4	WERI PART NO: 695 4xx 151 122	
REV	DATE	FILE	BY		DRAW: AK		

	1	2	3	4	5	
Mating	Step 1: The male header should be tilted during insertion.  Female Male	Step 2: Push the male header to the end. Make sure the male header is under the rib of female header by finger.  Female Male	Step 3: Press down the male header down vertically to finish the connection.  Female Male		A	
Unmating	Step 1: Lift the male header up at 30°~60°.  Female Male	Step 2: Remove male header at an angle to finish the disconnection.  Female Male	Step 3: Finish  Female Male		B	
	Please do not separate the connectors horizontally to prevent damaging them.  Female Male	Please do not separate the connectors vertically to prevent damaging them.  Female Male			C	

RoHS Compliant				PROJECTION:	GENERAL TOLERANCE		
F					.X = ± 0.2		
E					.XX = ± 0.15		
D							
C							
B				APPROVAL: GMo	UNIT: MM	DESCRIPTION: BtB 1.50MM PITCH RECEPTACLE HORIZONTAL	SIZE A4
A		PDF			SCALE:	WERI PART NO: 695 4xx 151 122	
REV	DATE	FILE	BY		DRAW: AK		

