



Step 1 Cut Ribbon Cable to Desired Length

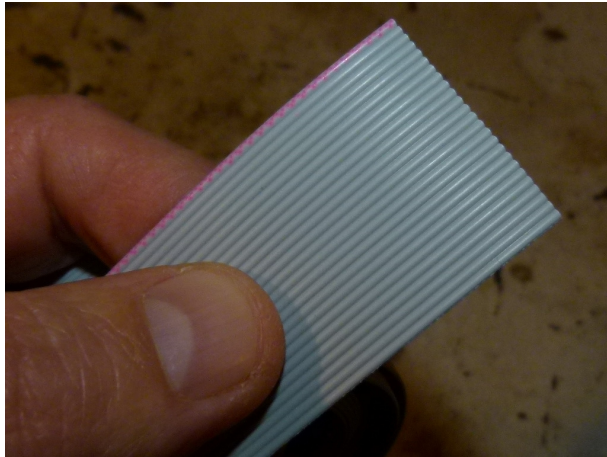

Step 2 Cut Ribbon Cable to Desired Width

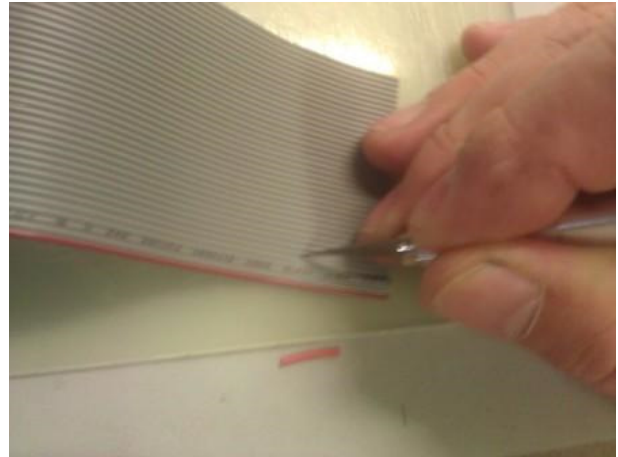

Step 3 Place IDC Connector on the cable and close it all the way to assure proper connection

