


Thin Film Pyroelectric Linear 255 Element Line Sensor Array


With Integrated Read-Out Electronics

Introduction

The Pyreos line sensor array utilises our unique thin-film pyroelectric PZT material to offer performance with unbeatable resolution, with the potential to capture all wavelengths of light and performance across a wide wavelength range. The ASIC readout electronics output is a multiplexed, amplified and filtered analogue signal for each sensor element. The sensor is housed in a low profile hermetic metal package along with a temperature sensor and is fitted with the customer's choice of filter window.

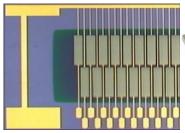



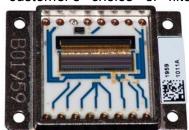


| Product Features | | | | | |
|-----------------------|---|--|--|--|--|
| Wavelength range | 0.1 to 100 μm | | | | |
| Operating temperature | Un-cooled operation | | | | |
| Number of pixels | 255 sensor elements | | | | |
| Pixel sizes | 50 μm x 417.5 μm pixels in 2 lines of 128 pixels NO spectral gaps – all wavelengths captured! Vertical separation between lines: 45 μm In line pixel pitch:100 μm | | | | |
| Response uniformity | >+/-3% pixel to pixel of array signal mean | | | | |
| Pixel operability | 96% with no more than 2 bad pixels in any 10 | | | | |
| Dynamic range | >75 dB | | | | |
| Scan speed | 10-1000 Hz | | | | |

| Applications | | | |
|------------------------|---|--|--|
| IR | Portable robust spectral | | |
| spectroscopy | engines | | |
| Medical | Breath, blood and urine | | |
| diagnostics | analysis | | |
| Laser line calibration | Temperature measurement | | |
| Process monitoring | Wind turbine, petrochemical, pharmaceutical | | |
| Terahertz imaging | Near IR InGaAs replacement | | |
| Security | Optical telecom channel | | |
| screening | monitoring | | |

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com



Package Information

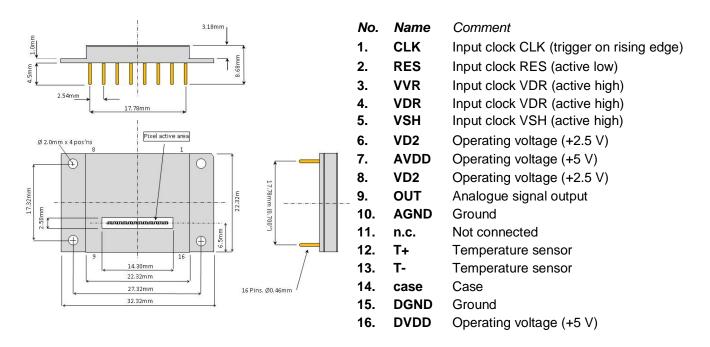


Connect pin 6 to pin 8

Please remember to take ESD precautions when handling components

Circuit Diagram

The amplification circuit consists of low-noise preamplifiers for each individual sensor elements, analogue switches and an output amplifier. The pre-amplifiers transform the signal charges measured at each sensor element into a conditioned voltage. The amplified signal is then passed to sample and hold, multiplexer output buffer for the read-out process. The digital inputs are CMOS compatible. A 10k NTC thermistor is integrated within the package to monitor the line sensor temperature.

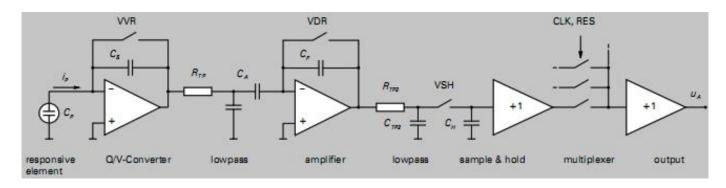

Thermistor is NTC, 1%. For more details check ERTJZEG103FA Datasheet on Industrial Panasonic website.

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com



Clock Parameters

Similar to all pyroelectric sensors, the Pyreos thin-film pyroelectric line sensor array responds to and detects a change in infrared radiation intensity. It therefore requires a pulsed source of infrared radiation for measurement purposes.


| Parameter ¹ | Relative Value | Min. Values | Recommended Value |
|---|----------------------|-------------|-------------------|
| Chopping Frequency ² f _{Ch} | | 10 Hz | 128 Hz |
| Read-out Clock CLK f _{CLK} = 2* f _{Ch} *268 | 1/t _{CLK} | 5.36 KHz | 69 KHz |
| Reset clock low-impulse duration t _{RES} | 1/2 t _{CLK} | 1.8 µs | 7.5 µs |
| Clock VVR high-impulse duration t _{VVR} | 2 t _{CLK} | 7.5 µs | 30 µs |
| Clock VDR high-impulse duration t _{VDR} | 28 t _{CLK} | 200 µs | 400 μs |
| Clock VSH high-impulse duration t _{VSH} | 1 t _{CLK} | 3.5 µs | 15 µs |

Maximum Settling Time at output t_{out} is 1 μ second

¹All values for VDD = 5 V, VD2 = 2.5V

Clock Diagram

Pixel 1 is nearest pin 1 of the device.

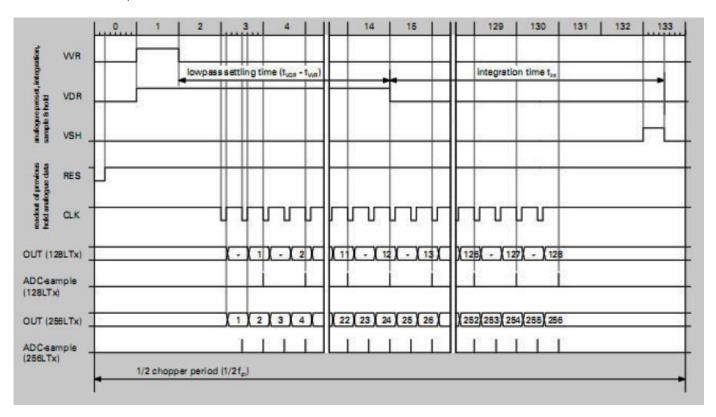

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com

 $^{^{2}}t_{Ch low} = t_{Ch high}$



Filters Available

| Part Number | PY0312 | PY0716 | PY0725 | PY0739 | PY1500 |
|--|--------------------------|-------------------------------|-----------|------------------------|------------------------|
| Filter Material | AR- Germanium | Silicon | No filter | LVF | LVF |
| Filter type | Antireflection coated GE | Antireflection coated Silicon | - | Linear Variable filter | Linear Variable Filter |
| Transmission wavelength (µm) | • | - | All | 5.5 to 11 (CWL 2%) | 2.5 to 5 (CWL 2%) |
| Transmission wavenumbers (cm ⁻¹) | - | - | All | 1818 to 909 | 4000 to 2000 |

Order Information

Please quote PY-LA-S-255 and your desired customizations of this product. Contact: sales@pyreos.com

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com.