## **Product Specification**

# Press-fit Cage for Small Form-factor Pluggable (SFP) Transceiver

# V23838-S5-N1 V23838-S5-N1-BB

#### **PRODUCT FEATURES**

- 3D foot design for improved press-fit retention and contact to host board holes
- One-piece, stainless steel construction
- Low emission design via fold-back spring fingers – no openings for radiation to pass through
- Enhanced transceiver kick-out springs
- Simple and fast installation/removal
- Host board holes not damaged when cage is removed
- Heat transfer windows on all SFP cage surfaces
- Supports MSA compliant host board layouts and transceiver designs





#### **PRODUCT SELECTION**

Part Number	Description
V23838-S5-N1	For single-sided mounting
V23838-S5-N1-BB	For double-sided "belly to belly" mounting (see <b>Figure 3</b> )

#### **Description**

Finisar is offering its cage for Small Form-factor Pluggable (SFP) transceivers with one of the most rigid mechanical designs available on the market. The cage is designed for press fit applications in order to reduce high volume manufacturing effort. Externally bent bezel contact springs and one-piece construction enhance EMI performance.

### **Application Notes**

- Testing of rear connector may take place before SFP Cage is installed onto host board
- SFP cage mounting holes should be plated with HASL, gold, or immersion silver finish per MSA dimensional recommendations
- For double-sided mounting, host board thickness is .118 in [3.0 mm] minimum per the MSA. For belly-to-belly applications, three mounting feet are removed to avoid interference (V23838-S5-N1-BB)
- Supports any single sided, belly to belly, or offset belly to belly configuration with a minimum pitch of 16.25 mm
- Installation of the SFP cage should be done with a solid metal block across the top surface of the cage. Block dimensions to be controlled by customer
- Removal of the cage should be done with an internal solid metal block
- The Finisar SFP cage does not cause any damage when carefully removed; the outside profile of the 3D feet is smooth and will not destroy pre-plated host board mounting holes
- Trapped fluids from washing process must be dried to prevent corrosion beneath the SFP cage
- Cage retention depends on finished hole size and plating thickness

## **SFP Cage Host Board Mechanical Layout**

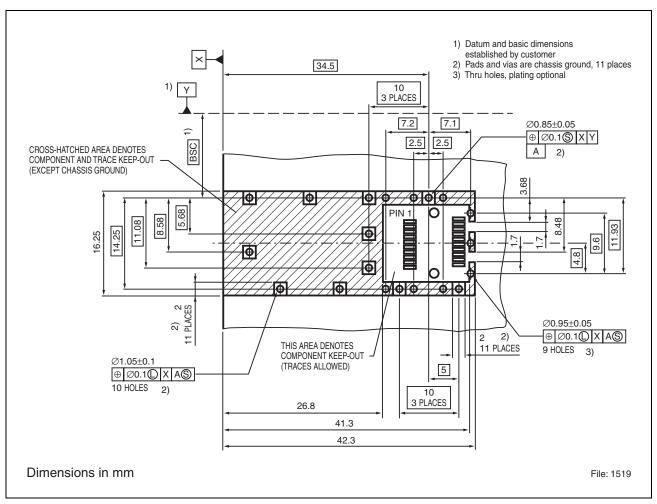


Figure 1 Single-sided Host Board Layout

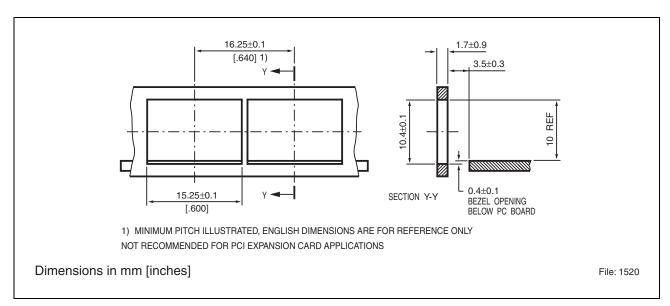


Figure 2 Recommended Bezel Design

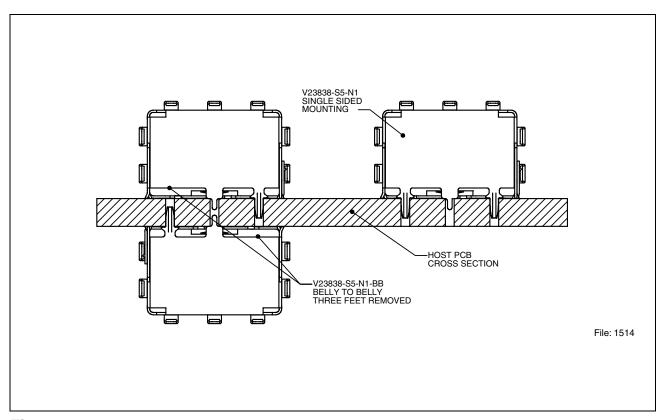


Figure 3

# **Single-sided Application**

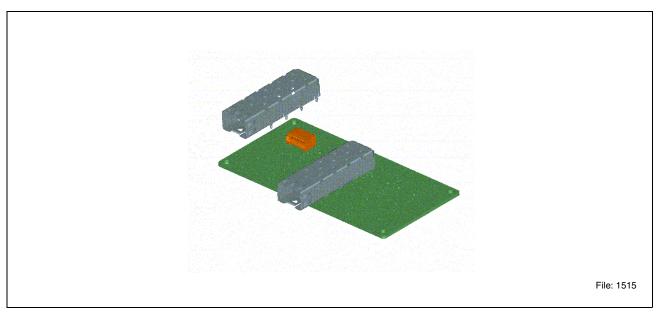


Figure 4

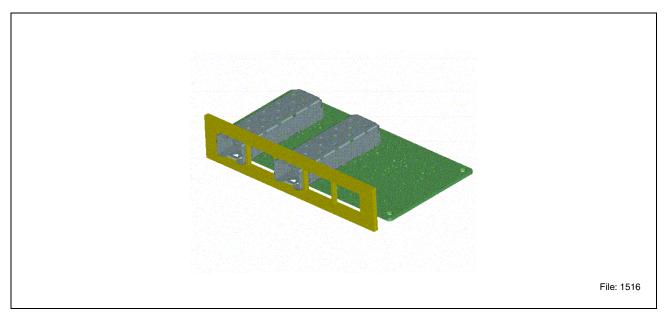


Figure 5

# **Belly to Belly Application**

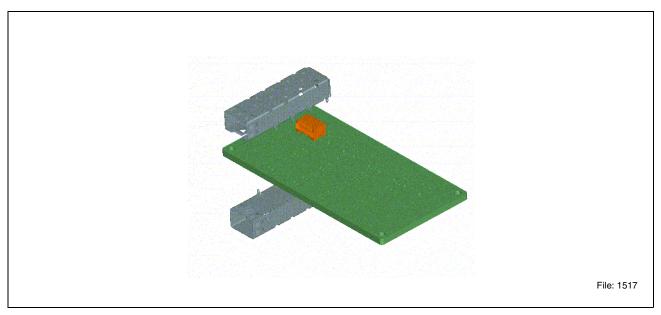


Figure 6

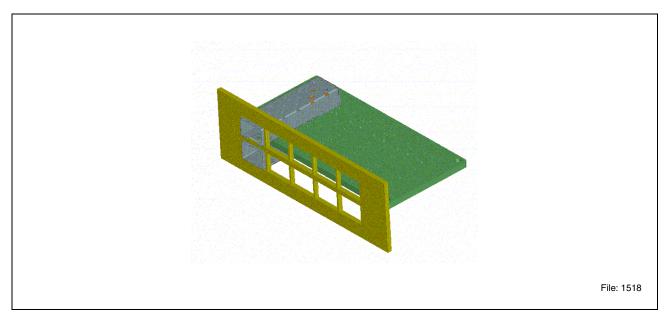


Figure 7

# **Package Outlines**

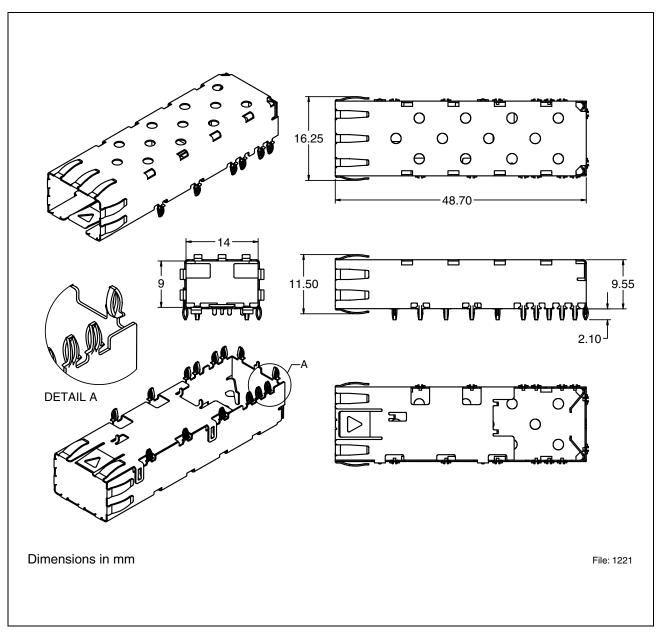


Figure 8 V23838-S5-N1

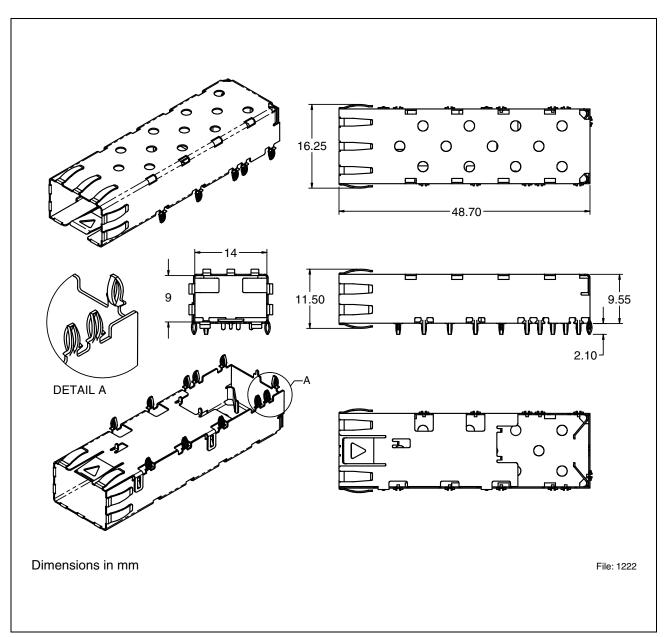


Figure 9 V23838-S5-N1-BB

Revision I	listory: August 07, 2003	Rev. D
Previous V	ersion: July 08, 2003	
Page	Subjects (major changes since last revision)	
	Company name has been changed Document's layout has been changed December 2004	

### **For More Information**

Finisar Corporation 1308 Moffett Park Drive Sunnyvale, CA 94089-1133 Tel. 1-408-548-1000 Fax 1-408-541-6138 sales@finisar.com

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Finisar:

V23838-S5-N1