



### Main

Range of product	Harmony XVP Universal
Product or component type	Indicator bank
Beacon or indicator bank unit type	Audible unit
Mounting diameter	1.97 in (50 mm)
Component name	XVPC
Noise level	55...85 dB at 1 m
[Us] rated supply voltage	120 V AC
Housing colour	Cream

### Complementary

Signalling type	Continuous or intermittent buzzer
Assembly style	Customer assembly, up to 5 units
Connections - terminals	Screw clamp terminals: 1 x 1.5 mm <sup>2</sup> with cable end
Marking	CE
[U <sub>i</sub> ] rated insulation voltage	250 V conforming to IEC 60947-1
Nominal voltage limit	0.85...1.1 U <sub>n</sub> conforming to IEC 60947-5-1
Current consumption	<= 15 mA
[U <sub>imp</sub> ] rated impulse withstand voltage	4 kV conforming to IEC 60947-1
Fundamental frequency	10 adjustable levels
CAD overall width	2.2 in (56 mm)
CAD overall height	5.08 in (129 mm)
CAD overall depth	2.2 in (56 mm)
Product weight	0.34 lb(US) (0.153 kg)

### Environment

product certifications	CULus
standards	EN/IEC 60947-5-1
protective treatment	TC
ambient air temperature for storage	-40...158 °F (-40...70 °C)
ambient air temperature for operation	-13...122 °F (-25...50 °C)
electrical shock protection class	Class I on support tube conforming to IEC 61140 Class II on base unit conforming to IEC 61140
IP degree of protection	IP43 conforming to IEC 60529


### Contractual warranty

Warranty period	18 months
-----------------	-----------

### Indicator Bank with Audible Unit

#### Dimensions


Below drawing shows an indicator bank with 1 audible stage and 1 illuminated stage. Select the number of stages according to the product characteristics in order to get **b** dimension.

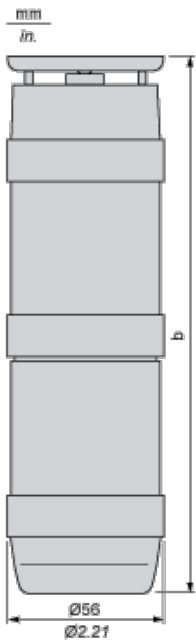

Number of illuminated units	+ Audible	b in mm	b in in.
0	+ 1	129	5.08
1	+ 1	194	7.64
2	+ 1	256	10.08
3	+ 1	318	12.52
4	+ 1	380	14.96

## Indicator Bank

### Adjustment of Audible Signal for Buzzer

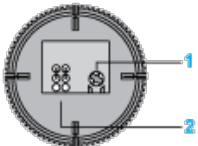

- 1 Volume adjustment potentiometer: 55...85 dB. Use either across headed or flat tipped screwdriver.
- 2 Adjustment of type of audible signal according to position of 2 links. Use flat-nose pliers.

10 configurations are possible:

Conf.	Position of links and type of audible signal
1	
2	
3	

4		
5		
6		
7		
8		
9		
10		