




PAGE 1/4 ISSUE **2017-03-01** SERIES **EZ-Lux™** PART NUMBER **F725 E00 100** 

## **EZ-Lux™ PLUG with boot**

EZ-Lux<sup>™</sup> was designed to be a compact, easy to mate, single channel solution for LuxCis<sup>®</sup> ARINC 801 contacts. The push-pull coupling mechanism simplifies the connection, especially in blind mating conditions.

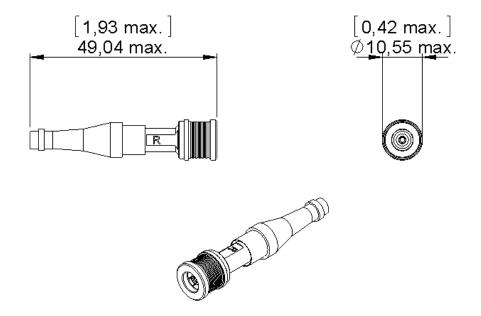

# Dimensions are in mm [inches] for information only

### **FEATURES:**

- Fast & easy to use with its push-pull locking system
- Single channel connector
- Small foot print
- Push pull coupling mechanism
- Compatible with LuxCis® Arinc 801, Multimode, Singlemode PC and APC optical contact
- Suitable for fiber optic cable diameter from 1.7mm to 2mm















| PAGE <b>2/4</b> | ISSUE <b>2017-03-01</b> | SERIES <b>EZ-Lux</b> ™ | PART NUMBER <b>F725 E00 100</b> |
|-----------------|-------------------------|------------------------|---------------------------------|
|                 |                         |                        |                                 |

## **CHARACTERISTICS**

# OPTICAL CHARACTERISTICS WITH LUXCIS® ARINC 801 CONTACT:

| Optical: |  | LuxCis® Arinc 801 contact     |                                |                                |
|----------|--|-------------------------------|--------------------------------|--------------------------------|
|          | •  | Multimode PC<br>850 / 1300 nm | Singlemode UPC<br>1310/1550 nm | Singlemode APC<br>1310/1550 nm |
|          | Insertion Loss (IL) Mean:<br>TIA/EIA-171 | 0.10 dB                       | 0.15 dB                        | 0.20 dB                        |
|          | Return Loss (RL):<br>TIA/EIA-455-107     | > 20 dB                       | > 50 dB                        | > 60 dB                        |

## **CHARACTERISTICS:**

## **Qualification per Arinc 801 standard:**

| Mechanical: | Endurance :<br>TIA/EIA 455-21A |                        |
|-------------|--------------------------------|------------------------|
|             | Cable retention : EN2591-610   | 68 N (cable dependent) |

| <b>Environmental:</b> | Temperature range :          | -55 °C / +125 °C (cable dependent) |
|-----------------------|------------------------------|------------------------------------|
|                       | Sealing :<br>TIA/EIA 455-15A | Altitude immersion 75000 feet      |
|                       | Salt spray :                 | 96 h                               |

| Material: | Disconnect nut, outer contact : | Brass. Plating: BBR 2µm  |
|-----------|---------------------------------|--------------------------|
|           | Sleeve:                         | Zirconia                 |
|           | Contact retention clip:         | Beryllium copper         |
|           | O-ring :                        | Fluorisilicone elastomer |
|           | Boot :                          | Fluorisilicone elastomer |
|           | Spring:                         | Stainless steel          |
|           | Other parts :                   | Brass. Plating: Ni 2µm   |
|           | Protective caps:                | Plastic and silicon      |

Weight: Plug without LuxCis contact : 7 g approx. (W/O cap)

<sup>\*</sup> EZ-Lux<sup>™</sup> has passed additional testing which demonstrates its suitability for 1,000 mating cycles.





PAGE 3/4 ISSUE 2017-03-01 SERIES EZ-Lux™ PART NUMBER **F725 E00 100** 

## **INSERTION / EXTRACTION of LUXCIS® ARINC 801 CONTACT**

### Required material:

| Radiall PN | Description  | Picture |
|------------|--|---------|
| 282 515    | Size 16 (MIL-PRF-81969 / 14-03), Plastic insertion and extraction tool |         |

### **Insertion Process:**

| Step | Description   | Pictures                                 |
|------|---|--|
| 1    | Manually slide the sealing boot onto the cable.  Leave about 10 cm between the rear of the contact and the boot.  |  |
| 2    | Engage the LuxCis® Arinc 801 contact mounted onto its patchcord into the blue side of the insertion tool 282 515.  Slide the tool down the cable until the tip of the tool butts against the contact's retention shoulder.  | 10 10 10 10 10 10 10 10 10 10 10 10 10 1 |
| 3    | Make sure the <b>flat</b> surface of the plug rear and the contact <b>key</b> are aligned before insertion.  Introduce the contact into the connector cavity, pushing the tool axially, until the contact snaps into position.  Remove the insertion tool and ensure that contact is firmly locked by gently pulling the patchcord. | Flat                                     |
| 4    | When the LuxCis® Arinc 801 contact is properly inserted and firmly locked, slide the sealing boot onto the body.  |  |

#### **Extraction Process:**

Manually slide back the sealing boot.

Use the white side of the tool (282 515) to remove the LuxCis® Arinc 801 contact.





PAGE 4/4 ISSUE **2017-03-01** SERIES **EZ-Lux™** PART NUMBER **F725 E00 100** 

## PLUG AND RECEPTACLE COUPLING

#### Connection:

| Step | Description   | Pictures |
|------|---|----------|
| 1    | Hold the plug by its body.  | Key      |
| 2    | Make sure the flat surface of the plug rear is aligned with the receptacle key. |          |
| 3    | Push forward to mate. The connector snaps on.                                   | Flat     |

#### Disconnection:

| Step | Description  | Pictures   |
|------|--|------------|
| 1    | Pull back on the disconnect nut.                                 | Disconnect |
| 2    | For high density panel, use the tool R282.868.230 to disconnect. |            |